


CORRUPTED MOUND

ASSEMBLY INSTRUCTIONS

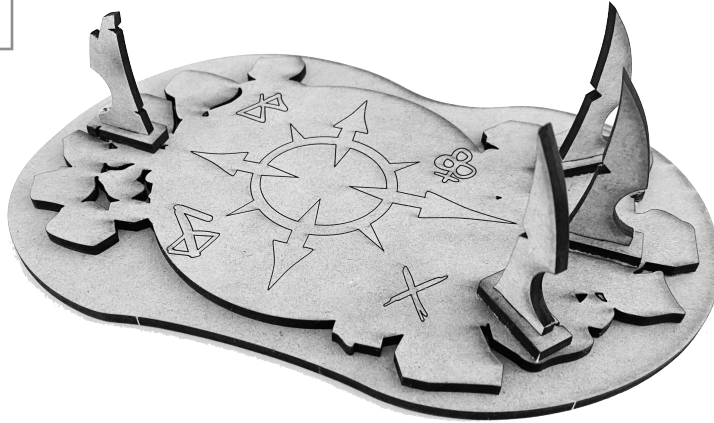

Tips:
Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue

