

2016+ Toyota Tacoma Compressor Bracket Installation Instructions

1. Relocate factory bracket with horn (A) back towards the firewall to the nearest 6mm bolt hole (B). Bend the J hook tab on the bracket straight.



A.

B.

C.


2. Place the first smaller Hefty Fabworks bracket into the side of the fender using two supplied 6mm bolts (C). Leave bolts slightly loose.



3. Install compressor onto larger Hefty Fabworks bracket using supplied hardware from compressor manufacturer.

4. Drop bracket with compressor onto the two 8mm studs on the bottom of the fender (D) and use provided nuts. Leave slightly loose.

D.

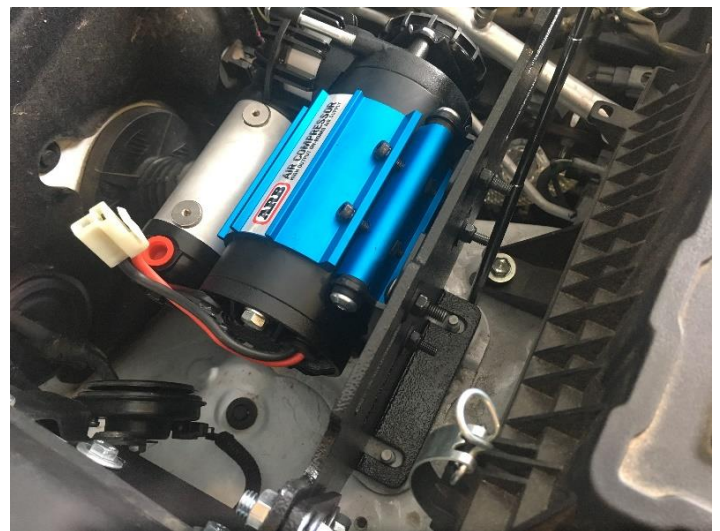

5. Run the two 3/8" bolts through the Hefty Fabworks brackets to connect them. Leave bolts slightly loose.

6. First tighten the two 6mm bolts on the side of the fender, then tighten the two 8mm studs, then tighten the two 3/8" bolts.

7. Last, follow manufacturer's instructions for compressor installation.