




1. Remove the Free Standing Bath from the carton. Ensure that the Free Standing Bath does not come into contact with rough surfaces. Rough surfaces will scratch your Free Standing Bath. Always ensure that the Free Standing Bath is placed on cardboard or carpets during installation. Place the Free Standing Bath in position for installation.

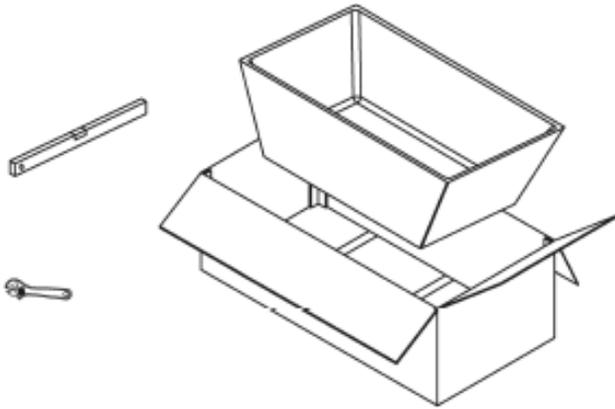


2. Adjust the self-levelling feet such that the Free Standing Bath is level. Only if the Free Standing Bath is level will all water drain to the waste outlet. Please ensure legs are adjusted in line with the base of bath. Check that bath sits flat.

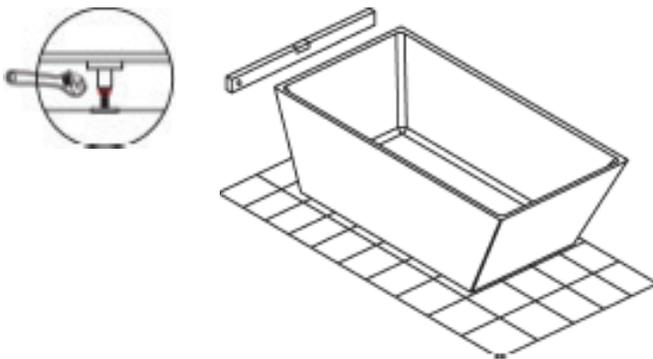

3. Connect the Free Standing Bath to the waste outlet.

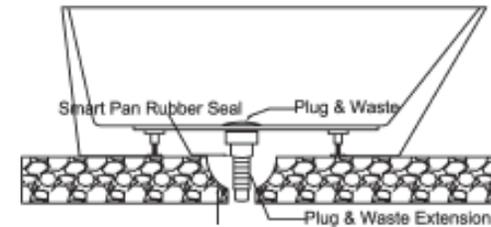


4. Finally you need to do a final test for drainage. Ensure that the thin masking plastic adhered to your bath during manufacture has been removed.
 - Fill the Free Standing Bath with water and check that ALL the water flows freely to the waste outlet
 - A small amount of water may pool owing to surface tension.

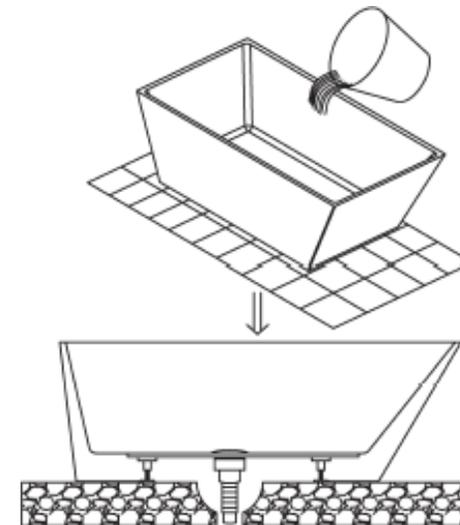


5. Apply a thick heed of silicone within bath outline allow to set 24 hours. This installation guide and the installation of waste connection should be only suitably by qualified person.


1. Retirez le bain autoportant du carton.
Assurez-vous que le bain autoportant n'entre pas en contact avec des surfaces rugueuses. Les surfaces rugueuses rayeront votre baignoire autoportante. Assurez-vous toujours que le bain autoportant est placé sur du carton ou des tapis pendant l'installation. Placez le bain autoportant en position pour l'installation.

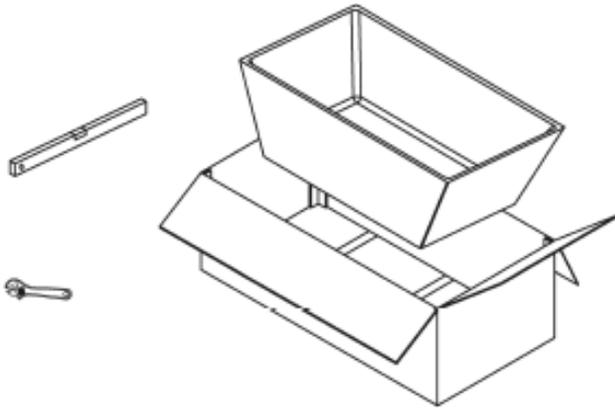


2. Réglez les pieds à mise à niveau automatique de sorte que le bain autoportant soit à niveau. Ce n'est que si le bain sur pied est à niveau que toute l'eau s'écoulera vers la sortie d'eau. Veuillez vous assurer que les pieds sont ajustés en ligne avec la base du bain. Vérifiez que le bain repose à plat.

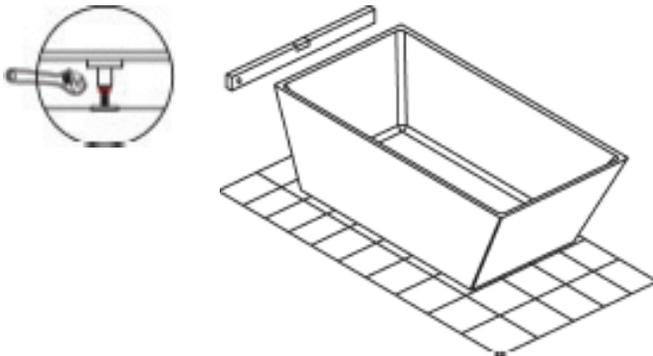

3. Connectez le bain autoportant à la sortie d'eau.

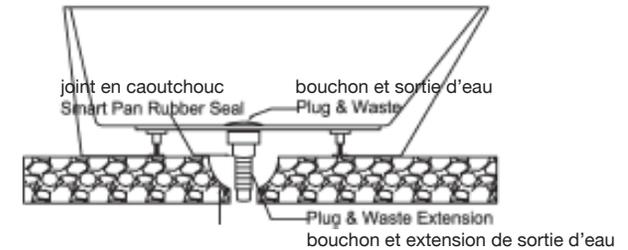

4. Enfin, vous devez faire un test final de drainage. Assurez-vous que le plastique de masquage mince qui a adhéré à votre bain pendant la fabrication a été retiré • Remplissez le bain autoportant d'eau et vérifiez que TOUTE l'eau coule librement vers la sortie d'eau • Une petite quantité d'eau peut s'accumuler en raison de la tension superficielle.

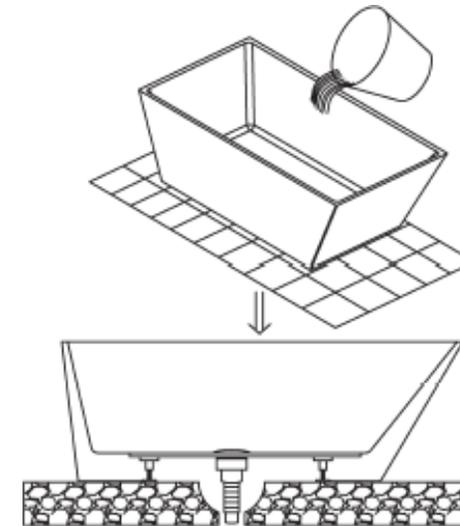

5. Appliquer une épaisse couche de silicone dans le contour du bain et laisser durcir 24 heures. Ce guide d'installation, l'installation de la sortie d'eau et la connexion ne doit être effectuée que par une personne qualifiée.