


BRACKETS

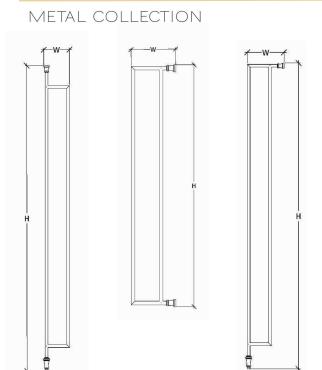

DUAL MOUNT

CEILING MOUNT


A. Mount collars to surface blocking or ceiling blocking and affix by screwing into place.

Place set screw in outer hole (facing set screw where it will be least visible. Slide end panel into collar.

C. Tighten set screw against the end panel to secure into place.

P. Rotate at the base to adjust foot. Size ranging ¼" shorter and ¾" longer than stated size.

STATED HEIGHT

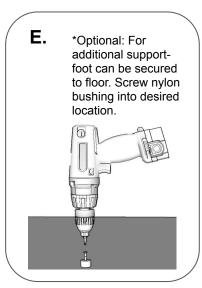

WALL MOUNT


*Optional: Foot sleeve fits over nylon bushing to secure to floor.






BRACKET ATTACHMENT PLATES


METAL COLLECTION

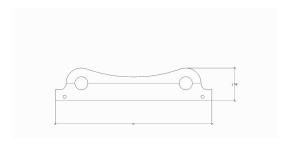


END PLATE

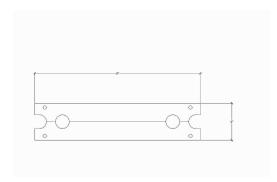


JOINING PLATE




UNDERMOUNT




RABBETED




MORTISED

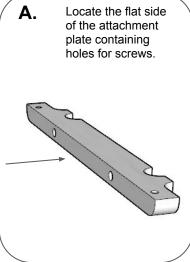


B. Place each half of the attachment plate independently around the metal bracket rod in the center spaces provided.



C. With each half of the attachment plate pressed together, tighten to secure plate.

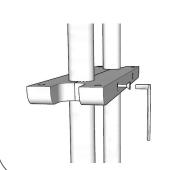

D. Drill screws through the bottom of the attachment plate into shelving or cabinets

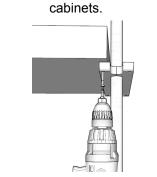

E. Note: Before mounting shelves or cabinets - be sure to have two level bracket attachments in place prior to placement of product.



F.