





# FITTINGS

METAL COLLECTION


## TALL WALL SHELVING

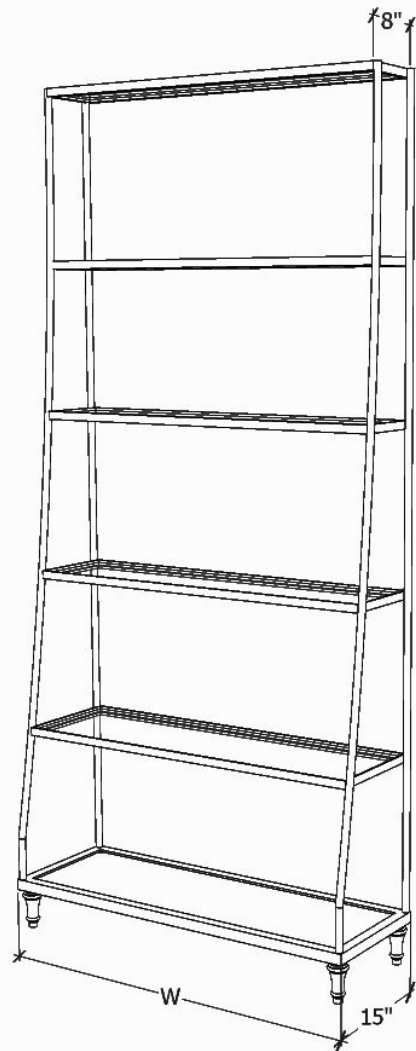


- A.** Choose desired wall surface. Locate studs or blocking.

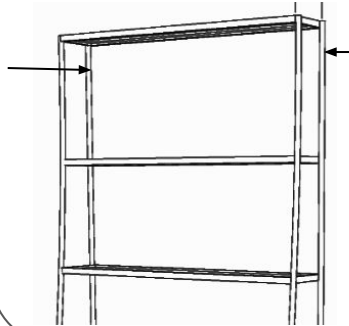


- B.** Drill holes through metal into suitable blocking and affix with provided screws at key points.

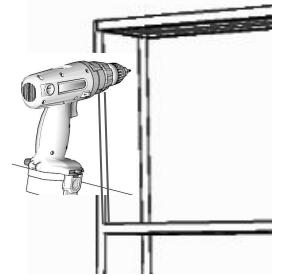


- C.** Rotate at the base to adjust foot. Size ranging  $\frac{1}{4}$ " shorter and  $\frac{3}{4}$ " longer than stated size.

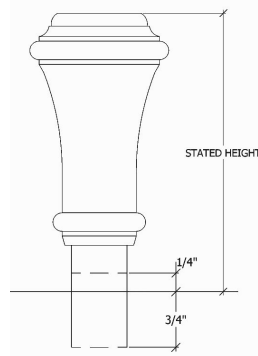


- D.** Optional: For additional support, foot can be secured to floor. Screw nylon bushing into desired location on floor.

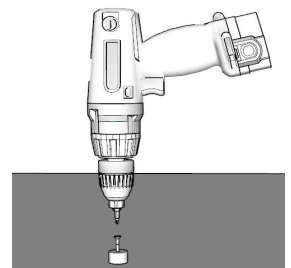

- E.** Optional: Foot sleeve fits over nylon bushing to secure to floor.

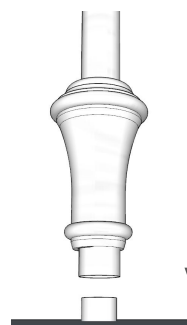

- F.**

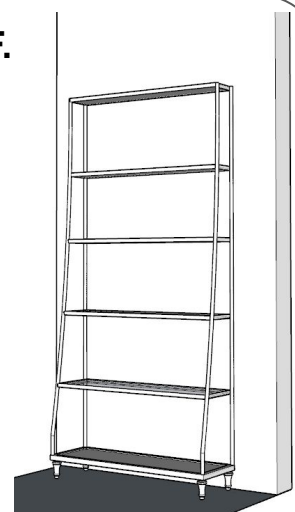

We recommend professional installation with all of our products to ensure that all the attachments and blocking considerations are met. Weight limitations and number of fasteners should be considered by the final user and professional installer. Product was tested to support 100 pounds with proper blocking. **Installers are responsible for any anti-tip fasteners or devices.** Certain products are not recommended for free-standing pieces.