



Easy Strip Curtain Door Install Instructions

- 1 Our Hanger Is Strip Door Universal Mount. Attach Hanger to flat to wall or up inside door Jamb
- 2 Cut Strips to Door length. Measure from top plate of hanger to floor and cut
- 3 Drill or Punch 3/8" In Holes 2" in on Center into the Strips
- 4 Slide Strips onto hanger Mounting Studs in the desired Overlap % Pattern
- 5 Put Strip Retainer Plate over Strips and secure with provided nuts


JAMB MOUNT

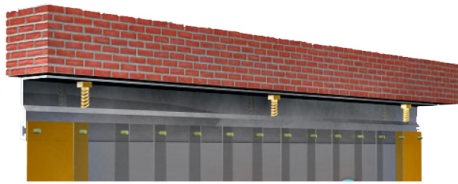


WALL MOUNT

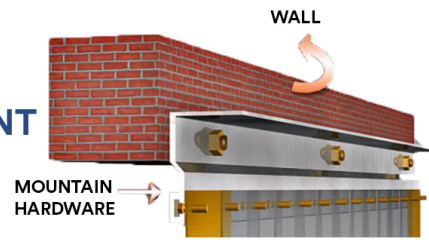

Door Width	Clear Smooth Strip Width	Number of Strips 50% Overlap	Number of Strips 67% Overlap	Number of Strips 100% Overlap
36 in / 3 ft,	6" Wide x .06 Thick		9	11
42 in / 3 1/2 ft,	6" Wide x .06 Thick		11	15
48 in / 4 ft,	6" Wide x .06 Thick		12	19
60 in / 5 ft,	6" Wide x .06 Thick		15	23
72 in / 6 ft,	6" Wide x .06 Thick		18	27
<hr/>				
36 in / 3 ft,	8" Wide x .08 Thick	7		8
42 in / 3 1/2 ft,	8" Wide x .08 Thick	8		11
48 in / 4 ft,	8" Wide x .08 Thick	9		14
60 in / 5 ft,	8" Wide x .08 Thick	11		17
72 in / 6 ft,	8" Wide x .08 Thick	13		20
84 in / 7 ft,	8" Wide x .08 Thick	16		23
96 in / 8 ft,	8" Wide x .08 Thick	19		26
108 in / 9 ft,	8" Wide x .08 Thick	21		29
120 in / 10 ft,	8" Wide x .08 Thick	23		31
<hr/>				
96 in / 8 ft,	12" Wide x .120 Thick		12	15
108 in / 9 ft,	12" Wide x .120 Thick		13	17
120 in / 10 ft,	12" Wide x .120 Thick		15	19
132 in / 11 ft,	12" Wide x .120 Thick		16	21
144 in / 12 ft,	12" Wide x .120 Thick		18	23
156 in / 13 ft,	12" Wide x .120 Thick		19	25
168 in / 14 ft,	12" Wide x .120 Thick		21	27
180 in / 15 ft,	12" Wide x .120 Thick		22	29
192 in / 16 ft,	12" Wide x .120 Thick		24	31
204 in / 17 ft,	12" Wide x .120 Thick		25	33
216 in / 18 ft,	12" Wide x .120 Thick		27	35
228 in / 19 ft,	12" Wide x .120 Thick		28	37
240 in / 20 ft,	12" Wide x .120 Thick		29	39

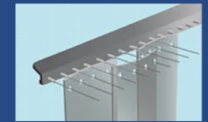

50% Overlap

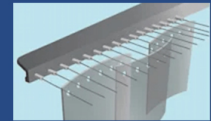

67% Overlap



100% Overlap



Support@industrialstripcurtain.com
888 970 5888
www.industrialstripcurtain.com