


- 中文-1-



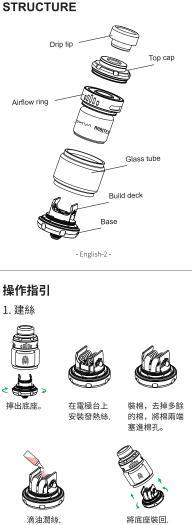

- 中文-3-



GUIDANCE

. BUILD COILS



Insert cotton.Remove the

excess cotton and put the

cotton ends into wicking port,



3. ADJUST THE

AIRFLOW

puff resistance.

2. FILLING

JUICE

Unscrew the filling cap. Fill with e-juice.

Put the filling cap back.



4. Do not use chemicals to clean the atomizer.

to prevent breakage.

5. This product contains glass, please place it carefully

Instagram:

@oxva.tech

⑤ ⊕ **⊘ C ∈ F© ❖** ∑