

List of items for Cooler Tracks installation


Tools


- Drill
- 1/16 inch diameter drill bit
- Philips screwdriver
- Painters tape (or any tape that won't leave residue)


Components

- Cooler Tracks (included)
- #6 x 5/8" screw (included)
- Adhesive cork strip (included)
- Can cooler (for spacing)

Installation Instructions

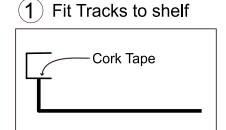

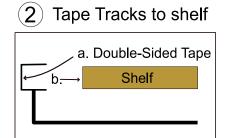

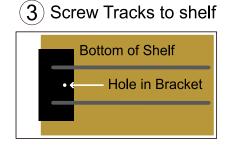

1. Fit Tracks to shelf. If needed to fit thinner shelves, attach adhesive cork strip (included) to inside of bracket.

Determine location for Tracks. The bars hang below the shelf. Remember to leave enough space on each side for the can coolers.

- **2. Tape Tracks to shelf.** Remove the liner from the double-sided tape (a) inside the front of the bracket and slide Tracks onto shelf (b), pressing to adhere.
- 3. Screw Tracks to shelf. Using a 1/16" diameter drill bit (not included), drill a 1/2" deep hole through the hole on the bottom of the bracket. Attach using #6 x 5/8" screw (included). Do Not Over Tighten.

Meliben, LLC Minneapolis, MN Support@meliben.com