



## 

## DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

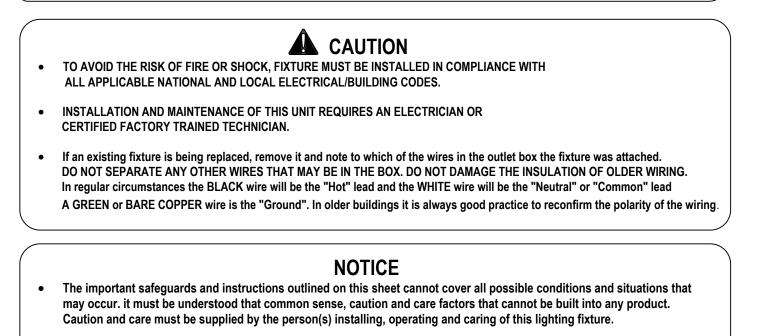

This fixture is designed to be mounted on a correctly installed standard round or octagon box or a through wiring box
with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied
should be used. directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

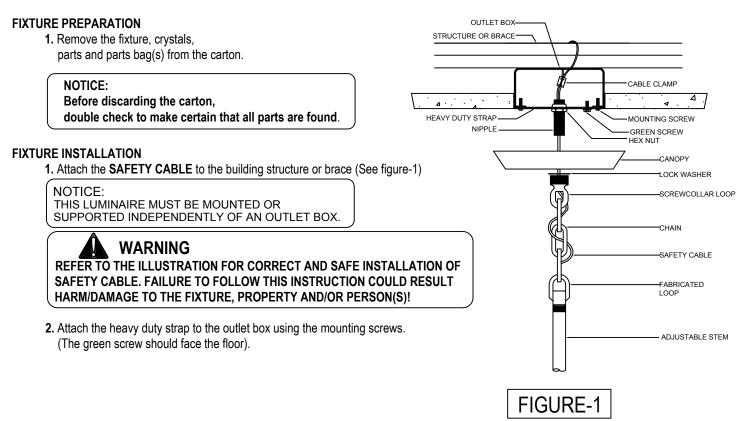

- 3. Remove the threaded ring from the screwcollar loop. Fully thread the screwcollar loop onto the nipple. Thread the hex nut onto the nipple and the nipple into the heavy duty strap. Place the canopy over the screwcollar and against the ceiling. Adjust the nipple so that 1/4" of threads on the screwcollar loop extend beyond the canopy. Tighten the hex nut against the heavy duty strap. Using the threaded ring, install the canopy.
- **4.** Assemble the stem to the fixture leads. Tape the end of the leads to a stiff wire (coat hanger) to aid in pulling them through the stem. Place the canopy onto the stem before assembling the top stem section.
- 5. Open the end links of the chain and attach the chain to the screwcollar loop. Hang the fixture on the chain at the desired height. Remove the excess chain close all links. Unscrew the threaded ring from the screwcollar loop. Allow the ring and canopy to slide down the chain to the top of the fixture.




The use of chain pliers for opening and closing chain is required. The use of tools other than the chain pliers may damage the chain link resulting in a failure which can cause harm to the fixture, property and/or person(s)!

- **6.** Cut off the excess ground and fixture wire 6" beyond the canopy. Strip 1/2" of insulation from the ends of the wire. Twist the wire stands together.
- 7. Fasten the ground wire to the green or bare copper wire in the outlet box or the green screw on the heavy duty strap.



Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

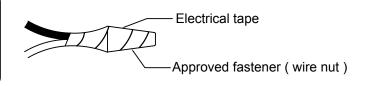

8. Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

## WARNING

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

- **9.** Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 8.
- 10. Slide the canopy and screwcollar ring up the chain and secure the canopy to the ceiling.
- **11.** Install the lamps (light bulbs). NOTE: This fixture is rated for 60 watts candelabra based type B, BA, C or CA lamps.



12. Install/place the glass as indicated on the third up to the last page of this instruction sheet.

## NOTICE:

If the fixture is being installed in a room with hard floor (tile, wood, etc.) place a blanket or carpet below the fixture before installing the crystal trimming.

13. Restore power to circuit at breaker or fuse box.

