
FJ-REB-

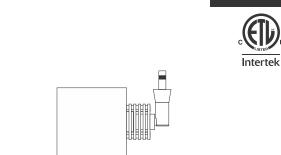

Installation Instructions for **Rebel IMPORTANT SAFETY INSTRUCTIONS** To reduce the risk of fire, electrical shock, exposure to excessive UV radiation, or injury to persons: - Use this fixture indoors only. - Do not look directly at the lamp while the fixture is on. - **RISK OF FIRE:** Use only the type of lamp and maximum wattage indicated in this instruction manual. - Never cover the halogen lamp with anything other than a lamp shield provided by PureEdge Lighting and never place flammable material close to the fixture. - Never turn the fixture on and off by connecting and disconnecting the halogen lamp. - Do not touch the fixture head, shade or lamp shield while the fixture is on. These surfaces may be **VERY HOT.** - Do not touch lamp at anytime. Use a soft cloth. Oil from skin may damage lamp. - It is normal for a new halogen lamp to produce minor - This product holds up to three accessories. smoke when first turned on.

- Do not operate the luminaire with a missing or damaged shield.
- Turn power off and allow to cool before replacing lamp.


Install the Lamp




IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- This product is not restricted to certain height installation. It is approved to be used at any height above the floor.

SAVE THESE INSTRUCTIONS!

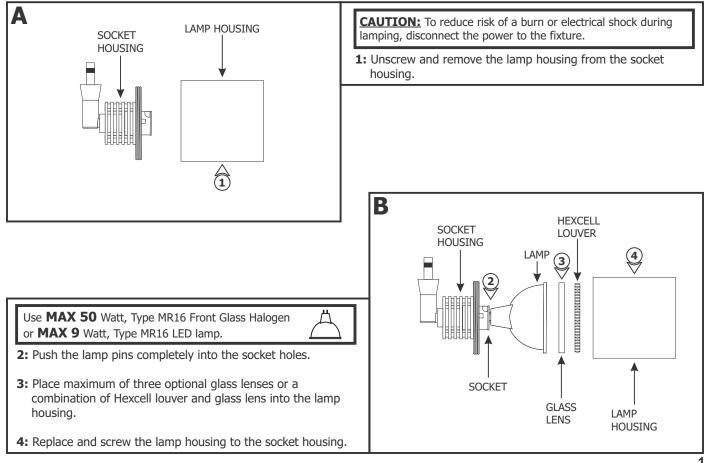


Install the Fixture to Monorail Connector

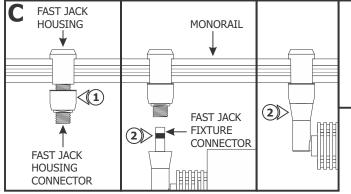

- Place the Fast Jack housing onto the Monorail and use fingers to tighten the Fast Jack housing connector to the Fast Jack housing. <u>Make sure that the Fast Jack housing</u> <u>connector is not cross threaded.</u>
- **2:** Use fingers to tighten the Fast Jack fixture connector into the Fast Jack housing connector.

Install the Fixture to Monorail 2 Circuit Connector

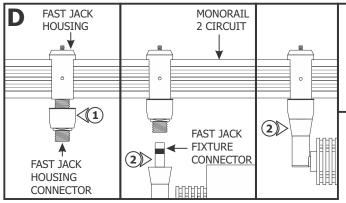


- **3:** To power the fixture from circuit #1, top and bottom (neutral) rails, tighten the M3 set screw on top of the housing with the 1.5mm Allen wrench. <u>Make sure this set</u> screw connection is very tight.
- 4: To power the fixture from circuit #2, middle and bottom (neutral) rails, remove the M3 set screw from top of the housing and tighten it into the side threaded hole with the 1.5mm Allen wrench. <u>Make sure this set screw</u> <u>connection is very tight.</u>

NOTE: To avoid shorting the system, do not use more than one set screw to select a circuit on the Monorail 2 Circuit connector.

NOTE: Do not load either circuit over the maximum system rating.

- 1: Place the Fast Jack housing onto the Monorail 2 Circuit and use finger to tighten the Fast Jack housing connector to the Fast Jack housing. <u>Make sure that the Fast Jack</u> <u>housing connector is not cross threaded.</u>
- **2:** Use fingers to tighten the Fast Jack fixture connector into the Fast Jack housing connector.

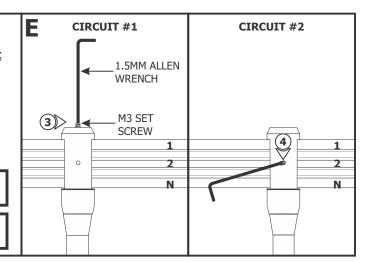

Install the Fixture to Fast Jack Single or Multiport Canopies

