

Wall Turn

700KWSO01_

1.6





GENERAL PRODUCT INFORMATION:




This product is suitable for indoor dry locations only.

This product should be used with Tech Lighting Kable Lite system only.

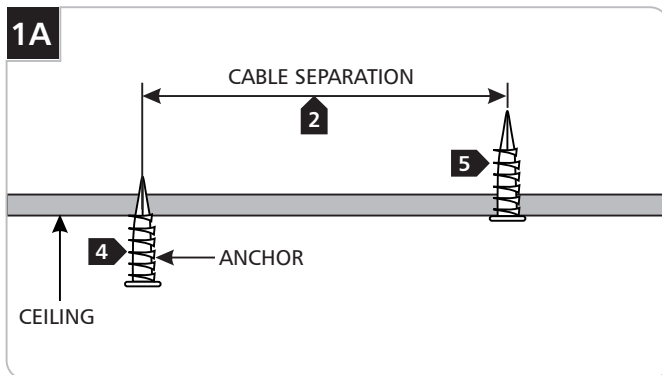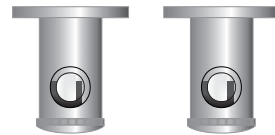


- 1 Determine the location of the standoff.
- 2 Determine the Kable Lite cable separation.
- 3 Mark the two Kable Lite cable separation points on the ceiling.
- 4 With a hammer tap the two anchors at the marked points up to the threaded portion into the ceiling.
- 5 Screw the anchors in the rest of the way with a Phillips screwdriver.

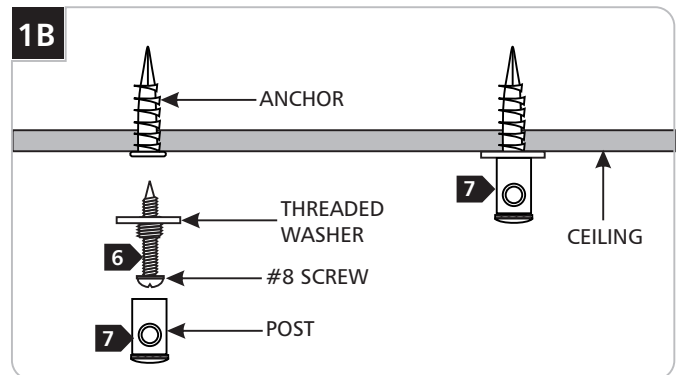

- 6 Place the #8 screws through the threaded washers. Screw the #8 screws into the anchors.
- 7 Screw the posts onto the threaded washers.

1C

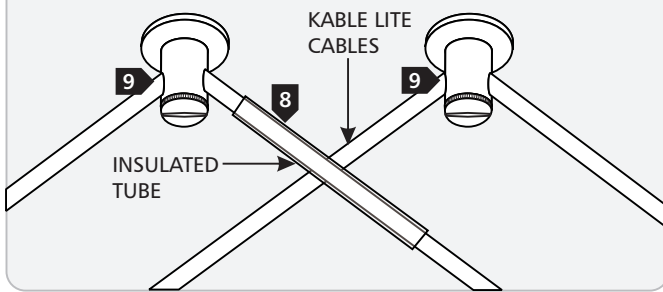

- 8 Use the insulated tube on one of the crossed Kable Lite cables to avoid electrical short. The insulated tube is provided with the package.
- 9 Feed the Kable Lite cables coming from one set of turnbuckles through the posts to the other set of turnbuckles.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077
847.410.4400

www.techlighting.com

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.
A Generation Brands Company