## **FreeJack Pendants**

# TECH LIGHTING


#### **PENDANTS-LOW VOLTAGE**

#### **GENERAL PRODUCT INFORMATION:**




This product is ETL listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.


This product is patented (U.S. PAT. 6,183,297).

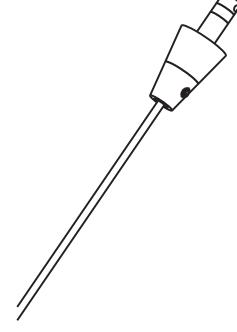


## Adjust The Fixture Height

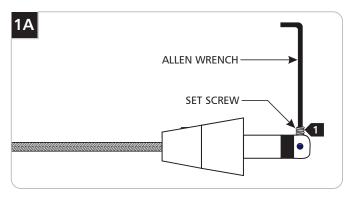


Back out (do not remove) the set screw on tip of the connector with the provided Allen wrench.

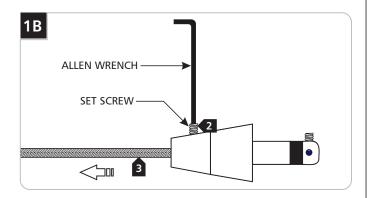


2 Back out (do not remove) the set screw on the conical connector with the provided Allen wrench.



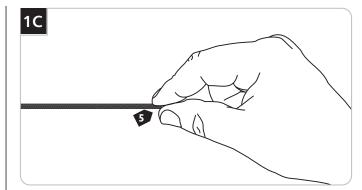


- 4 Cut the coaxial cable to the desired length.
- **5** Gently twist the end of the coaxial cable between thumb and forefinger.

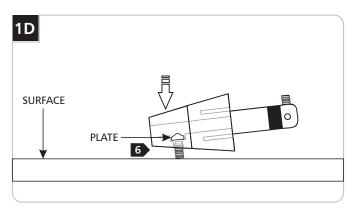


Tap the conical connector on a hard surface with the set screw facing down, so the plate inside drops into place.


700FJPENDANTS 1.0

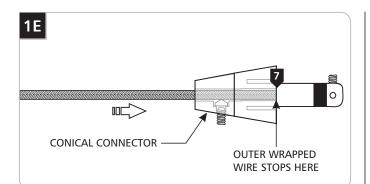

Feed and push the coaxial cable into the conical connector. The coaxial cable will come to a stop point after being inserted 3/4" into the conical connector.

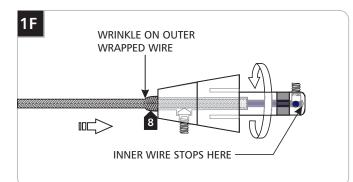


8 Keep pushing the coaxial cable into the connector while rotating the connector to ease feeding the inner wire into the tip of the connector. The outer wrapped wire will start wrinkling while being inserted another 1/2" into the connector.

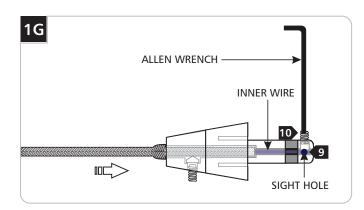


Dook into the sight hole on the top of the connector to make sure that the inner wire is contacting the end of the connector.

Hold the coaxial cable in place and tighten the set screw on tip of the connector with the provided Allen wrench. <u>Make sure this set screw connection is tight.</u>

### SAVE THESE INSTRUCTIONS!

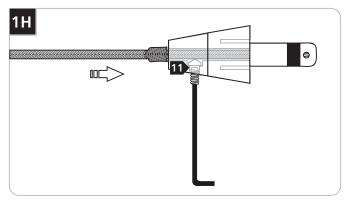


11 Firmly tighten the set screw on the conical connector.

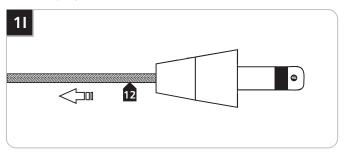

**12** Pull the coaxial cable toward the fixture to smooth the wrinkles.

## Install or Replace Lamp

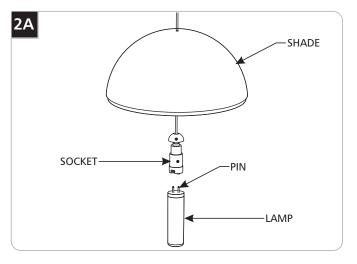

- If necessary, carefully raise the shade(s) to access the socket.
- 2 Remove old lamp by pulling pins out of socket.
- Install new lamp by completely inserting pins into socket. Refer to label on the socket for Max Wattage Information.
- Carefully lower the shade(s) until properly rested on socket.

## TECH LIGHTING

7400 Linder Ave, Skokie, IL 60077 847.410.4400

#### www.techlighting.com