


## ASSEMBLY INSTRUCTIONS

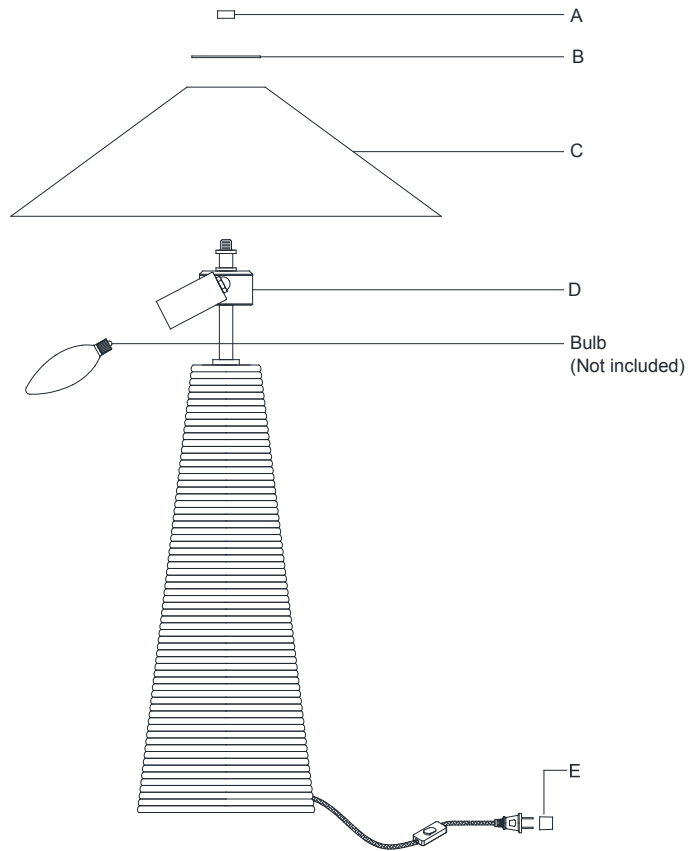

## Miramar Accent Lamp

Item # KW 3660

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

1. Carefully remove all parts from the box.
2. Attach the shade (C), metal plate (B) to the top of the fixture body (D) and secure with finial (A).
3. Insert bulbs (not included) into the sockets.
4. Remove protective plug cover (E) from the plug.
5. Plug into a proper electrical outlet and test the fixture.
6. Installation is complete.

\*\*\*Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

