
Milan 13 Bath

700BCMLN13 1.0

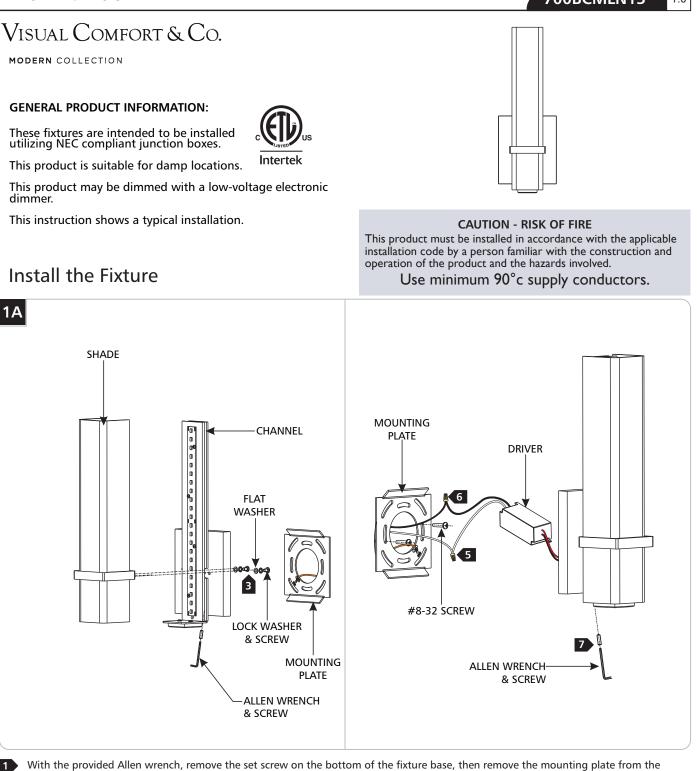

2 Install the mounting plate to the junction box with the two #8-32 screws provided.

3 Slide the shade through the channel and secure to the fixture using the flat washers, lock washers, and screws as shown.

4 Connect the fixture to a suitable ground in accordance with local electrical codes.

5 Connect the white driver wire to the neutral power line.

6 Connect the black driver wire to the hot power line.

fixture base

7

Properly place the driver, all wires. and wire nut connections into the junction box, then mount the fixture back onto the mounting plate and reinstall the set screw (reversal of step 1A).

SAVE THESE INSTRUCTIONS!

VISUAL COMFORT & CO.

7400 Linder Ave, Skokie, IL 160077 800.969.3347

www.visualcomfort.com

©2023 Visual Comfort & Co.. All rights reserved. The Visual Comfort & Co. logo is a registered trademark of Visual Comfort & Co. Visual Comfort & Co. reserves the right to change specifications for product improvements without notification