

## Draper Pendant

**KSP1133, KSP1141** | 1.0

# VISUAL COMFORT & Co.

## STUDIO COLLECTION

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.



This instruction shows a typical installation.

### CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

### SAVE THESE INSTRUCTIONS!

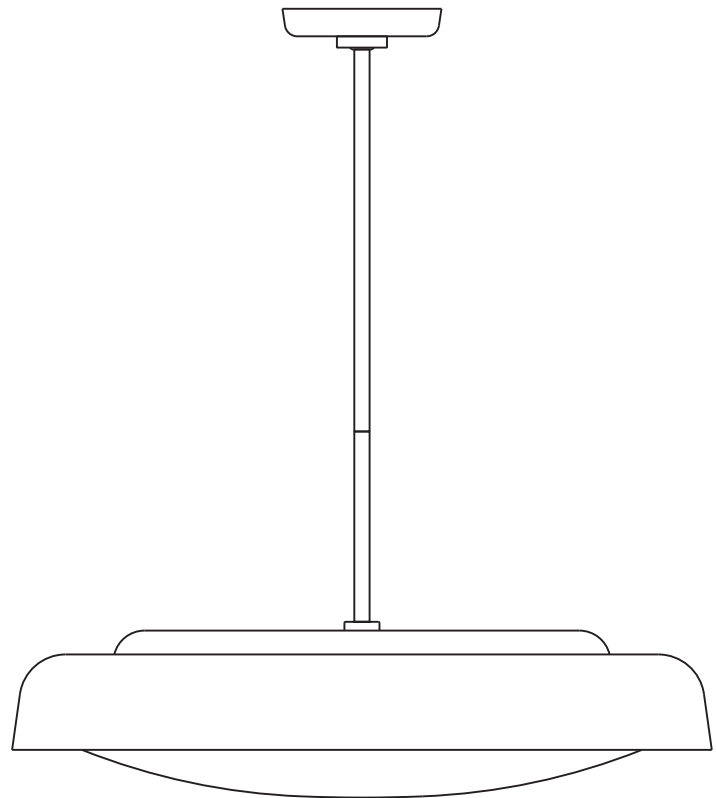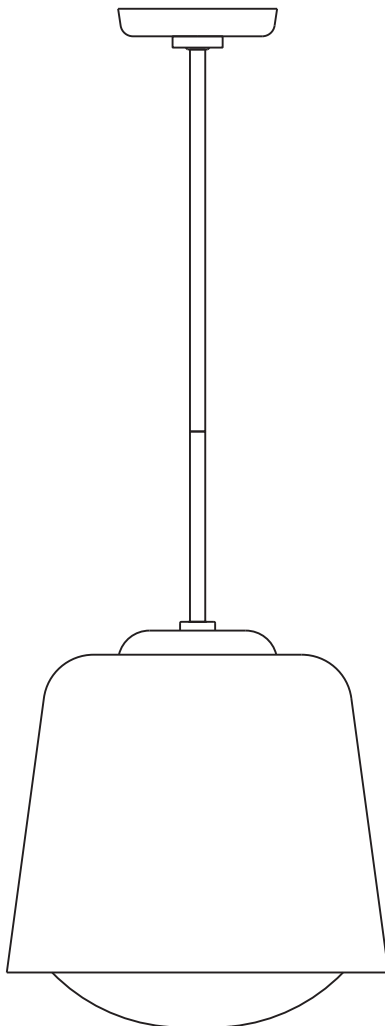

# Install the Fixture

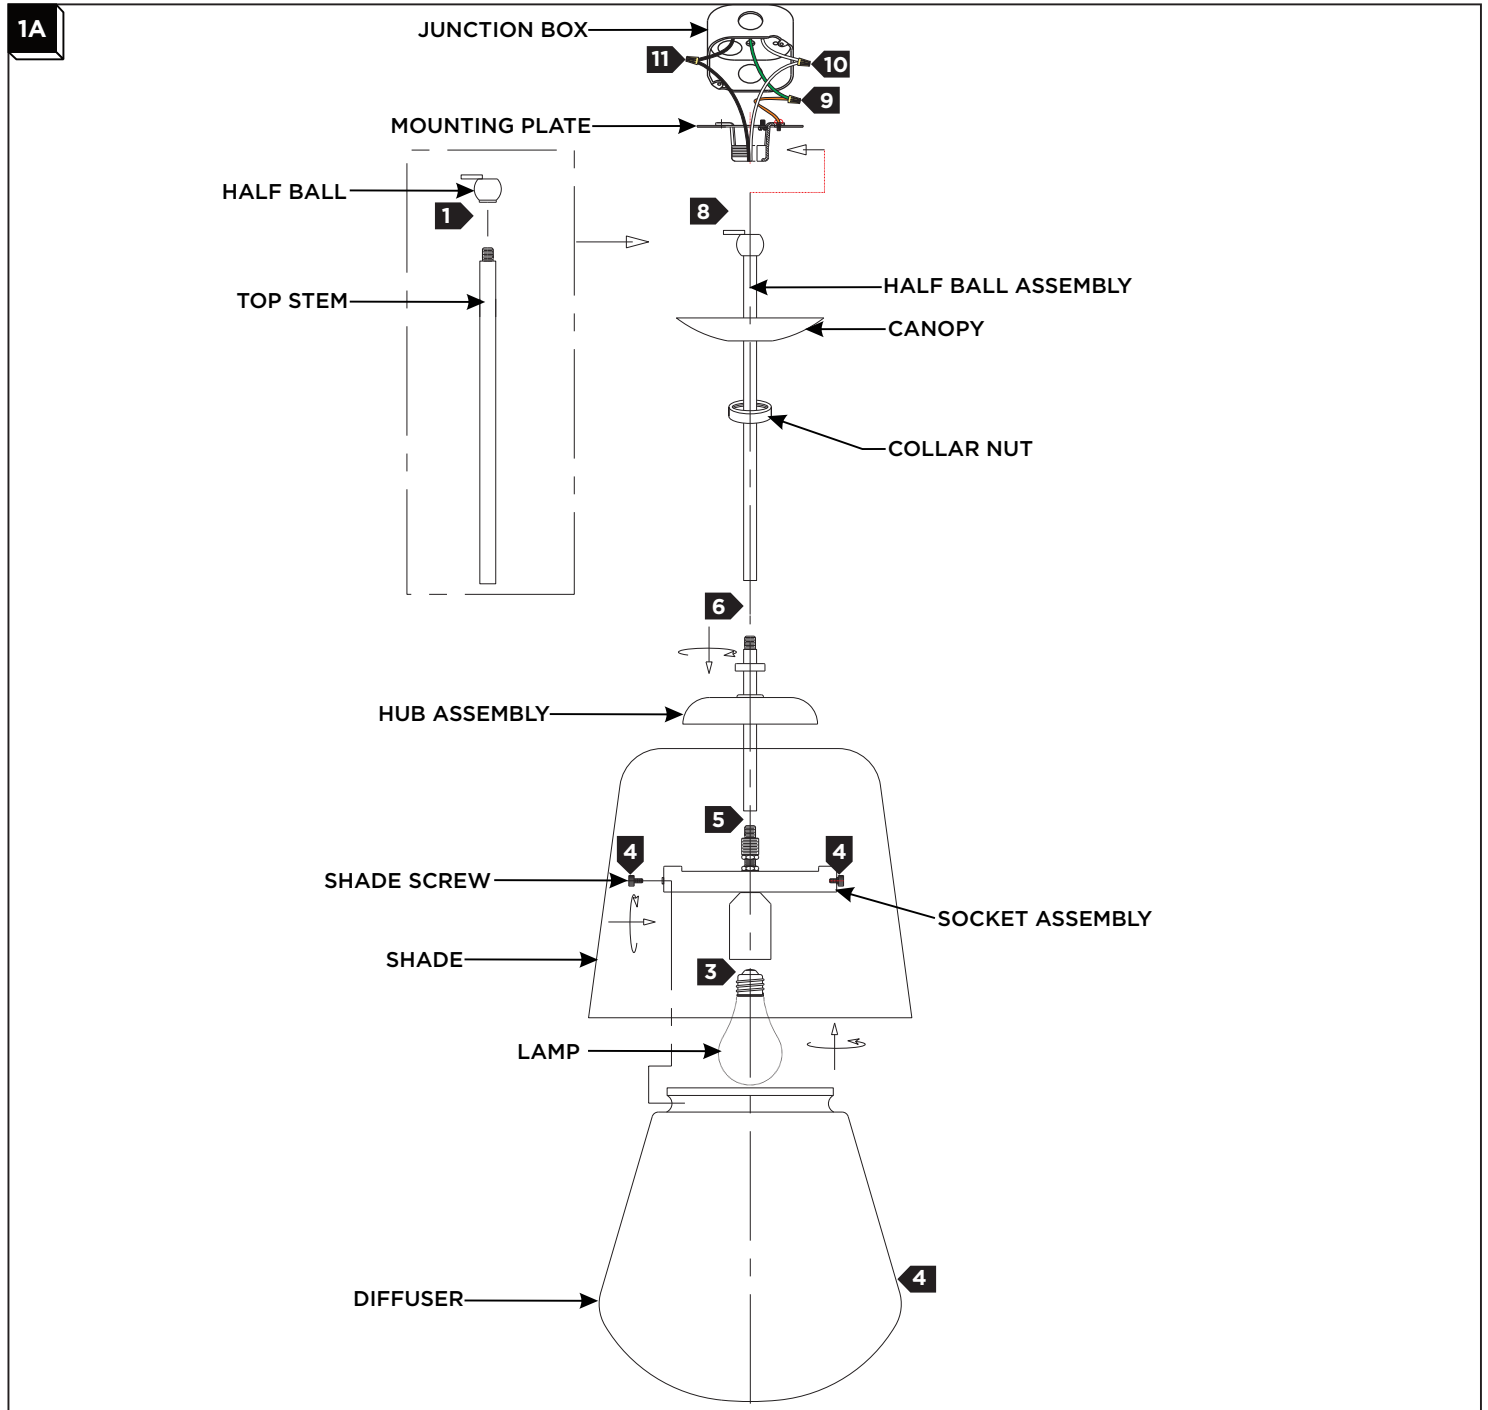

- 1** Screw the half ball to the top stem.
- 2** Determine the wanted height or look of the fixture with the stems, then assemble them by screwing them together.
- 3** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information
- 4** Install the diffuser to the socket assembly and secure it in place using the shade screws.
- 5** Feed the fixture wires through the shade and hub assembly, then lower the shade onto the socket assembly and screw the hub assembly onto the socket assembly.
- 6** Feed the fixture wires through the stem assembly, then screw the stem assembly onto the hub assembly.
- 7** Feed the fixture wires through the collar nut, canopy, and the half ball assembly then screw the halfball assembly onto the stem assembly.
- 8** Align and secure the mounting plate to the junction box, then slide the half ball assembly onto the mounting plate.
- 9** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 10** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 11** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 12** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the mounting plate.