

Hollis Pendant**TO1021****1.0****VISUAL COMFORT & Co.****STUDIO COLLECTION****GENERAL PRODUCT INFORMATION:**

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

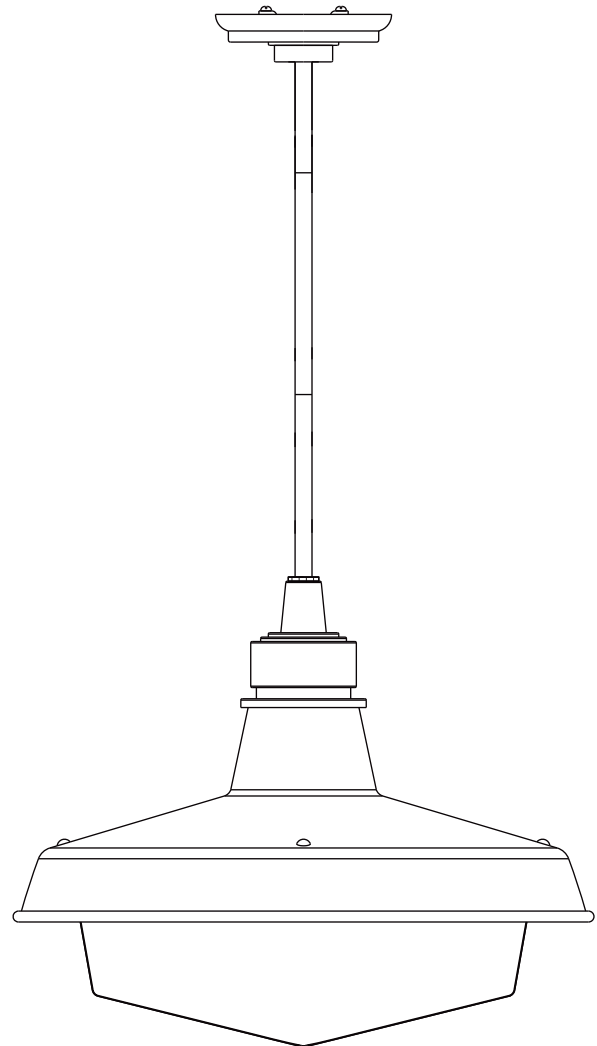
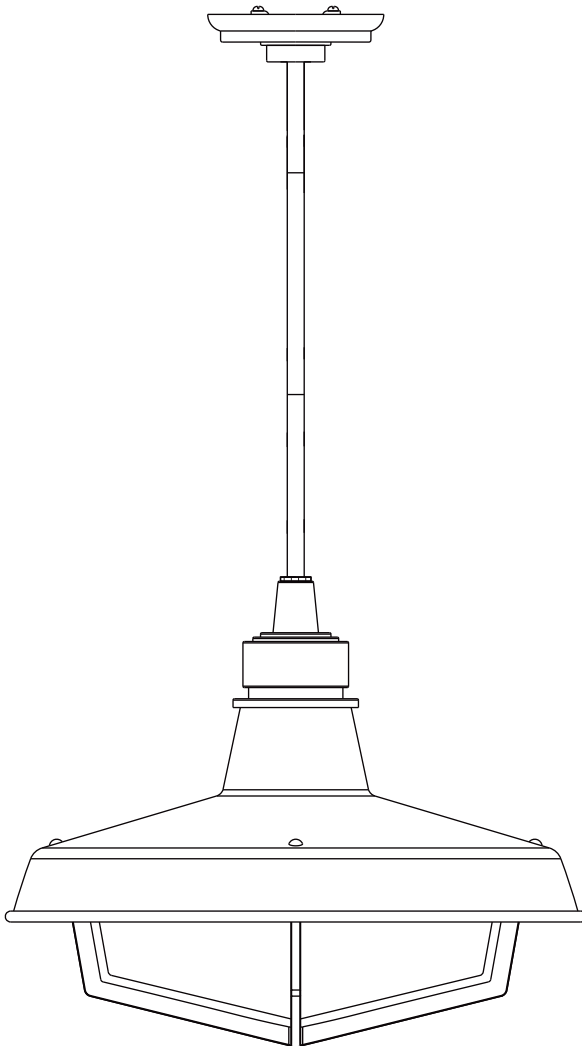
Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.

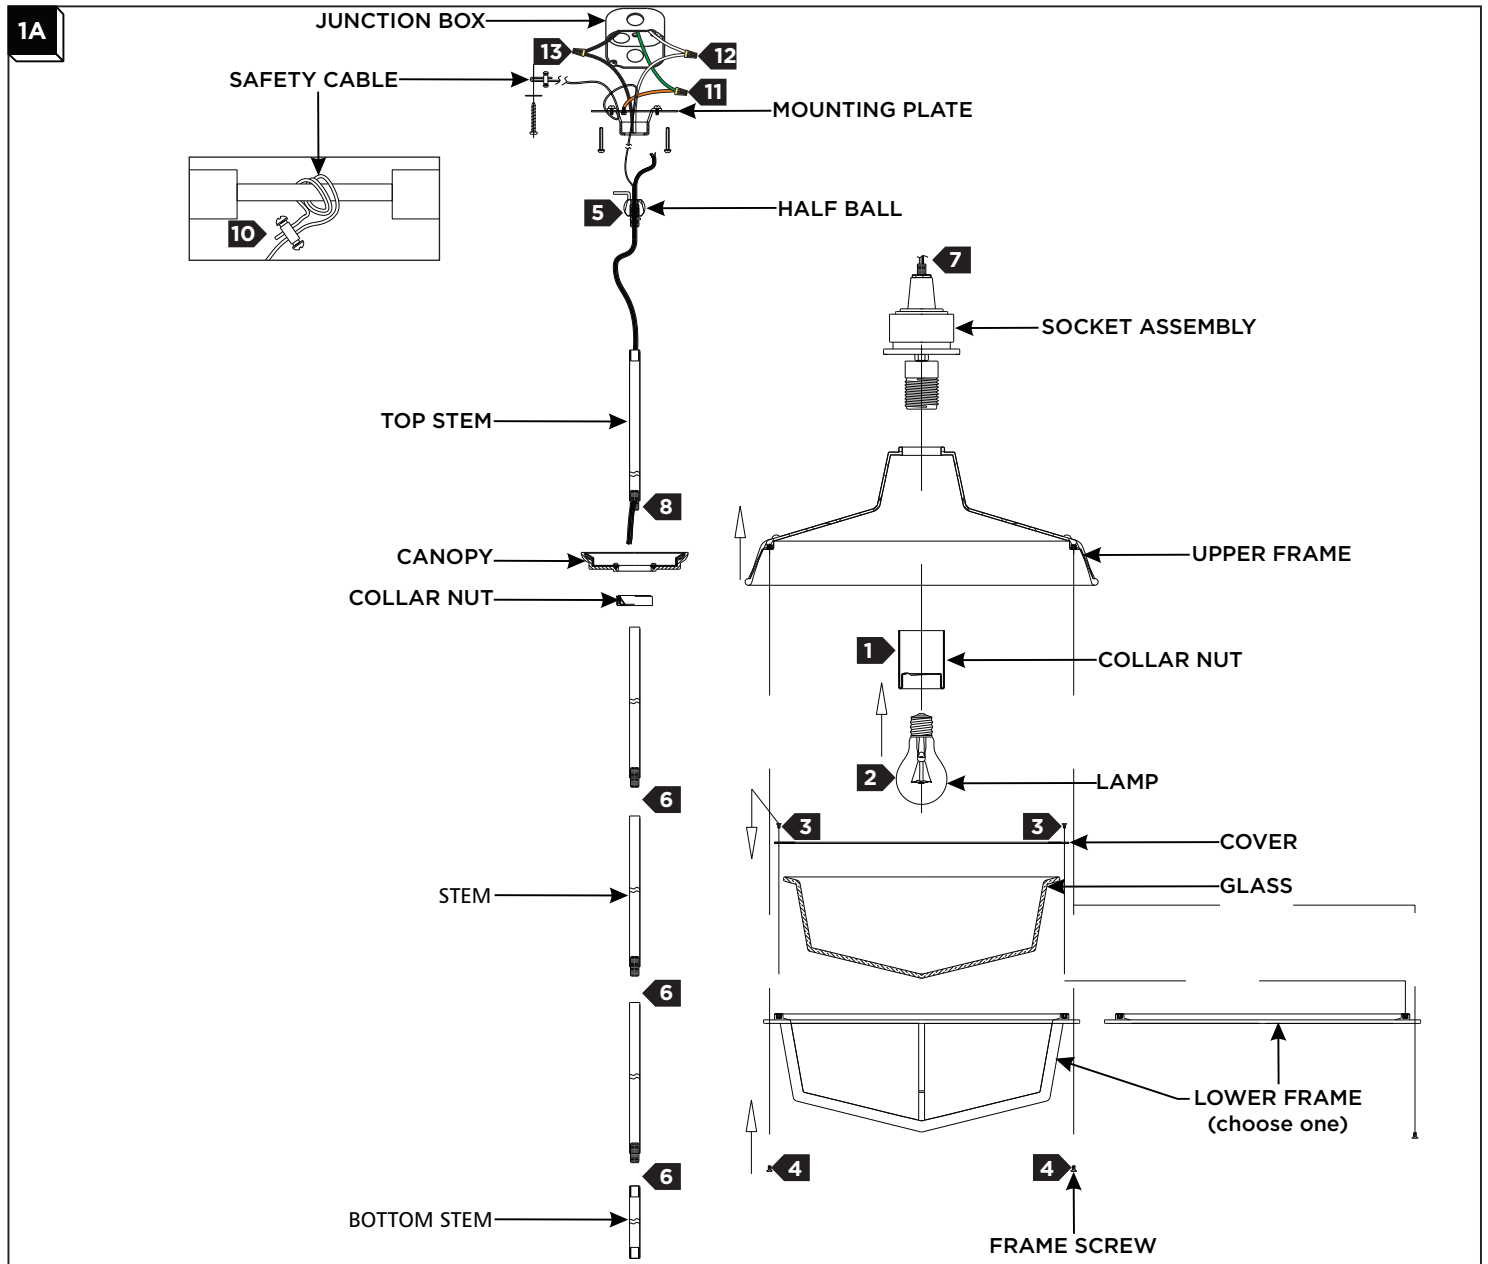
CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

Install the Fixture



- 1** Place the upper frame onto the socket and secure it in place by screwing the collar nut onto the socket.
- 2** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 3** Insert the glass into the lower frame (2 options included as shown), then install the cover to the lower frame using the frame screws to secure the glass in place.
- 4** Install the lower frame to the upper frame using the frame screws.
- 5** Screw the half ball to the top stem.
- 6** Determine the wanted height or look of the fixture with the decorative stems, then assemble them by screwing them together. Make sure the bottom stem is last in the stem assembly.
- 7** Feed the fixture wires through the stem assembly, then screw the stem assembly on to the top of the fixture
- 8** Feed the fixture wires through the collar nut, canopy, and the half ball assembly then screw it onto the stem assembly.
- 9** Align and secure the mounting plate to the junction box, then slide the half ball assembly onto the mounting plate.
- 10** Install the safety cable in accordance with local building codes.
- 11** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 12** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 13** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 14** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the mounting plate.
- 15** For outdoor applications, apply Loctite to the threads of the stems at installation to reduce the risk of wind rotating the fixture.