

Hyde Pendant

DJP1021, DJP1031, DJP1041 | 1.0

VISUAL COMFORT & Co.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

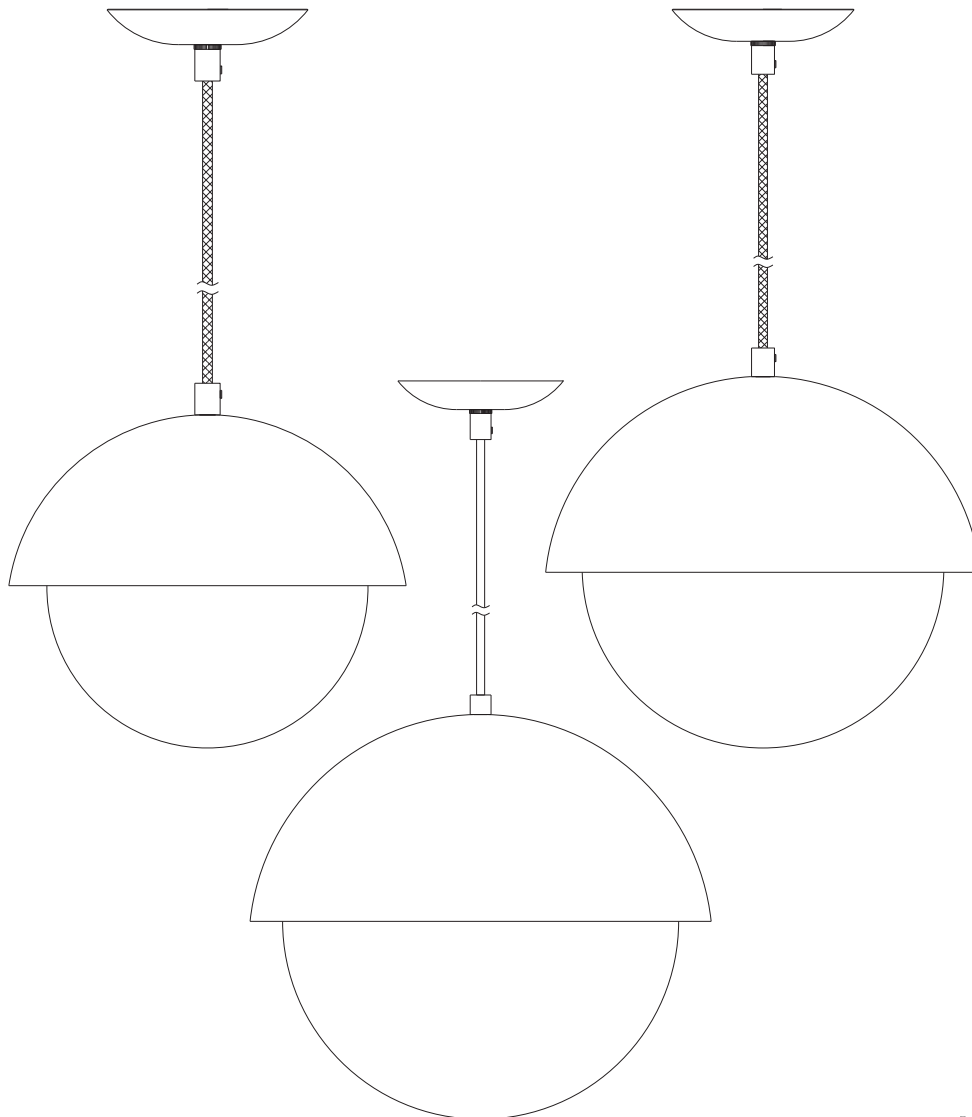

Install the Fixture

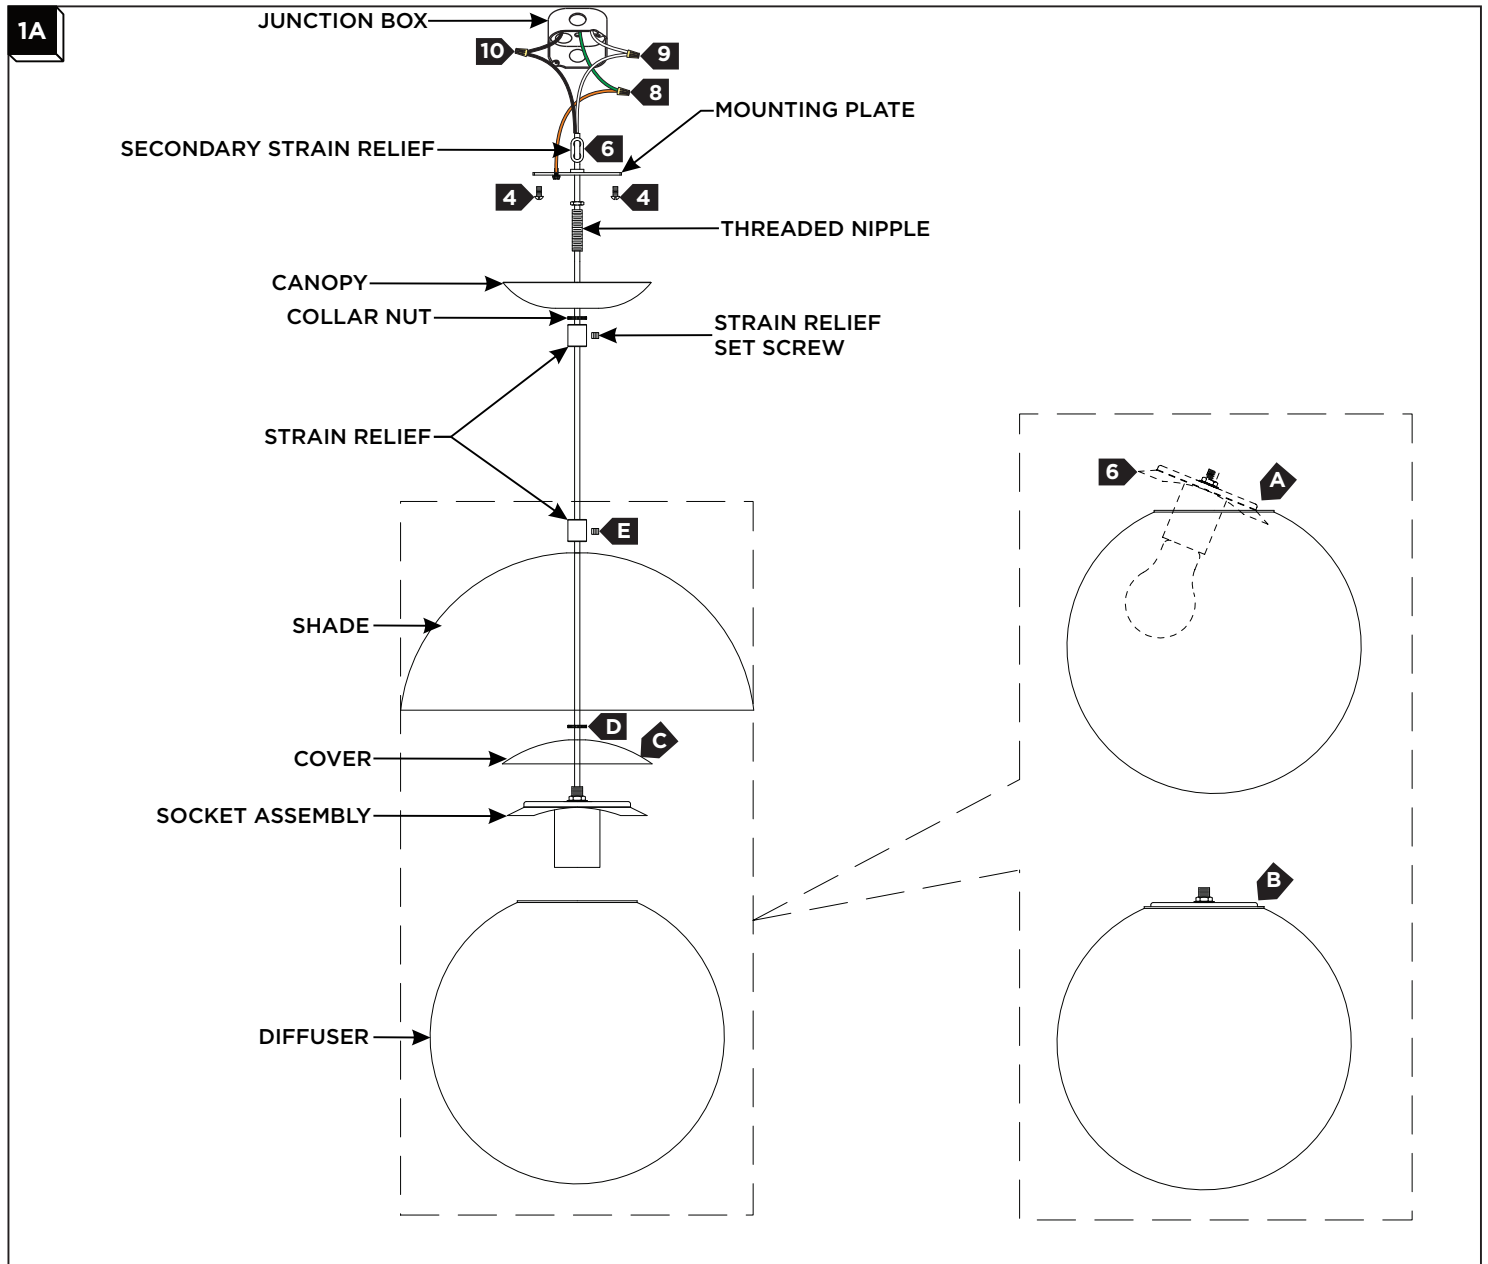

- 1** Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage Information.
- 2** Install the shade and diffuser:
 - A) Insert the socket assembly into the diffuser at an angle.
 - B) Straighten the socket assembly so the diffuser rests evenly on the bracket.
 - C) Place the cover over the glass.
 - D) Thread the collar nut onto the nipple.
 - E) Slide the shade and strain relief into place above the collar nut and secure with the set screw.
- 3** If necessary, screw the short end of the threaded nipple tightly onto the mounting plate.
- 4** Secure the mounting plate to the junction box.
- 5** If necessary, loosen the set screw on the strain relief and feed the fixture cord through it, followed by the canopy.
- 6** Feed the fixture cord through the threaded nipple and secondary strain relief to the desired length.
- 7** Trim the cord leaving enough for electrical connections. From the end of the cord, strip the insulation 4" and then strip the end of the wires. **NOTE:** Make sure not to damage the inner wires.
- 8** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 9** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 10** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 11** Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly onto the threaded nipple.
- 12** Install the strain relief to the threaded nipple and secure it in place by tightening the strain relief screw.