INSTALLATION INSTRUCTION

Volta 2" LED - Remodel Housing Invisible Trim

R2RRL-15, R2RRL-22, R2SRL-15, R2SRL-22



SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- · Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.

AVERTISSEMENT

IMPORTANT: Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- · Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

CAUTION:


All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the ETL/cETL listing of this fixture.

OVERVIEW:


Housing is remodel Non-IC. Housing requires a trim for a finished look. Refer to specification sheets for compatible trim options.

INSTALLATION REQUIREMENT

Ceiling Thickness	Minimum Required Plenum Height	
1/2″	5 1/2"	
1"	5"	

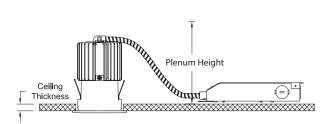

OVERALL HOUSING DIMENSION

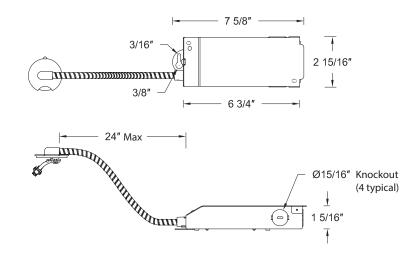

SPECIFICATIONS		
Input:	120-277V, 50/60Hz	
Installation:	Non-IC	
Dimming:	ELV(120V)/0-10V	

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

INSTALLATION INSTRUCTION

Volta 2" LED - Remodel Housing Invisible Trim

R2RRL-15, R2RRL-22, R2SRL-15, R2SRL-22

WAC LIGHTING

Responsible Lighting®

HOUSING INSTALLATION:

 At the point of installation, cut a 4/¼" round hole for a round trim or a 4/¼" X 4/¼" square hole for a square trim (See FIG. 1).

Note: Ceiling thickness table below

			Ceiling Thickness	
Housing	Trim Model	Trim Description	1/2"	1"
R2BRT* Remodel R2R R2R R2S R2R R2R R2R R2R R2R	R2RD2T, R2SD2T	Downlight	Yes	Yes
	R2RD1T, R2SD1T	Shallow Regressed Downlight	Yes	Yes
	R2RWT, R2SWT	Wall wash	Yes	Yes
	R2RAT, R2SAT	Adjustable	Yes, to 45°	Yes, to 35°
	R2RPT, R2SPT	Pin Hole	Yes, to 45°	Yes, to 35°

Pull building supply wires through ceiling cutout and open fixture junction box door (See FIG. 2).


Remove desired housing knockout and feed building wires into housing using appropriate connector.


 Connect fixture wires to building wires: insert each supply wire into appropriate junction box connector. This fixture features electronic low voltage (ELV) or 0-10V dimming capabilities.
 To utilize ELV, wire black (line hot), white (line neutral), and green (ground) in accordance to dimmer specifications.


To utilize 0-10V dimming, wire purple (dim+), gray (dim-), black (line hot), white (line neutral) and green (ground) in accordance to dimmer specifications.


When not using a dimmer, connect black fixture wire to hot, white fixture wire to neutral and green fixture wire to ground. Leave all other wires capped individually (See **FIG. 3**).

4. Place all wiring and connectors back in junction box and replace the junction box's cover (See **FIG. 4**).

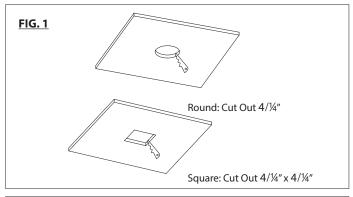

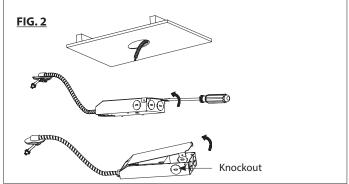

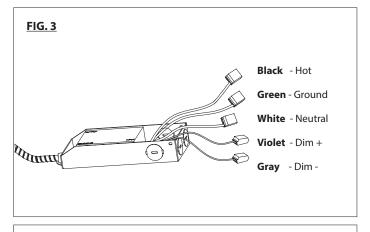

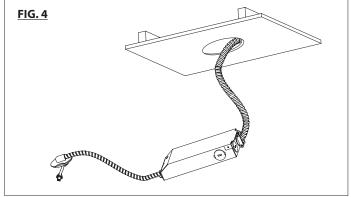

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760

INSTALLATION INSTRUCTION


Volta 2" LED - Remodel Housing Invisible Trim


R2RRL-15, R2RRL-22, R2SRL-15, R2SRL-22

WAC LIGHTING

Responsible Lighting®

- Guide junction box through the cut hole and secure appropriately using either internal mounting slots or external key hole (See FIG. 5).
- Insert upper frame through ceiling opening. Angling maybe required (See FIG. 6).
- Raise invisible trim frame to ceiling cut out and insert alignment bars into upper frame alignment slots (See FIG. 7).
- With upper frame and invisible trim frame flush with both ceiling surfaces, hand bend the alignment bars parallel to ceiling (See FIG. 8).
- Insert four provided screws (short screws for up to ½"
 ceiling and long screws for up to 1" ceiling thickness) through
 countersink holes on invisible trim frame, through ceiling
 and into holes in upper frame. Do not over tighten screws
 (See FIG. 8).
- Insert plaster shield inside trim opening. Apply plaster or spackle over invisible trim frame and sand surface dry for finished look (See FIG. 9).
- Remove the plaster shield when finishing is complete (See FIG. 10).
- 12. Refer to installation instructions for appropriate trim to complete the installation

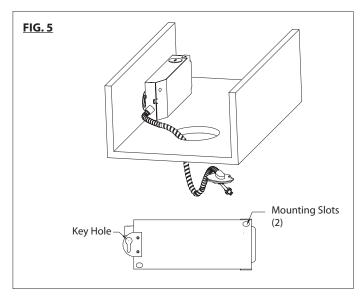

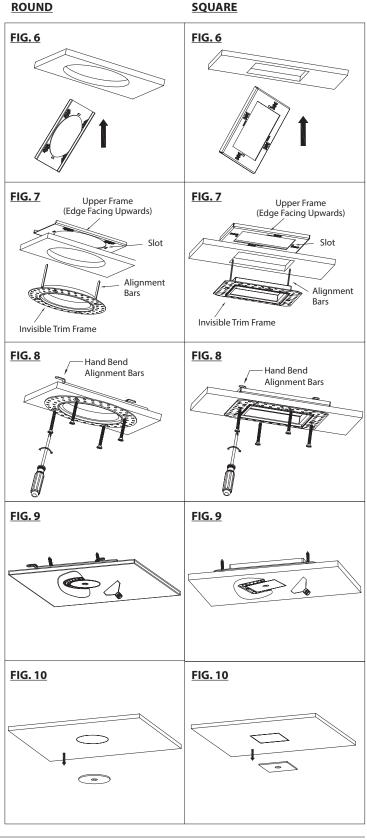

waclighting.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760