


1. Join the two pieces together with the 4 SM3 screws.

2. Embed the bracket on the Television. As shown below:

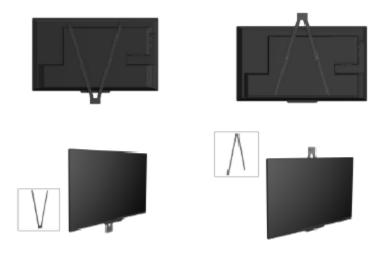

3. Fix the DVDO-C6 to the bracket

