

**CAUTION! • CAUTION! • CAUTION! • CAUTION! • CAUTION!**

# **WHOA!!! CAUTION NOT SO FAST**

This product is made out of MDF / Supawood and is fragile of nature.

We recommend all pieces to be test fitted and if required contact pieces to be filled / sanded down for a better fit.


**PLEASE DO NOT FORCE FIT ANY PIECES AS IT  
WILL BREAK!**


ENJOY BUILDING YOUR NEW MODEL.


[www.wowwe.co.za](http://www.wowwe.co.za)




[www.wowwe.co.za](http://www.wowwe.co.za)

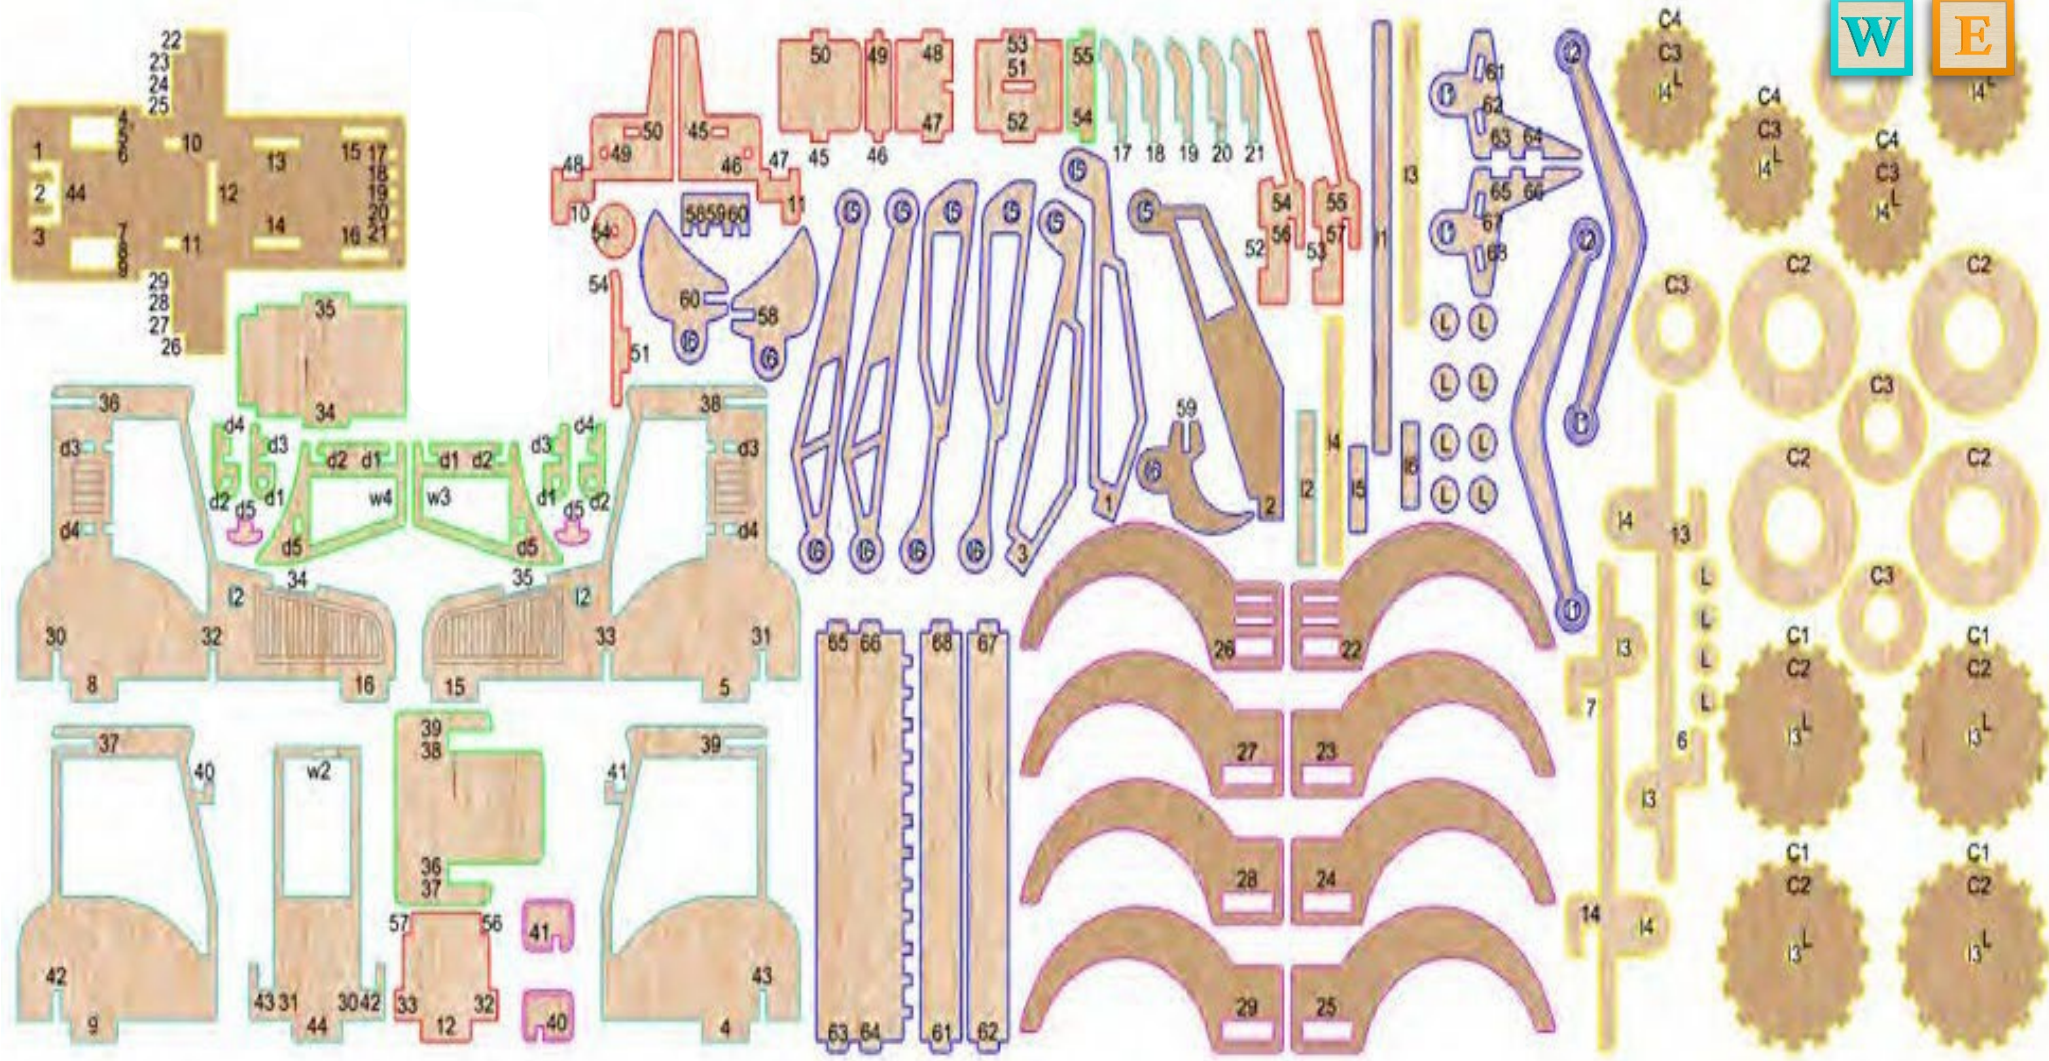

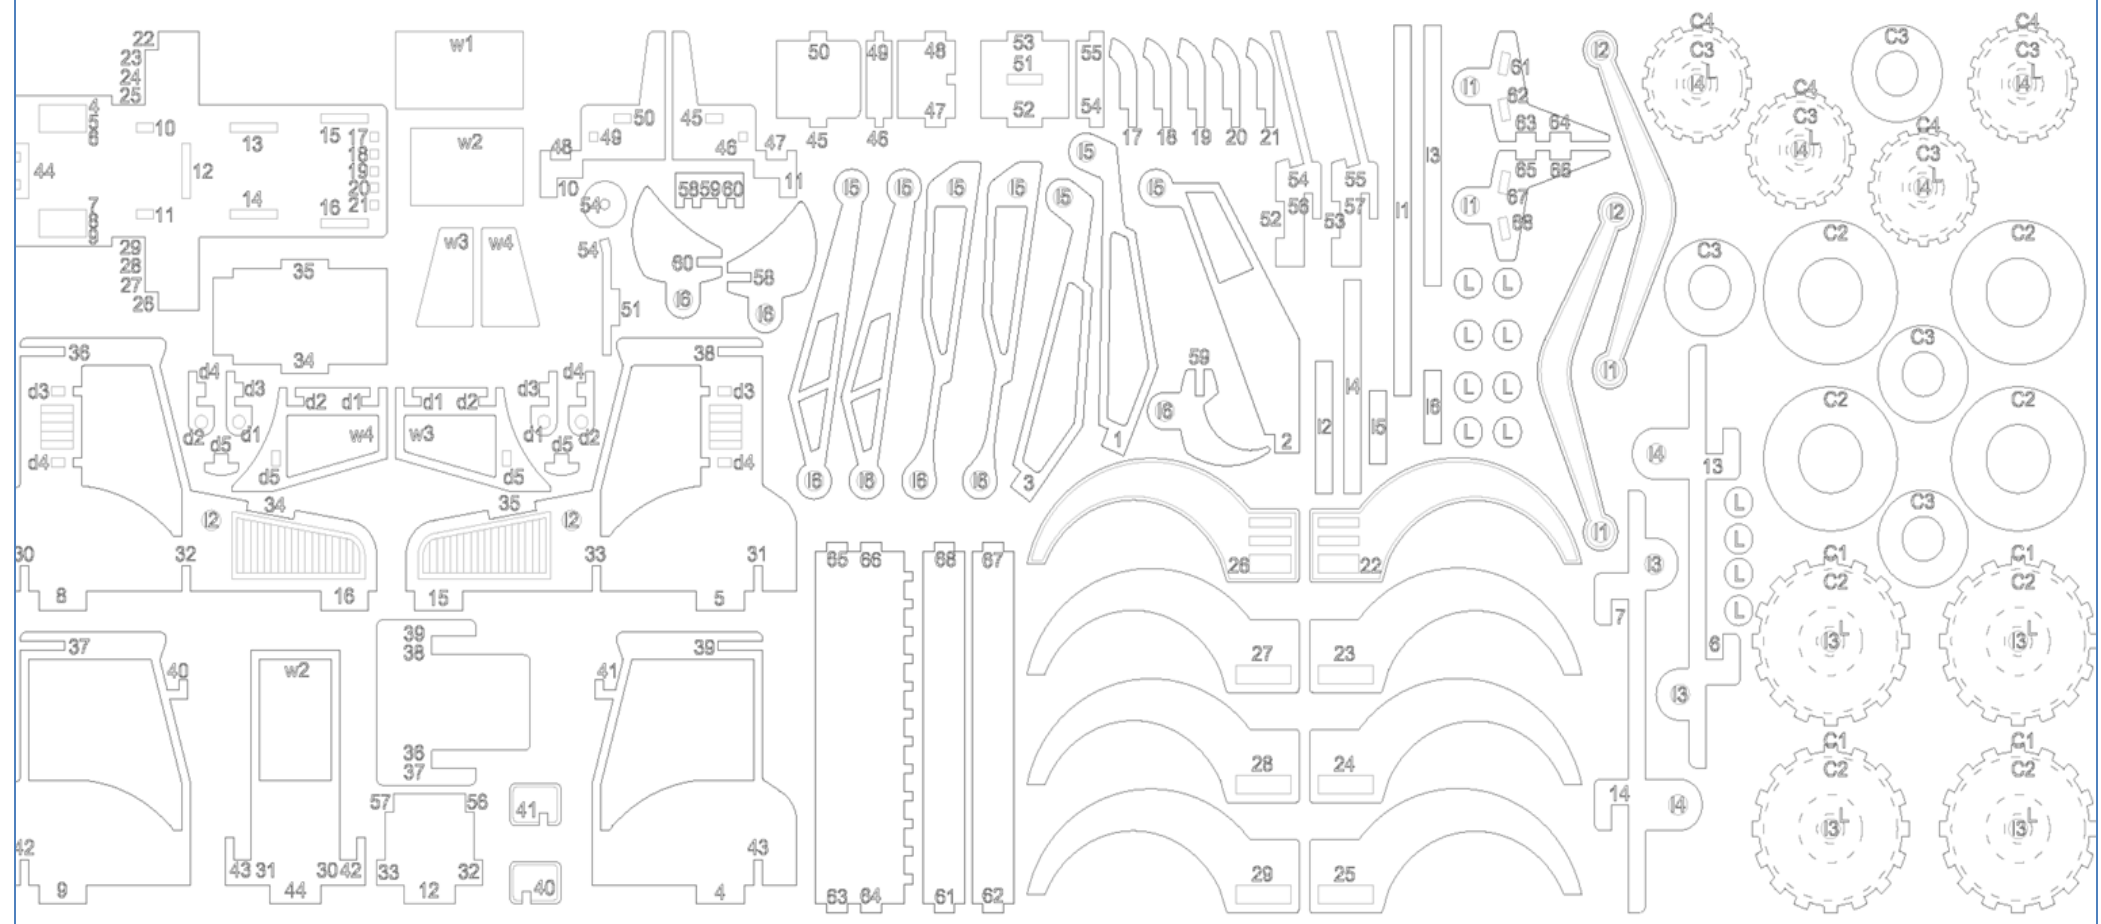

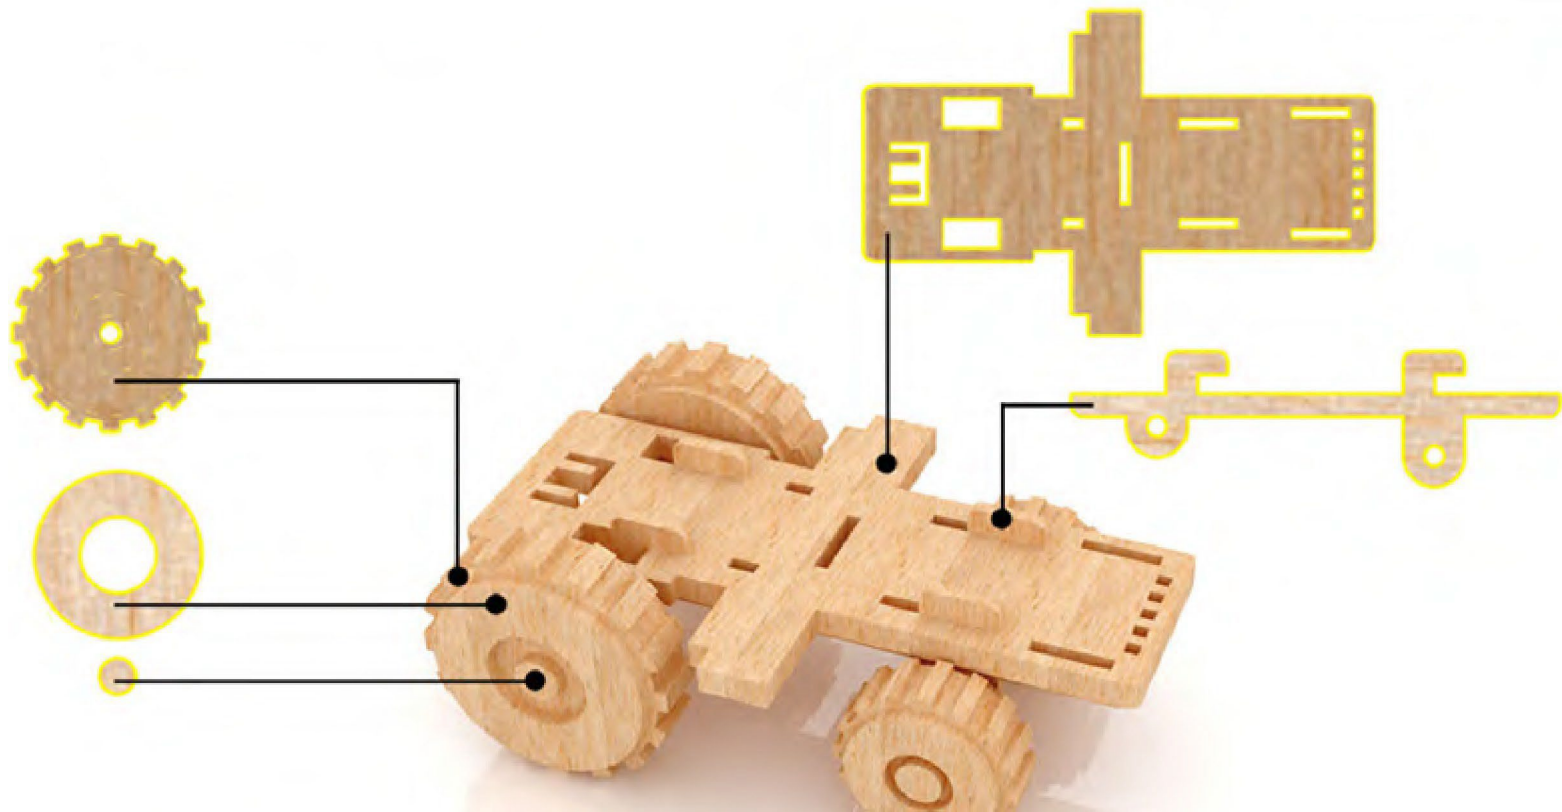

## STEP 1

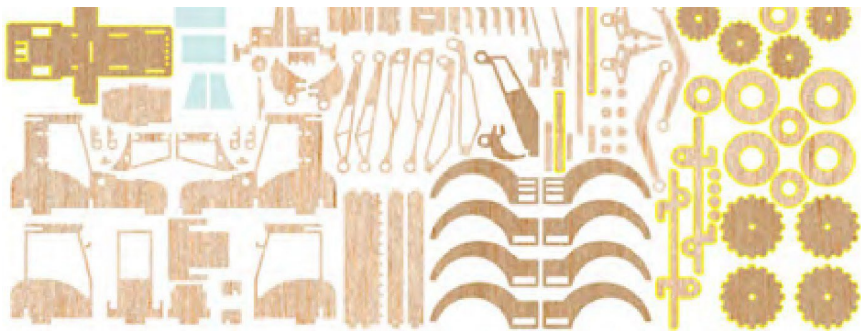


**IT IS RECOMMENDED TO GO THROUGH ALL THE PAGES AND SEE EACH STEP BEFORE STARTING THE ASSEMBLY**

**Full quality photos on our website to assist with the assembly.**


**[www.wowwe.co.za](http://www.wowwe.co.za)**




Steering column and steering wheel to be installed before seat assembly

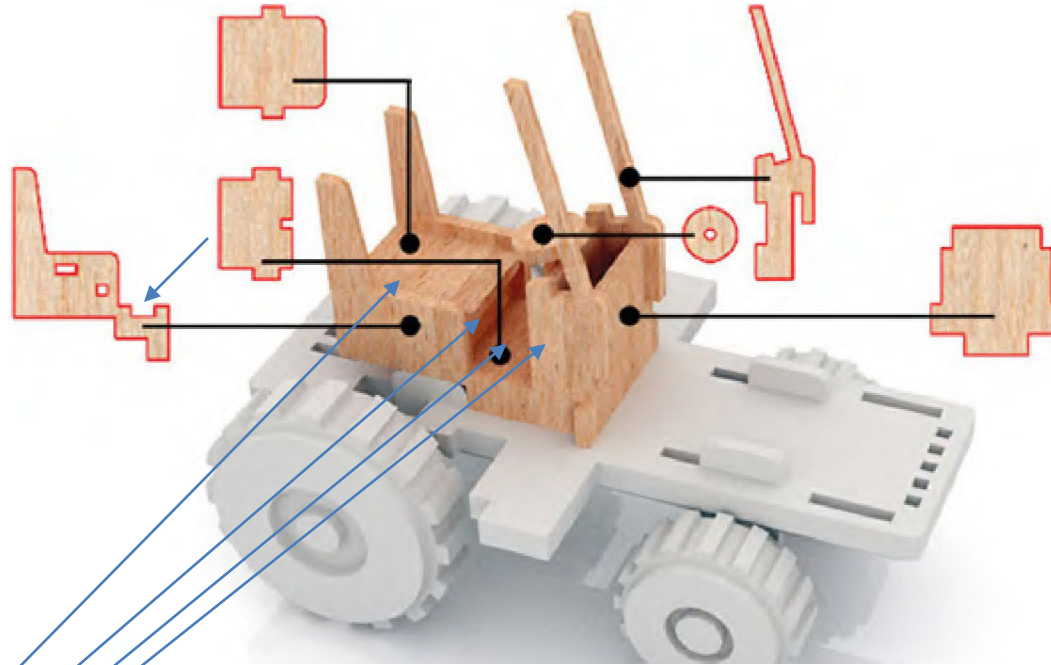


**STEP2**

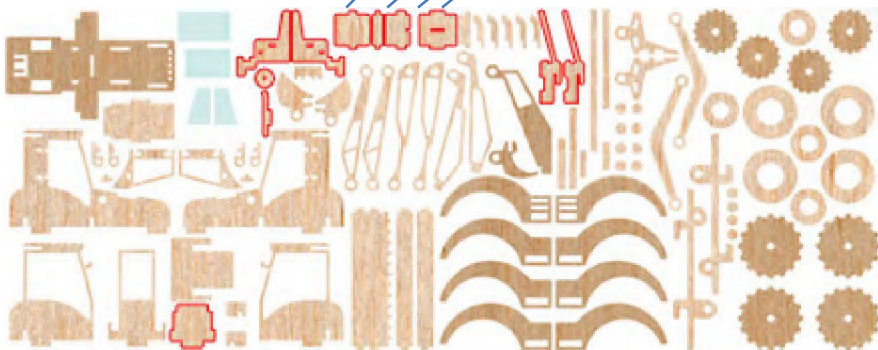


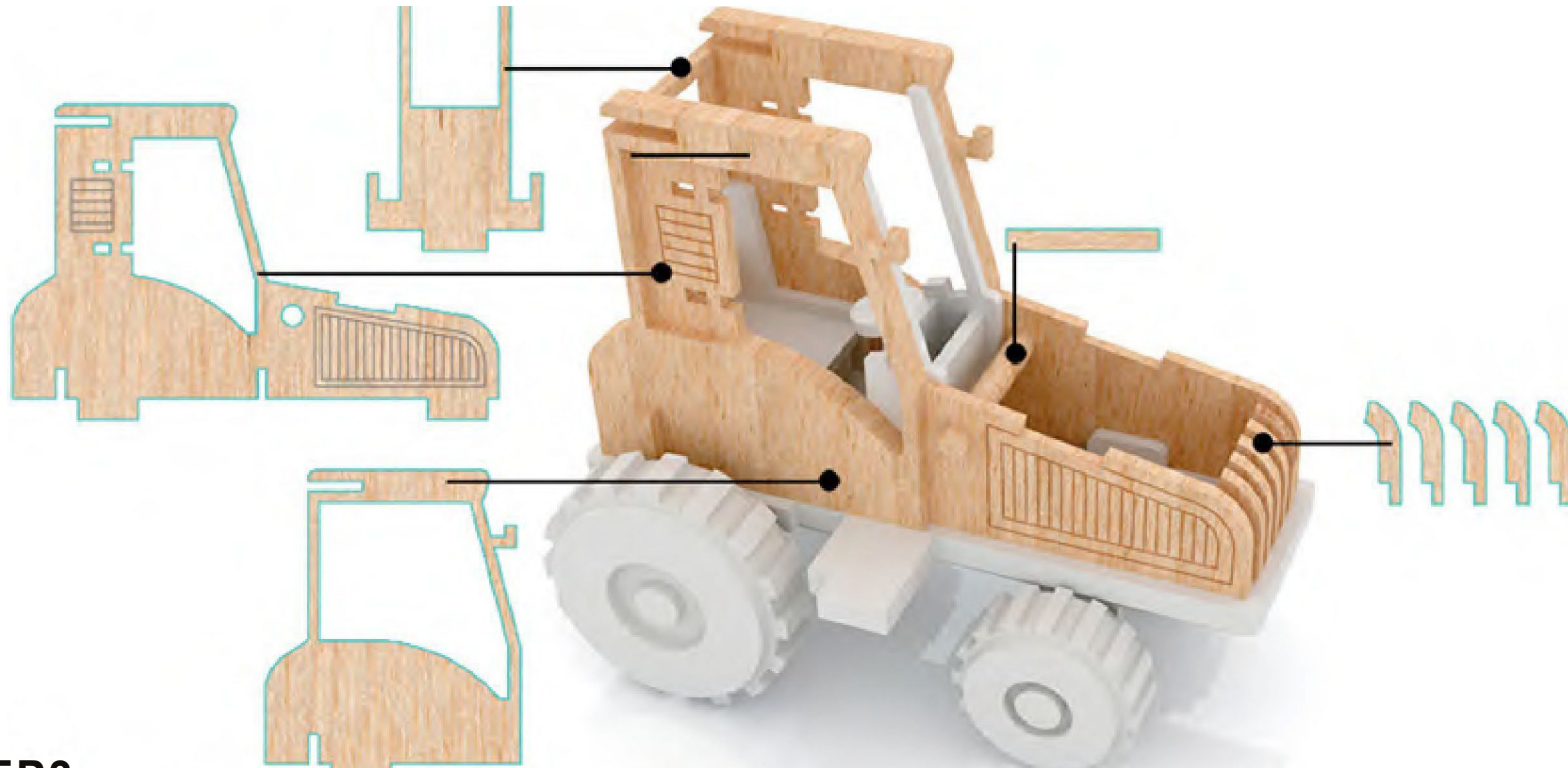

**STEP 3**


---

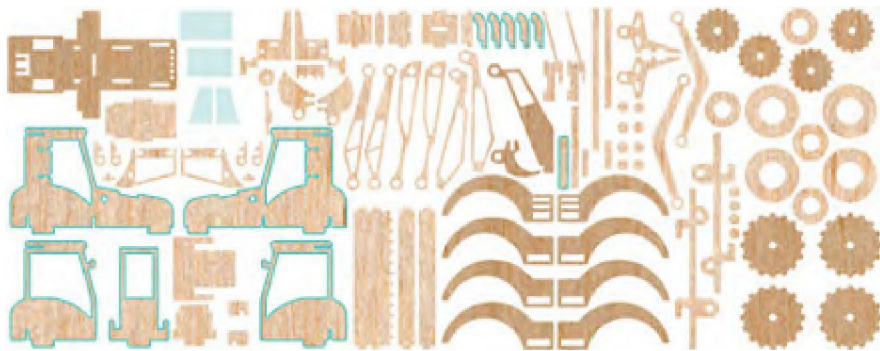

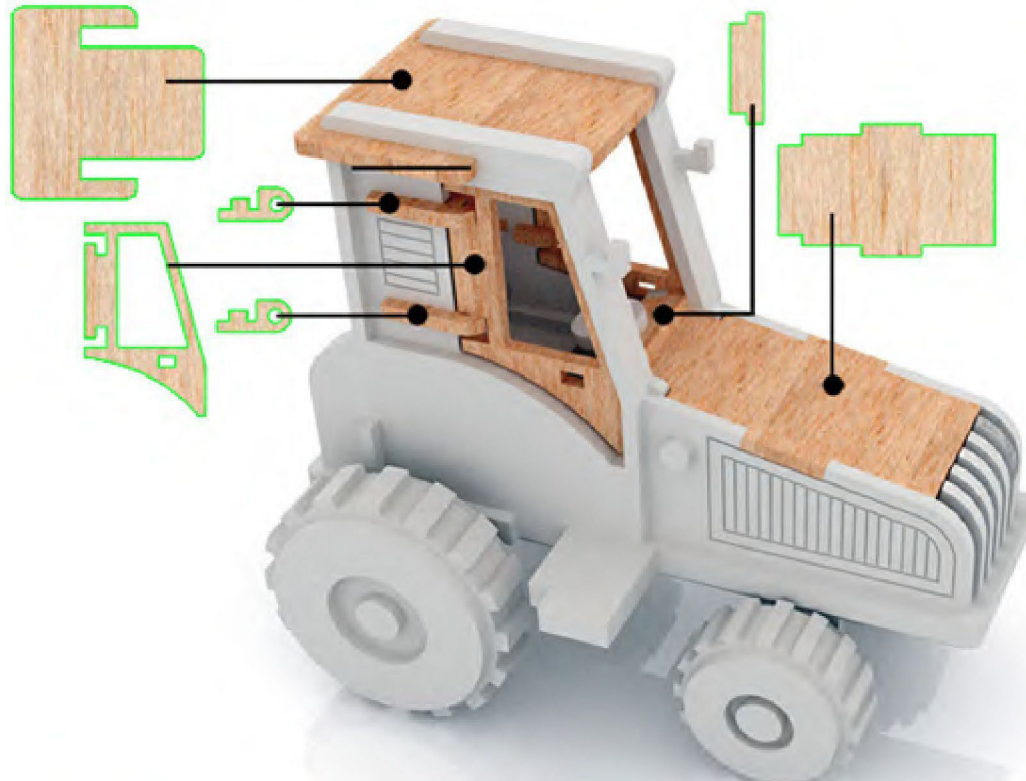


## STEP 4

---

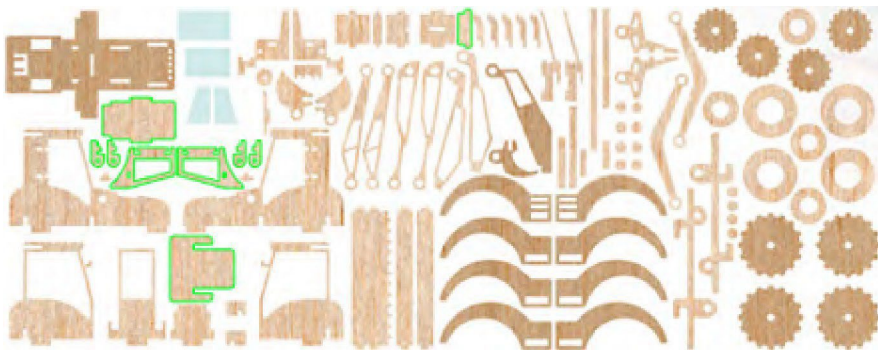




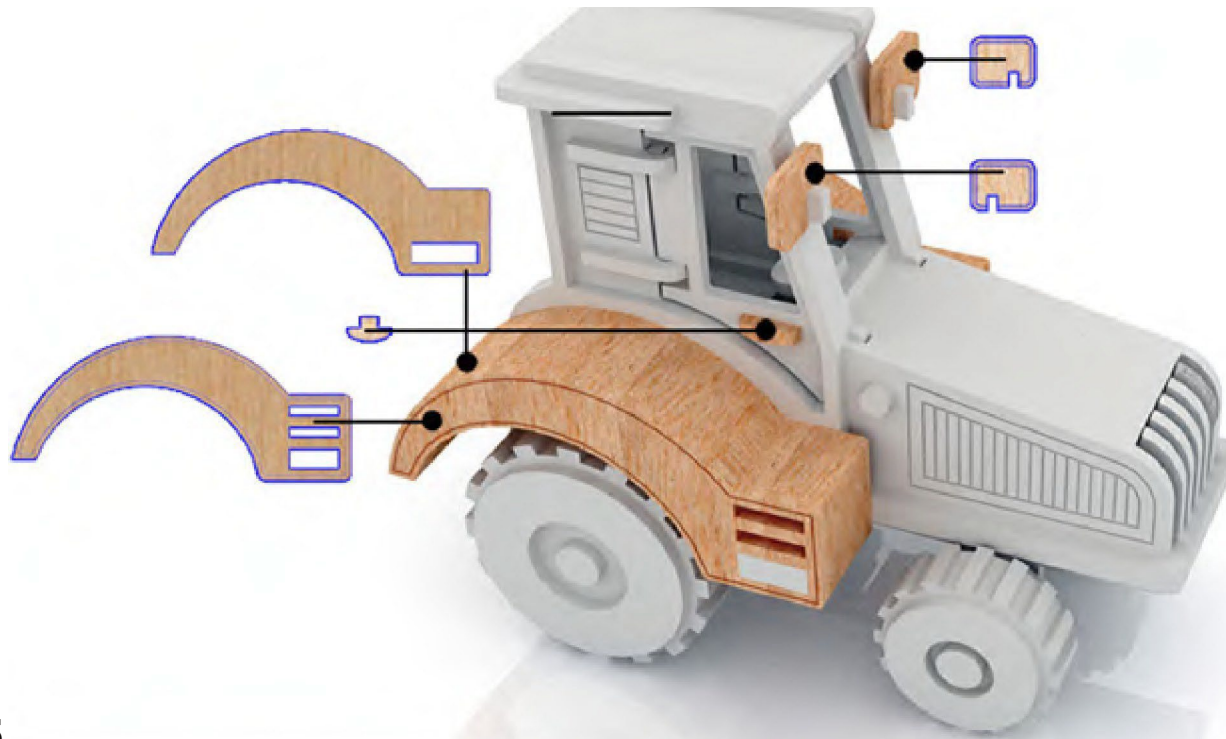


**STEP 5**

---

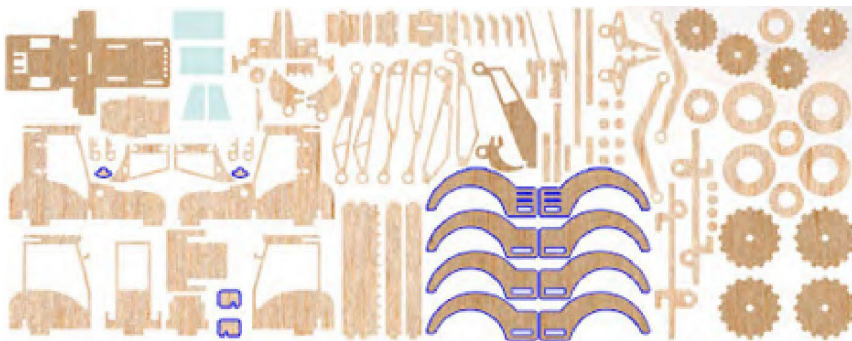



Round spacers 10 / 15 / 10 and one on each outer end

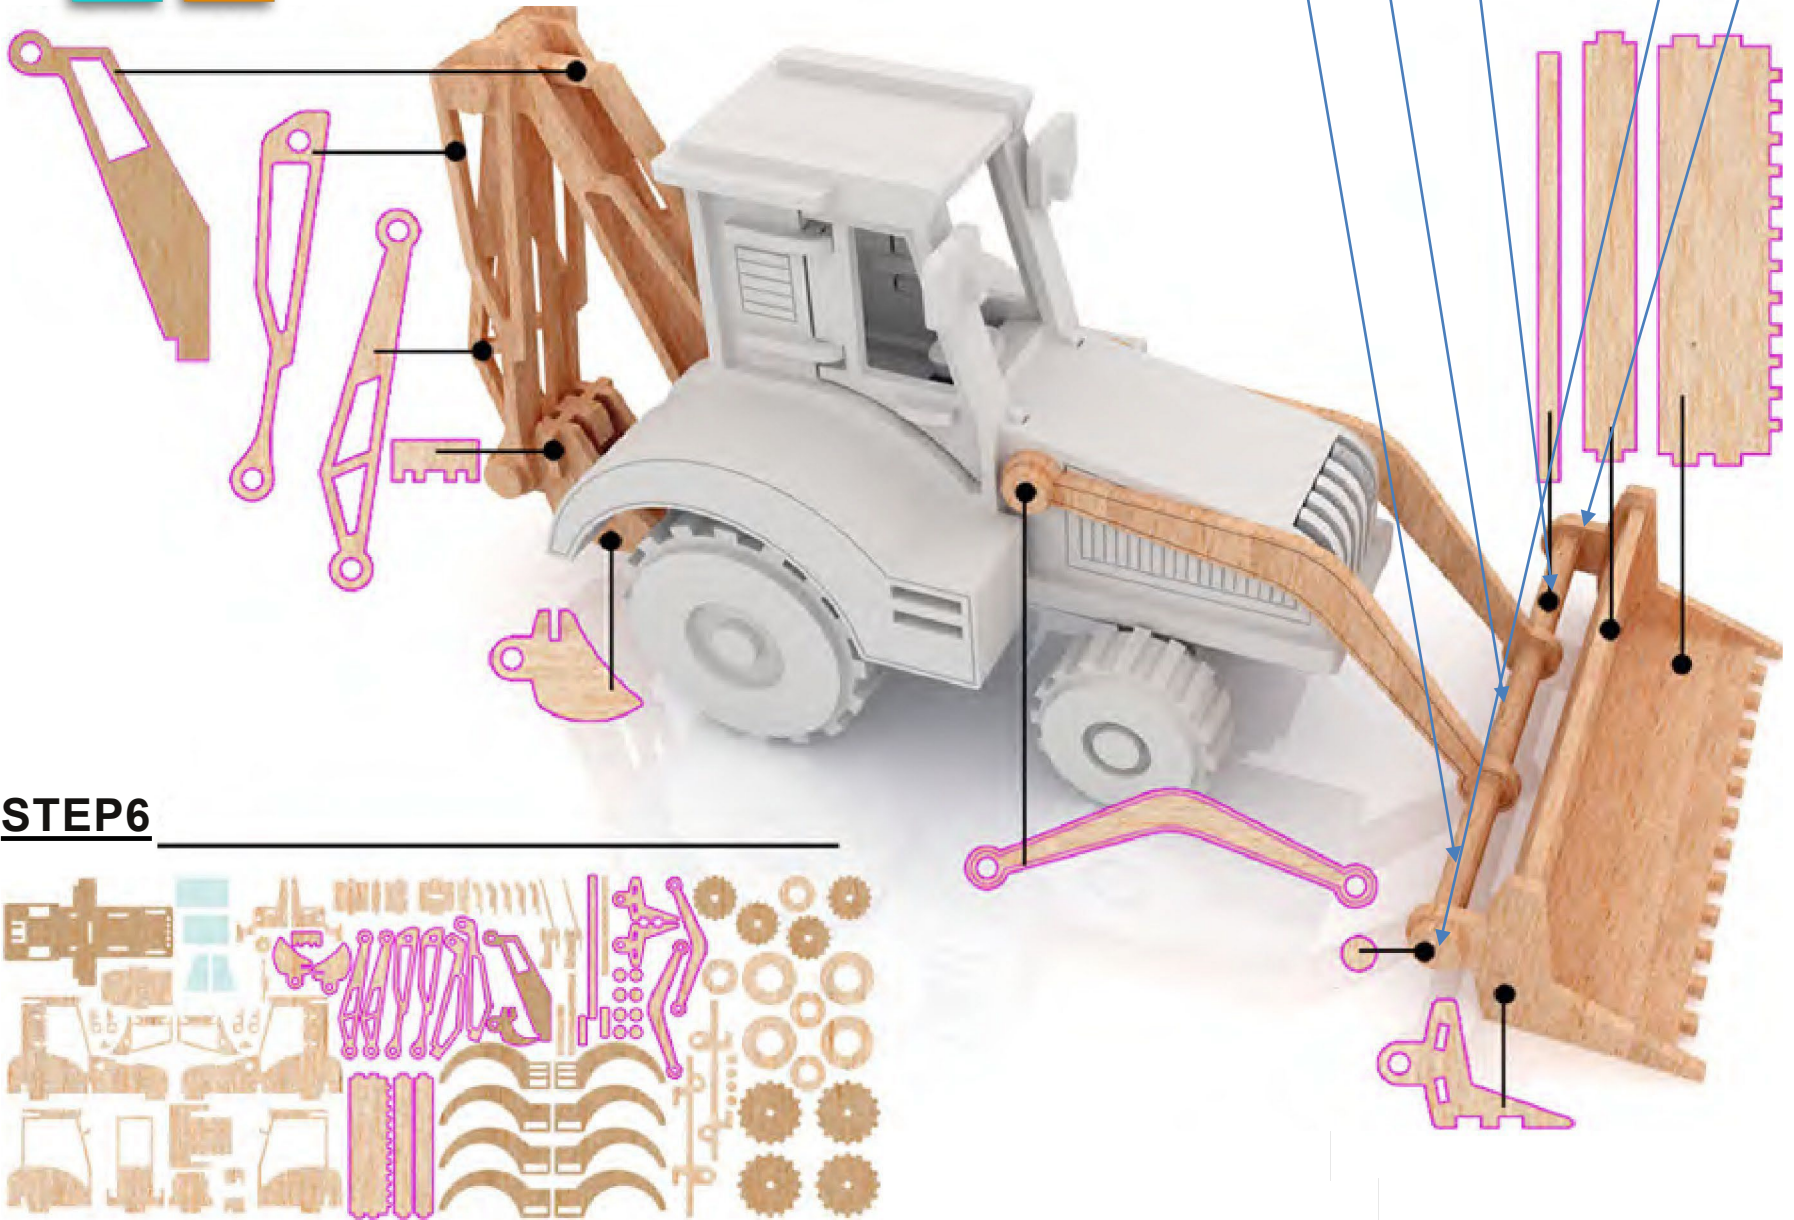

**STEP 6**







W

O

W

W

E

