



NEXposture™

RETROFIT INSTRUCTIONS


For 24" and 30" deep rectangular worksurfaces, use Clamp Mount instructions.

For rectangular worksurfaces other than 24" and 30" deep, and for all corner worksurface applications, use Velcro Mount instructions.

Clamp Mount

1. Place NEXPosture Retrofit unit on top of worksurface in the location of intended use.


Note: Front edge of NEXposture work surface must extend beyond existing work surface edge by 3.5" in order to properly access locking handle.

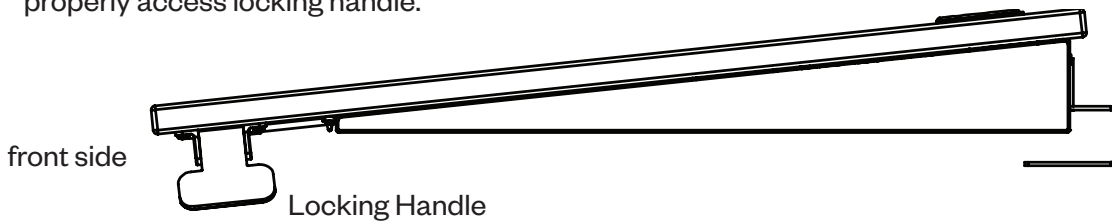

2. Insert C-Clamps into slots located on the back side of unit and underneath worksurface.

3. Tighten down thumb screws.

4. To move surface, squeeze locking handle, move surface to desired location and release.

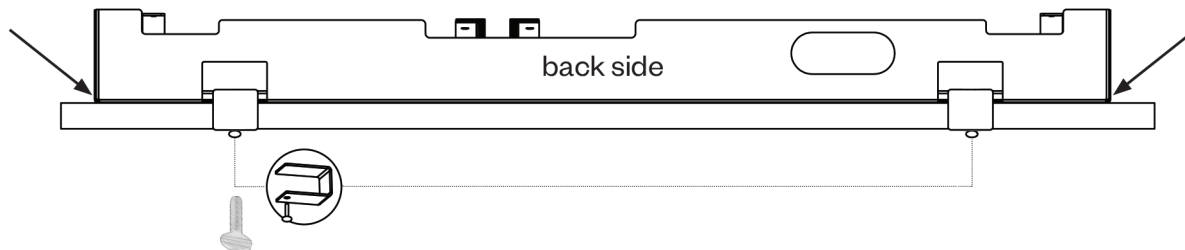

Velcro Mount

1. Place the NEXposture unit on the worksurface in the location of intended use.

Note: Front edge of NEXposture work surface must extend beyond existing work surface edge by 3.5" in order to properly access locking handle.

2. Using a pencil, mark the location of the back (tallest side) and both sides of unit. The arrows above designate where to mark.

3. Tip the unit up on its back side and apply the four rough Velcro squares (provided) to the smooth Velcro squares at the extreme corners.

4. Peel off the protective clear plastic strips from the four rough Velcro squares.

5. Prior to lowering, ensure that the unit lines up exactly with pencil marks and slowly set down into place.

Note: Adhesive bonds extremely well – make sure unit is in exact desired location for this step.

6. Press down on the four corners of the worksurface to insure Velcro adhesive is fully adhered to worksurface.

To remove: Gently tap the blade of a paint scraper or putty knife between the bottom and top sections of each Velcro square. Use a razor blade to remove adhesive from worksurface, removing final residue with a citrus cleaner such as Goo Gone.

7. To move surface, squeeze locking handle, move surface to desired location and release.



Bottom view showing smooth Velcro squares