



## SIT-TO-STAND INSTRUCTIONS


### Attaching NEXposture to worksurface

The Clamp Mount or the Velcro Mount option can be used to attach the NEXposture unit to the worksurface.

#### Clamp Mount


1. Place NEXPosture Retrofit unit on top of worksurface in the location of intended use.

Note: Front edge of NEXposture work surface must extend beyond existing work surface edge by 3.5" in order to properly access locking handle.

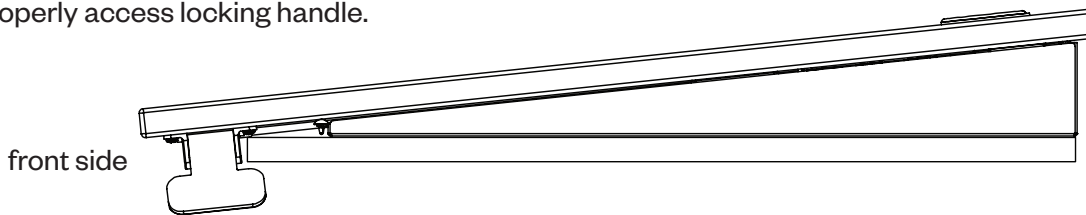

2. Insert C-Clamps into slots located on the back side of unit and underneath worksurface.

3. Tighten down thumb screws.

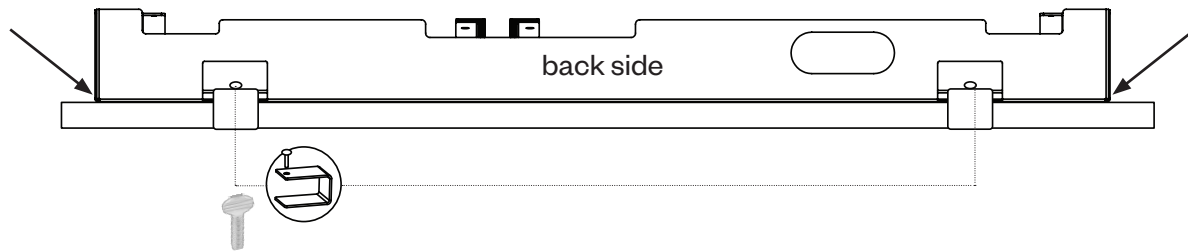

#### Velcro Mount (Read all instructions prior to mounting.)

1. Place the NEXposture unit on the worksurface in the location of intended use.

Note: Front edge of NEXposture work surface must extend beyond existing work surface edge by 3.5" in order to properly access locking handle.

2. Using a pencil, mark the location of the back side and both sides of unit.

The arrows above designate where to mark.


3. Tip the unit up on its back side.

4. Peel off the protective clear plastic strips from the four Velcro squares that are attached under the NP unit.

5. Prior to lowering, ensure that the unit lines up exactly with pencil marks and slowly set down into place.

Note: Adhesive bonds extremely well – make sure unit is in exact desired location for this step.

6. Press down on the four corners of the worksurface to insure Velcro adhesive is fully adhered to worksurface.



Bottom view showing Velcro

To remove: Gently tap the blade of a paint scraper or putty knife between the bottom and top sections of each Velcro square. Use a razor blade to remove adhesive from worksurface, removing final residue with a citrus cleaner such as Goo Gone.