

INSTALLATION GUIDE

BELLY GUARD 900 ACE TURBO

DIFFICULTY AND INSTALLATION TIME

***DIFFICULTY:
EASY***

***TIME ESTIMATED:
10-15 MIN***

RECOMMENDED TOOLS

- ***RATCHET***
- ***BOX 8MM***
- ***TORX T-25***



REMOVE THE LEFT SIDE COVER.



REMOVE THE UPPER CLUTCH GUARD.



REMOVE THE SCREW ON THE SIDE PANEL.




REMOVE THE PUSH PIN.



REMOVE THE UPPER CLUTCH GUARD BRACKET




FOR EASY INSTALLATION AND PROTECT YOUR NEW PART AGAINST SCRATCHES, STICK THE SUPPLIED TEFLON SHEET ON THE INSIDE SURFACE USING MASKING TAPE.

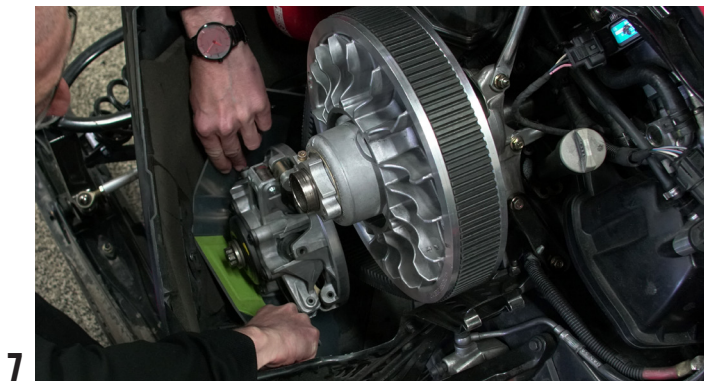

7 *INSERT GENTLY THE BELLY PAN PROTECTOR UNDER THE CLUTCH, MOVE THE SIDE PANEL OUTWARD TO ALLOW MORE SPACE.*




8 *REMOVE THE MASKING TAPE AND TEFLON SHEET.*

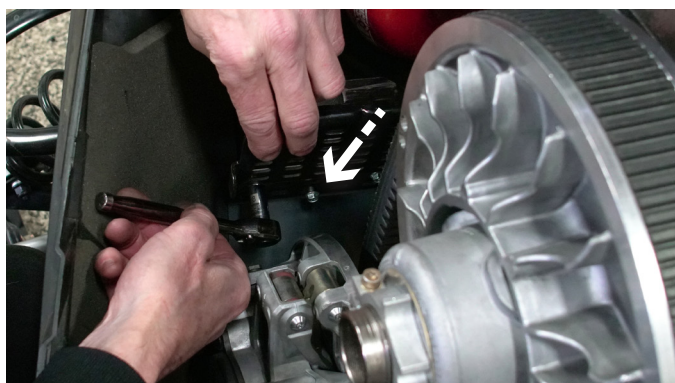

9 *BOLT THE UPPER CLUTCH GUARD BRACKET TO THE BELLY PAN PROTECTOR. DO NOT FULLY TIGHTEN.*



10 *BOLT THE OTHER END OF THE BELLY PAN PROTECTOR TO THE FOOT PROTECTOR. DO NOT FULLY TIGHTEN.*

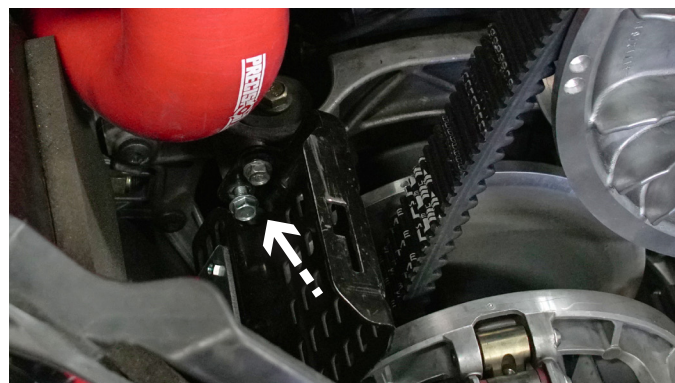

11 *BOLT THE UPPER CLUTCH GUARD BRACKET TO THE FRAME AND NOW TIGHTEN ALL BOLTS COMPLETELY.*



12 *REINSTALL THE SIDE PANEL SCREW, PUSH PIN, UPPER CLUTCH GUARD AND SIDE COVER IN THIS ORDER. REFER TO PICTURE 1 TO 4*