



# **Installation Guide**


### PARTS INCLUDED (Quantities will vary with track size)

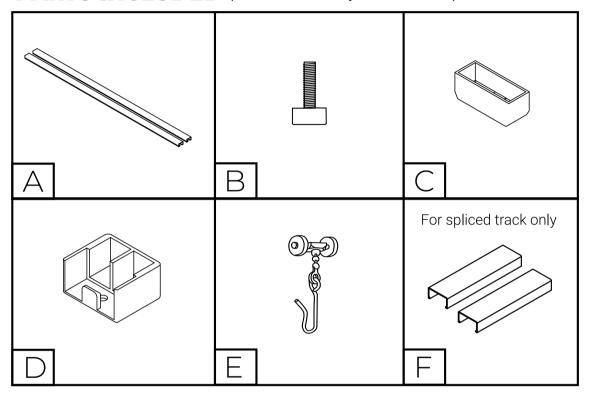

## **TOOLS REQUIRED**

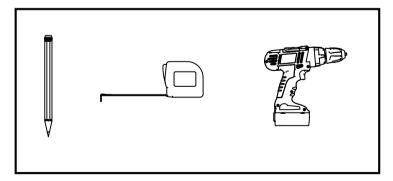


### **NOT INCLUDED**

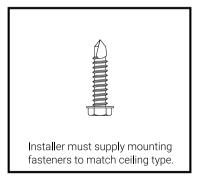




**STEP 1** - Insert the threaded block (C) into track (A). Then attach the end cap (D) using a thumbscrew (B).

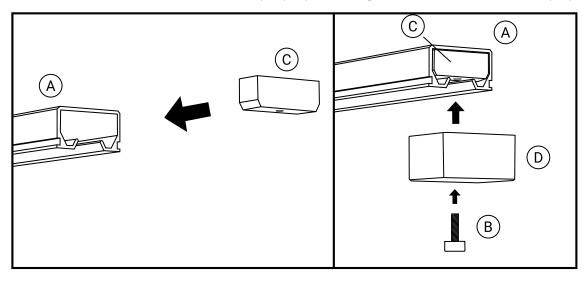


**STEP 2** - If track is spliced, align all segments on the floor and ensure all parts and splices are included. If track is not cut into segments, skip to step 3.

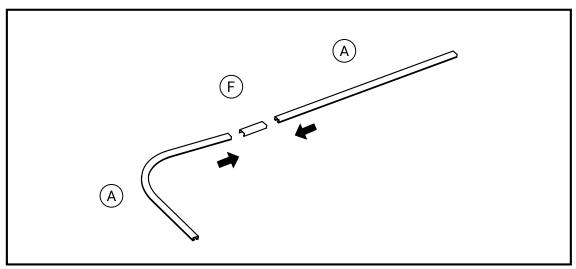




**STEP 3** - Place track against ceiling and lightly mark intended mounting location. Be sure to include splices and all segments of track.

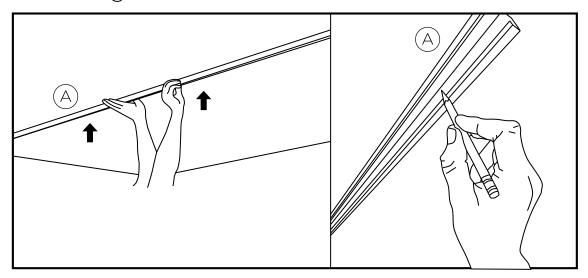


**STEP 4** - With track balanced on saw horse or table, drill a series of holes in the exact center of the track at intervals of 3'0". (Drill size should be compatible with the fasteners being used.)

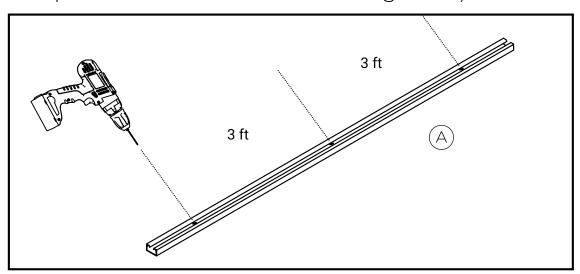




**STEP 5** - Review the ceiling types shown below and gather the necessary mounting hardware (mounting hardware is not included).

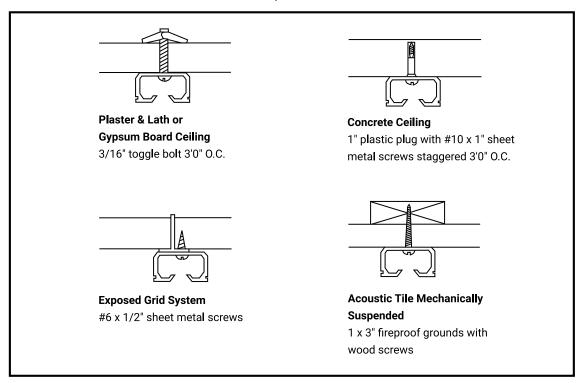


**STEP 6** - Place track (A) against ceiling and mark hole locations. If required, pre-drill holes in marked locations and install anchors, plugs, etc (will vary with ceiling type)

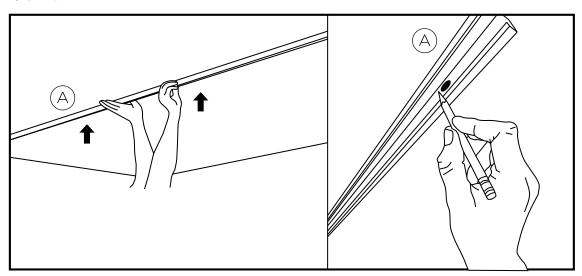




**STEP 7** - Mount track to ceiling. NOTE: Fasteners should be pan head type, not greater than #12 size.

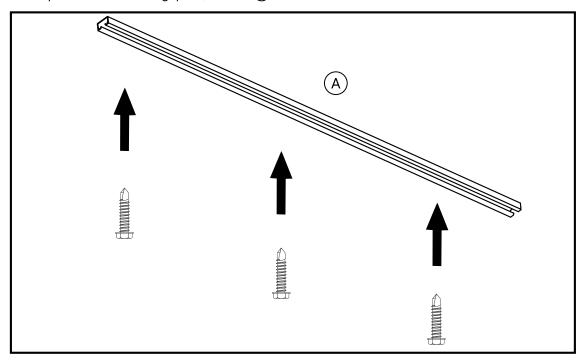


**STEP 8** - Temporarily remove one of the end caps (D) and the threaded block (C).

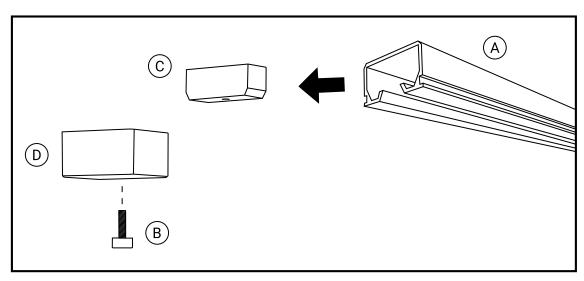




**STEP 9** - Insert all curtain carriers (E). Then re-install the threaded block (C), end cap (D), and thumbscrew (B) that was removed in step 8.

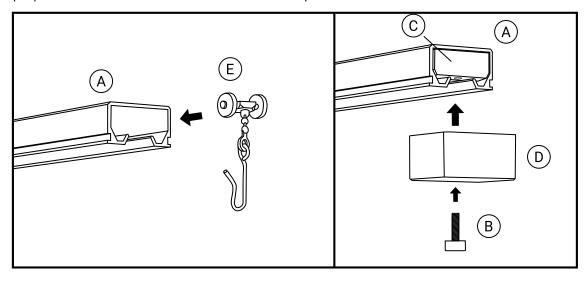

STEP 10 - Attach the curtain and you're done!

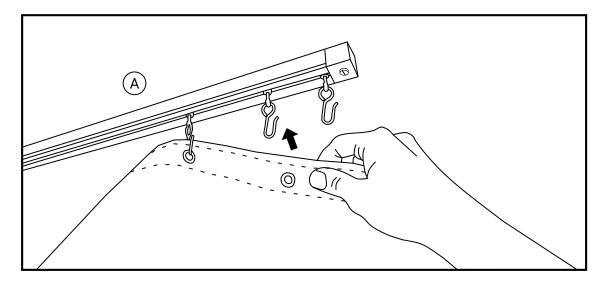

QUESTIONS? Contact our US-based support team at:

## info@imperialprivacy.com