
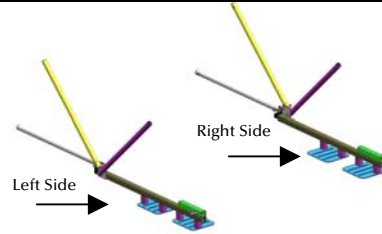


Intruder™ QuikCab™ Kit to Include:

1 – Cab Cover

2 – Rear Rack Main Bracket Assemblies

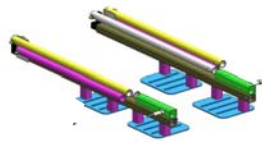

3 – Frame Tube Assemblies

2 - Short Tubes – Used for Center and Rear Cab Support Frame

1 - Long Tube – Used for Front Cab Support Frame and for Latching QuikCab™ to Front ATV Rack




2 – Angle Iron – Latch Assemblies for ATV Front Rack

2 – Angle Iron Latches

2 – Clamp Mount Assemblies

Which Include: 2 Sets of Front & Back Clamp Halves
4 Clamp Screws

2 – Screws to Attach Angle Iron Latch to Clamp Mount

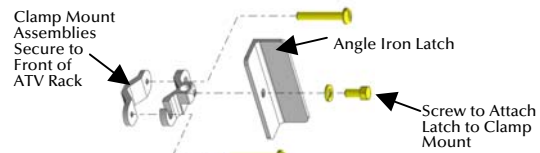

Note: Some ATV's may require other methods of attaching the latch to the front rack depending on composite and angle of rack


Hardware For Mounting Main Bracket Assembly to ATV Rear Rack

8 – Nuts

8 – Lock Washers

4 – Washer Plates

4 – U-Bolts

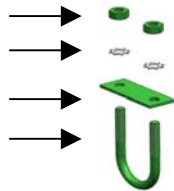

Intruder™ QuikCab™ Assembly & Installation Instructions:

1) Feed long and short frame tubes through inside QuikCab™ cover channels.
*Note - short frame tubes will need to be secured by side Velcro strips.


2) With the frame tubes installed in cover, slide the 3 frame tubes inside the main bracket tubes until push buttons on frame tubes release and secure each tube in place.

3) Once cab frame assembly has been completed, lift unit over the top of the ATV and set in position for mounting. Adjustments can be made to fit the cab to the ATV accordingly by first aligning the front rack latch mounts to the die cut holes in the front of the cab cover, then by attaching main brackets to the rear rack with U-Bolts.

(To reduce rack scratches, apply black electrical tape to the rack area that front latch mounts and main rear rack brackets will be mounted)
Optimal tension is required in securing QuikCab™ in place. This will ensure the cab will not flip open while in motion. When finished mounting, the front and rear rack should be completely covered.

4) Now that QuikCab™ has been securely mounted to ATV, gently pull front frame tube forward to release tube from front latch mounts and flip cab open to convertible position. Sit on ATV seat and reverse the above procedure to close QuikCab™.

5) Storing QuikCab™ is easy! With the cab in its convertible position, depress both push buttons on each of the 3 frame tubes to allow the tubes to telescope into main mount bracket tubes. Once reduced, tuck cab material carefully in between tube folds and release corner die cut holes in rear of cover from left and right main brackets. Place storage boot over the folded cab making sure that the Velcro closure is on the bottom. Velcro shut to close.
(QuikCab's™ storage boot must be properly installed over QuikCab™ before transporting in the convertible position).

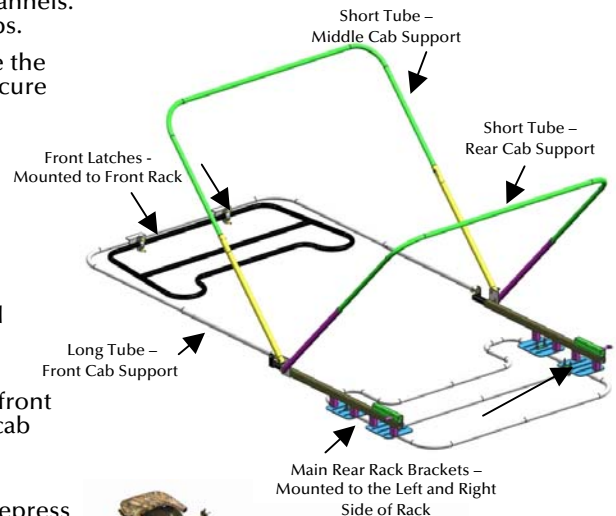

All QuikCab™ parts and accessories are warranted to be free from defects under normal use for a period of 6-months from the date of purchase.

QuikCab™ is not intended as a protective roll cage device and caution should be taken in properly handling ATV while in use.

For additional assistance or to see other innovative Intruder products go to www.intruderinc.com or contact customer service at 800-553-5129