


Installation Instructions

Aspen Lever. Tubular Latch/Lock, Snib and Strike Install




1. Components

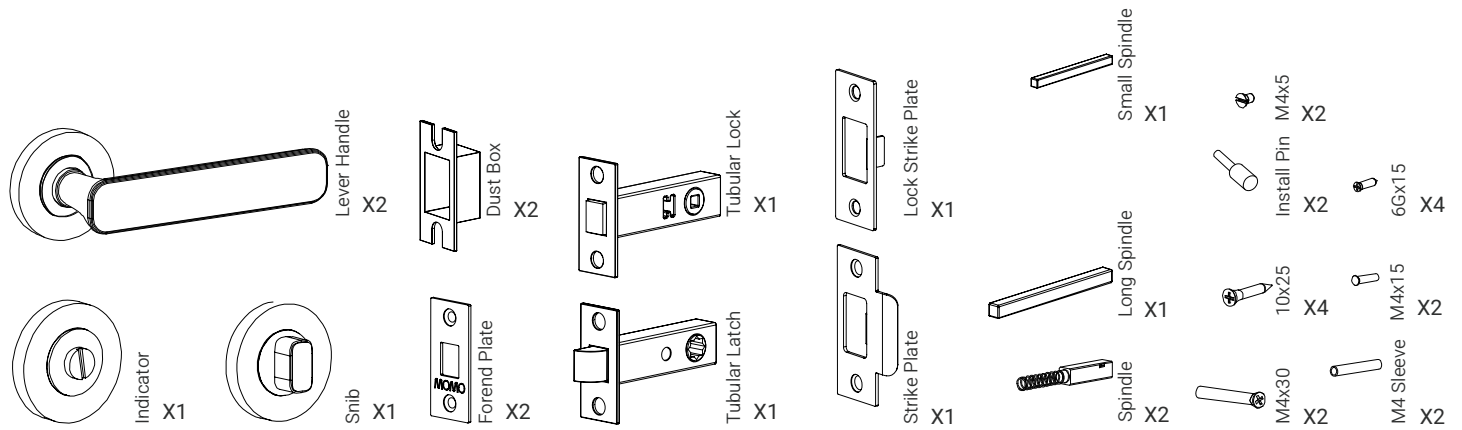


2.

Tubular latch/lock and lever drilling dimensions

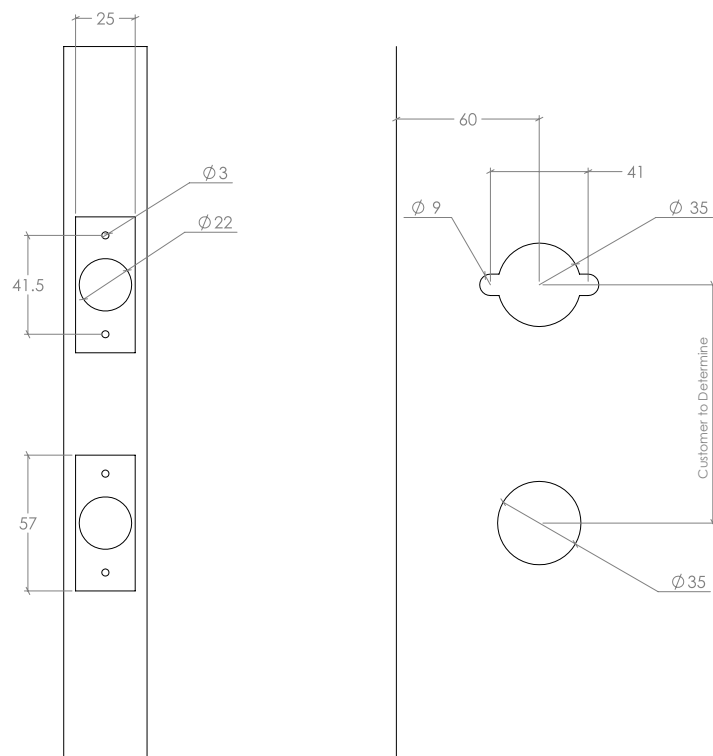

3.

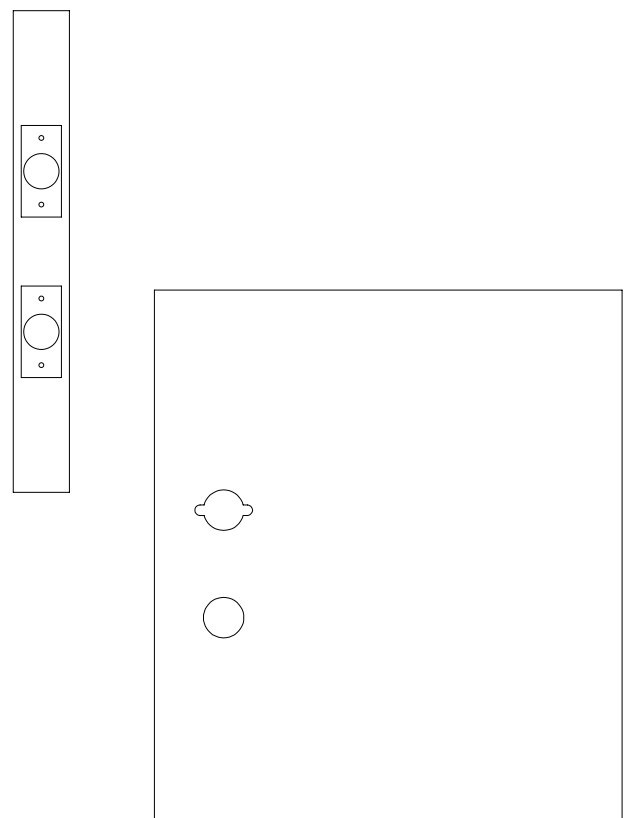


Installation Instructions

Aspen Lever. Tubular Latch/Lock, Snib and Strike Install

MO
MO
HANDLES


4.

Install Tubular Latch and Lock into the door with associated forend plate using 4x 10Gx25 screws

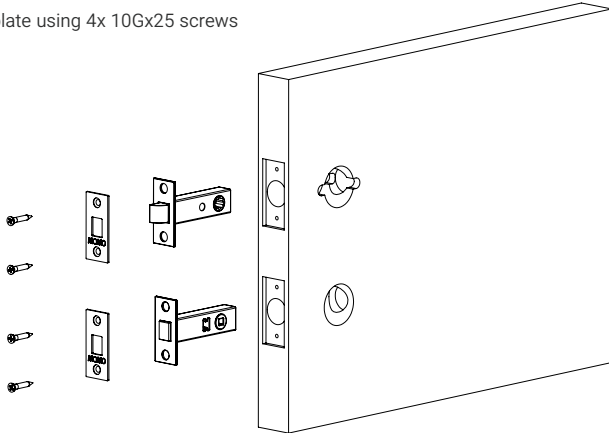



Install Snib, Spindle and 2x 6Gx15 screws

Followed by the rosette cover
(Hand tighten)

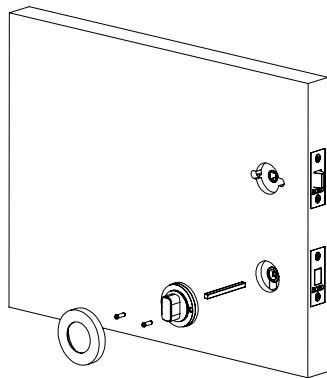

5.

Repeat for other side

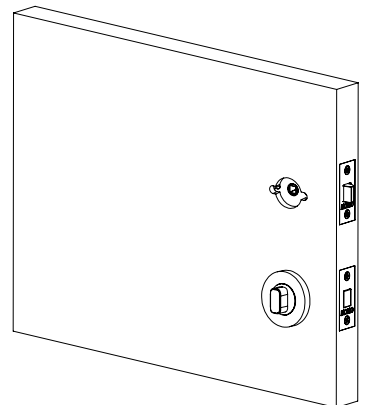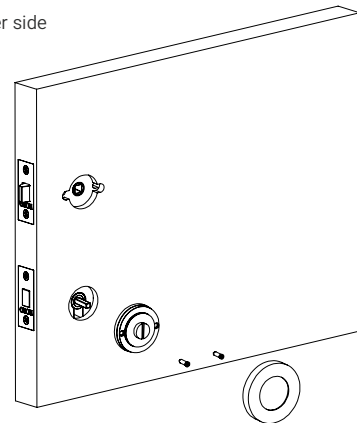


6.


Loosen rosette cover from lever and install 2x M4x15 screw to the Lever

Tighten with the 2x M4 sleeves and insert spindle, spring side first into the lever handle

Install assembly into door

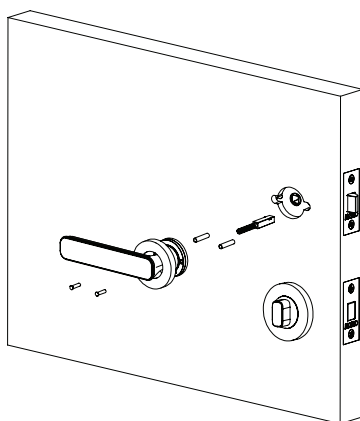


Repeat above step hand tightening
M4x30 screws

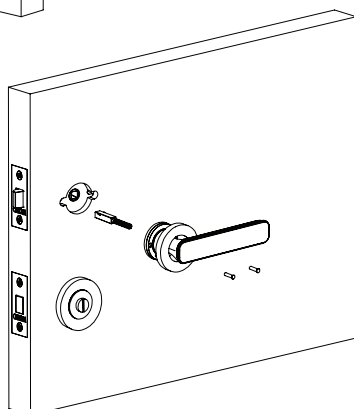

7.

Rotate lever handle down to gain
better access to the 2x M4x30
Screws

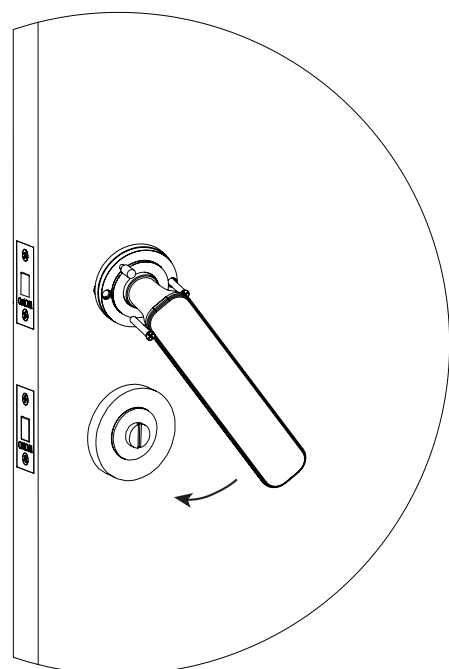

Installation Instructions


Aspen Lever. Tubular Latch/Lock, Snib and Strike Install

MO
MO
HANDLES

8.


Insert pin into rosette and release lever

The handle should be locked into a downwards position allowing you to tighten the screws with a screw driver

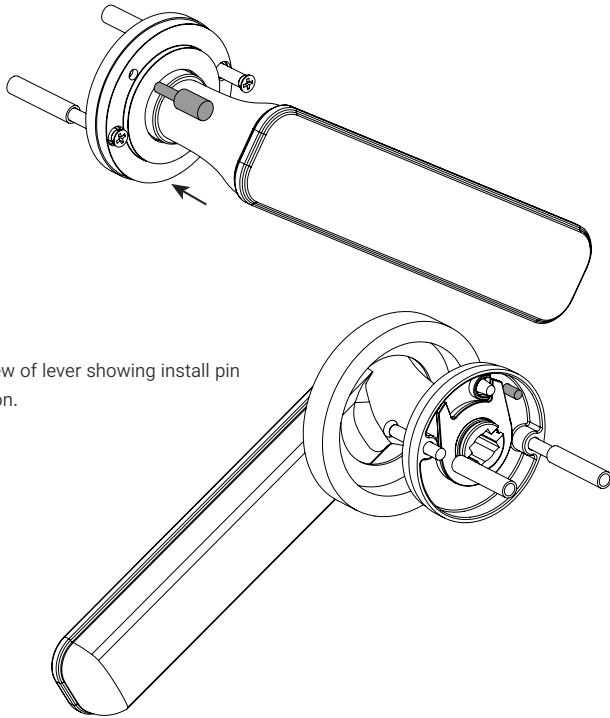


9.

Once secured, reinstall rosette covers by hand and remove plastic covering

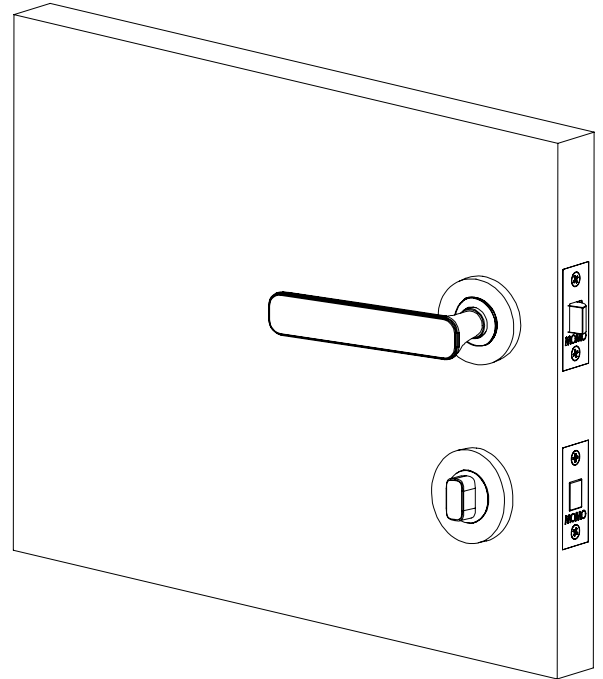


10.

Strike Plate Installation Dimensions

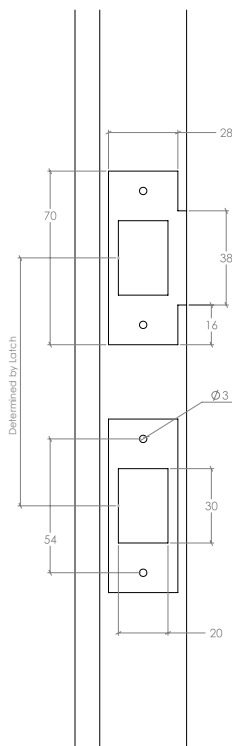

11.

Install 4x 10Gx25 screw along with the dust box and strike plate

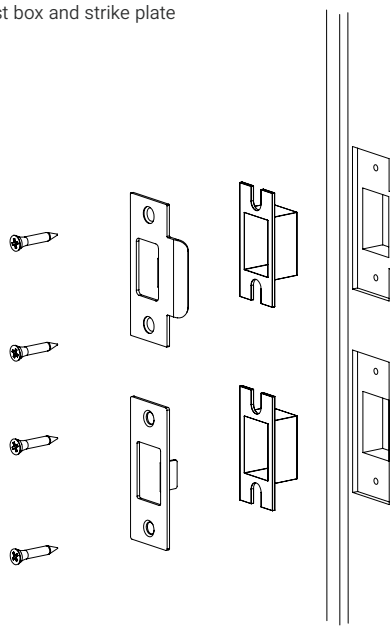

12.

