



WORX RACING SEADOO AIR FILTER

PART # - WR04038 RXPX

MODELS: RXPX 300 2016+

INSTALLATION INSTRUCTIONS

- 1 x WR04038 4-inch Seadoo 4 Tec Supercharger Adaptor
- 1 x WR04020-2 Billet Air Filter Bracket 4 inch
- 1 x WR04020-5 Air Filter 4 inch
- 1 x WR04020-6 Air Filter 1 inch with hose clamp
- 3 x 4-inch hose clamps
- 1 x WR04034-8 mounting Bracket
- 1 x 800mm of Air Filter hose

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION


- 1- Make sure ski is secure and on a flat surface. Remove lanyard and disconnect battery.
- 2- Pull the rear plastic and seat housing off the ski.
- 3- Disconnect engine breather hose from intake. Remove OEM air intake hose from supercharger and off second air filter hose. **NOTE its your choice if you want to pull the full hose out from OEM filter box.**
- 4- Fit WORX supercharger adapter. Add Loctite to 2 bolts and secure. **TIP have the adapter in a 45-degree angel while putting the first bolt in enough so it won't fall out, then spin it athe adapter around and put the second one in and tighten both up as you can reach both.**
- 5- Conect the 4-inch adapter to the mounting bracket before fitting to the ski. **Tip for best fit we recommend putting it in the left positioning point on the adapter**
- 6- position side mounting bracket to the correct location. **Note some RXPX will need the holes in the ski the be drilled with an 8mm drill bit**
- 7- Connect the hose presided to the supercharger adapter on one side and have the other side on connect to the 4-inch adapter and tighten with hose clams provided.
- 8- Finally put on the pod filter to the 4inch adapter and tighten with hose clamp. Place the breather filter on the breather hose you pulled of first and place in any position where the hose is not creased/ bent on itself.

Thank you for purchasing **Worx Racing components** products. We firmly believe that **Worx Racing Components** products are among the finest watercraft parts available. A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure. If you have any questions or comments on the performance and/or installation of our products please contact us at the numbers listed on page one or through your local **Worx** dealer.

10B 354 Brisbane Rd Arundel QLD 4214 Phone: +61 7 5563 1031

www.worx.com.au / info@worx.com.au

plugs out

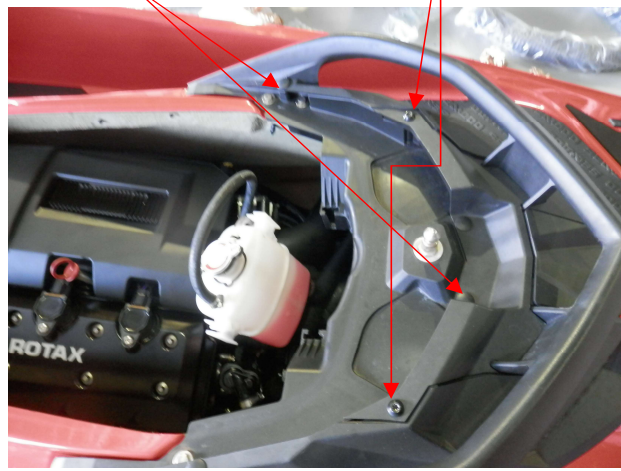


3

Pull both plugs out and take plastic panel off



5

Pull hose off and fit breather filter onto the hose

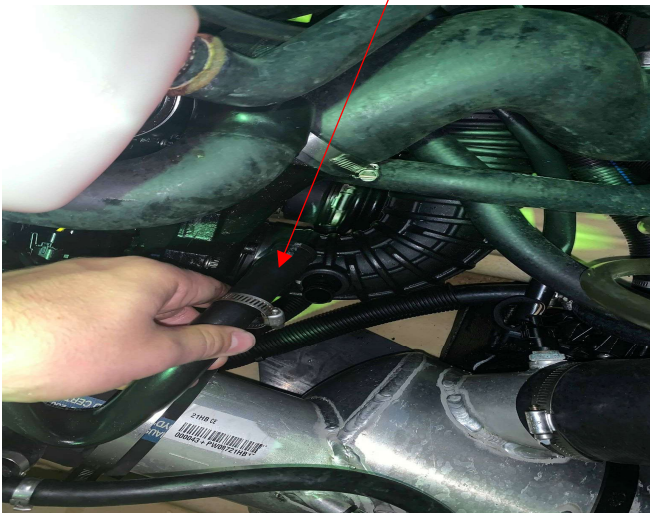


then pull panel on



4

Unscrew both nut and bolts with 10mm on both sides

Unscrew both nut and bolts with 10mm on both sides

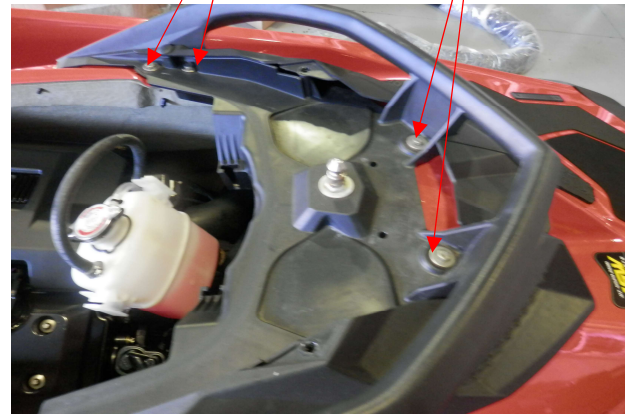


6

Loosen hose clamp and pull hoses off supercharger



Loosen hose clamp

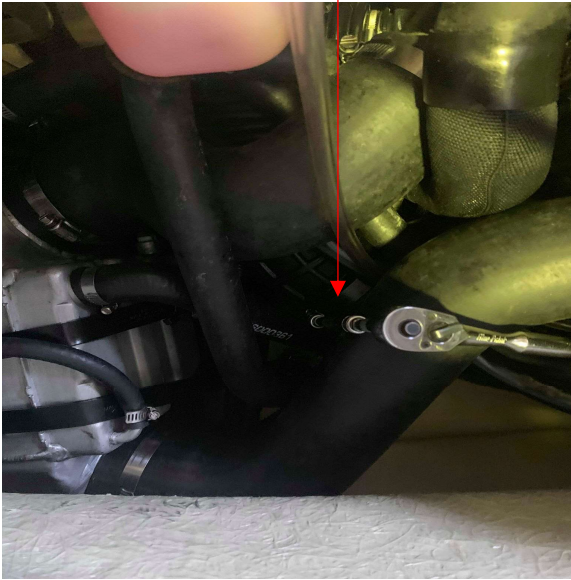

9


Fit supercharger adapter

OF SKI



10

Install the 4-inch adapter using the left threaded hole as per Diagram to the mounting bracket

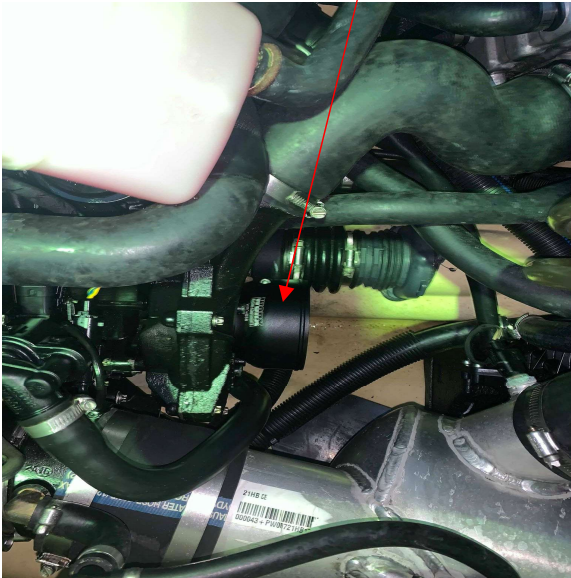



11

Install the Flexible hose to the supercharger adapter



12

Fasten the other side of the flexible hose to the air filter adaptor

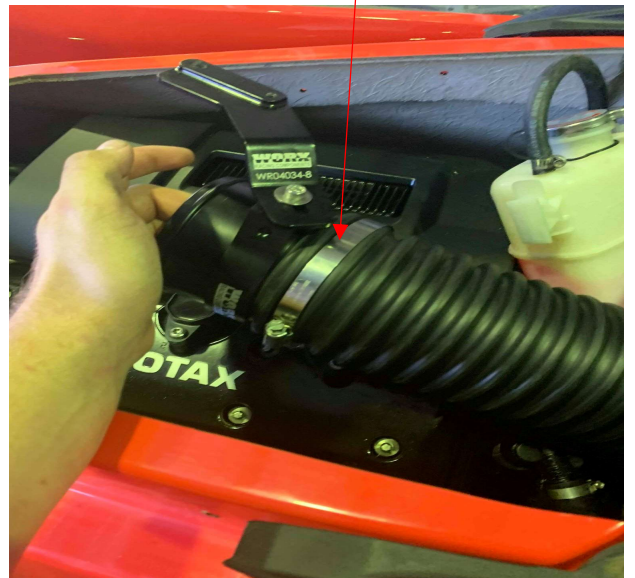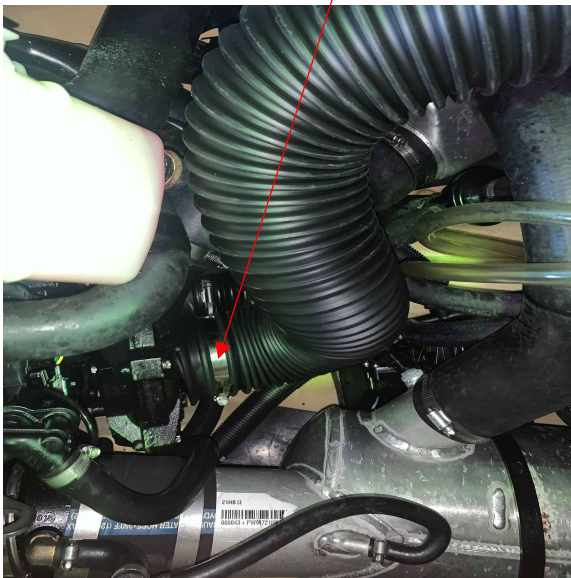

Mount the bracket to the side of ski

hose clamp to the 4inch adapter



Once air filter is fitted
reinstall all plastics

Install the breather filter to the breather hose.
Mount Breather high in the engine bay, do
not twist or restrict this hose.