



WORX RACING Billet Throttle Body Mount

PART # - WR04047

MODELS: Yamaha 1.8 models

INSTALLATION INSTRUCTIONS


- 1- Remove Intake manifold/throttle body from ski as per OEM workshoup manual.
- 2- Working on manifold on the bench. Remove throttle body from OEM rubber mount on manifold by removing 4 nuts and washers. (Retain OEM flat washer) **(PIC 1)**
- 3- Remove OEM throttle body mount from manifold by removing 4 x M8 socket bolts (retain OEM bolts) **(PIC 2)**
- 4- Clean surface and apply small amount of sealant around rubber seal and fit WORX WR04047 mount with using OEM bolts (use loctite) **(PIC 3)**
- 5- Grease and Fit supplied O-ring. **(PIC 5)**
- 6- Fit Throttle body to mount using supplied M8 x 60 Bolts and spring washer also use OEM flat washer **(PIC 6,7,8)**
- 7- Refit manifold to engine as per OEM workshop manual.

Thank you for purchasing **Worx Racing components** products. We firmly believe that **Worx Racing Components** products are among the finest watercraft parts available. A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure. If you have any questions or comments on the performance and/or installation of our products please contact us at the numbers listed on page one or through your local **Worx** dealer.


10B/354 Brisbane Rd Arundel QLD 4214 Phone: +61 7 5563 1031

www.worx.com.au / info@worx.com.au

PIC 1

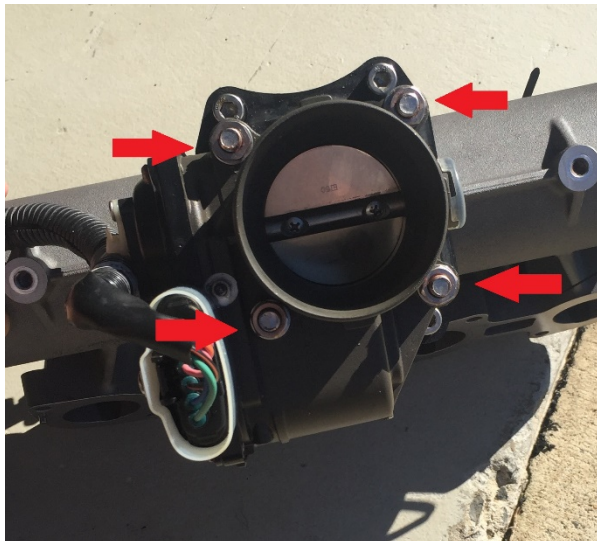


PIC 2

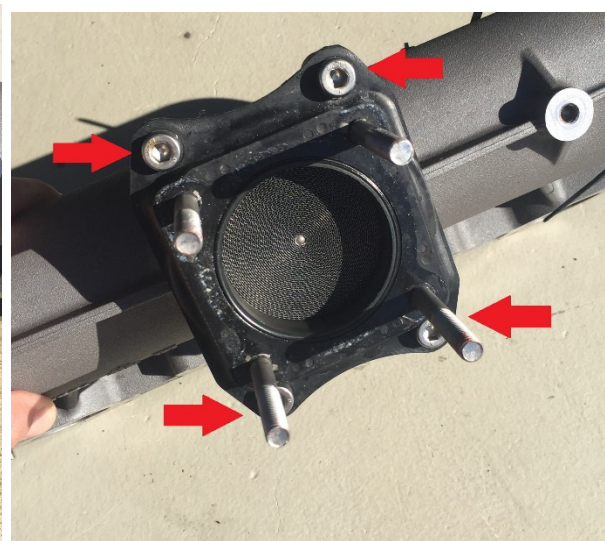


PIC 3



PIC 4

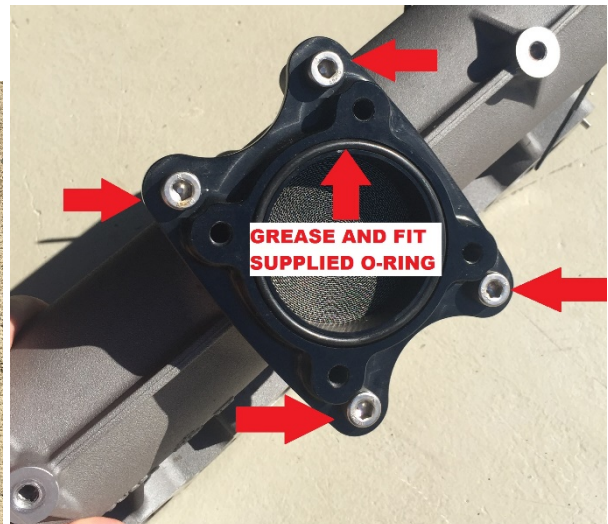

PIC 5

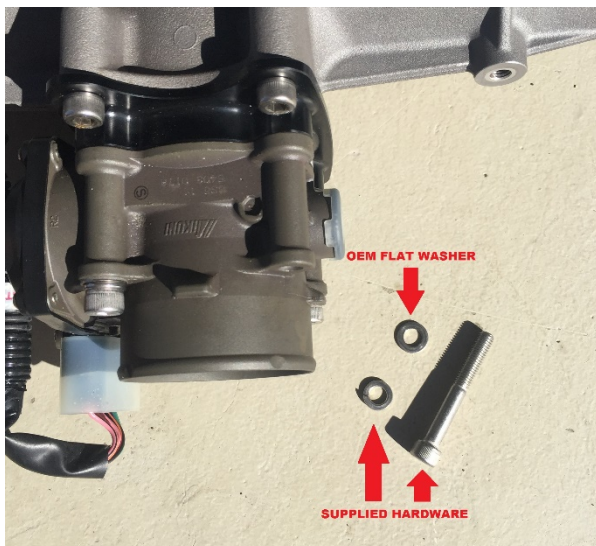

PIC 6



PIC 7

