

## **WORX RACING INTAKE GRATE**

## **PART # - WR245**


## MODELS: YAMAHA 2014+ FZR/FZS SVHO

## IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION

Parts Supplied: 1 x WR245 WORX Intake Grate

- 1. Remove stock intake grate and wipe clean any old silicone.
- 2. Apply Marine sealant to intake grate (see illustration below)
- 3. Fit **Worx** Intake Grate into position using the stock mounting bolts. Apply Blue loctite to bolts and torque to 40 Nm.
- 4 Wipe off excess Marine sealant with a damp cloth. Allow 4-6 hours minimum for sealant to cure before riding.
- 5. Regularly check that all bolts are tight on your intake grate and ride plate.

It is recommended that the pump seal kit P/N WR0706, Marine Sealant must be used to seal rear of intake grate to pump duct to reduce cavitation.

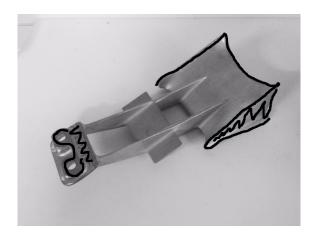

Thank you for purchasing **Worx Racing components** products. We firmly believe that **Worx Racing Components** products are among the finest watercraft parts available. A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure. If you have any questions or comments on the performance and/or installation of our products please contact us at the numbers listed on page one or through your local **Worx** dealer.