



WORX RACING SPONSONS

PART # - WR544


MODELS: YAMAHA SUPERJET

INSTALLATION INSTRUCTIONS

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION

Parts Supplied: 2 x **WORX** adjustable sponsons paddles
 6 x 3/16 x 1 Button head bolts
 6 x 3/16 x 5/8 Flat Washers
 6 x 3/16 Nyloc nut

- 1- Remove the three rear bolts with a Phillips screw driver and 8mm spanner. Install one 3/16 x1 bolt and 3/16 nyloc nut to rear hole and tighten. Mark the 2 forward holes on the outer side of the rail. Using the electric drill with the 3/16" drill bit, drill out the holes marking marked from sponson in the hull side rail.
- 2- Fit the WORX sponsons using the 8 x 3/16" x 1 Allen head bolts and the flat washers with 3/16 nyloc nuts. Apply a small amount of the blue loctite to each bolt. Be careful to start all of the bolts into the sponsons before you tighten
- 3- **Warning:** These sponsons will vastly improve the turning capability of your boat!
Take time to get used to them before you attempt any hard cornering.

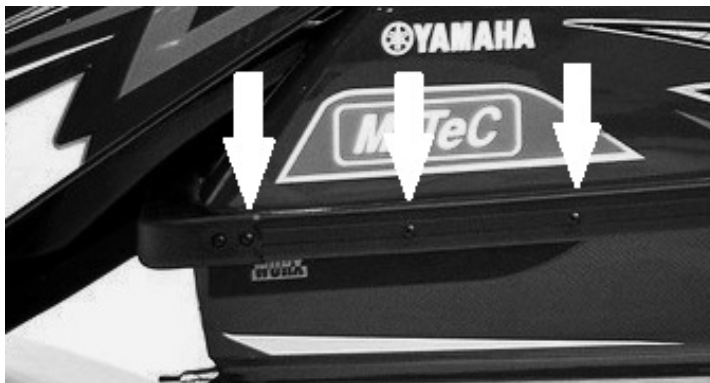

Thank you for purchasing **WORX Racing Components** products. We firmly believe that **WORX Racing Components** products are among the finest watercraft parts available. A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure. If you have any questions or comments on the performance and/or installation of our products please contact us at the numbers listed on page one or through your local **WORX** dealer.

10B 354 Brisbane Rd Arundel QLD 4214 Phone: +61 7 5563 1031

www.worx.com.au / info@worx.com.au
