



# ASSEMBLY INSTRUCTION FOR JW0347 P1

## Tribesigns Shelf

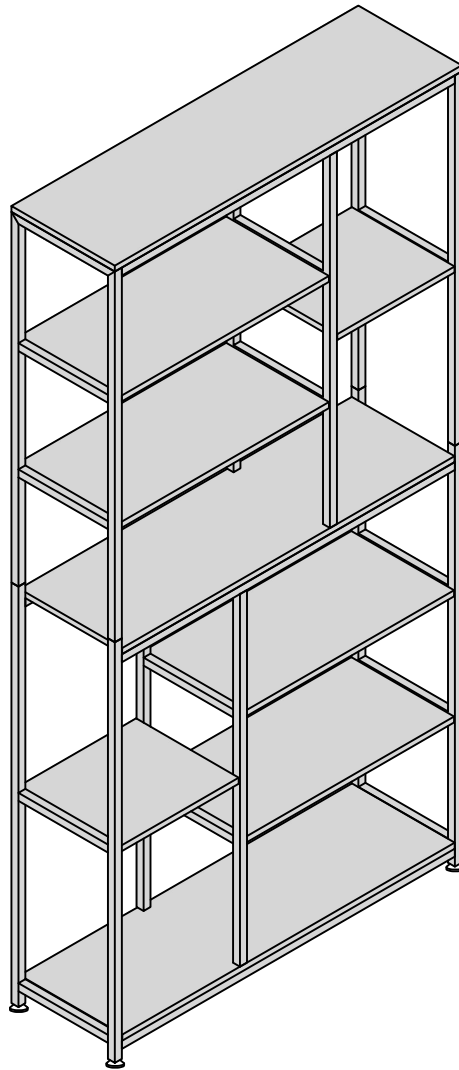


**Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together**

1

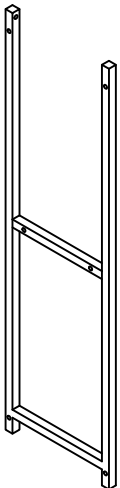


1PCS

2

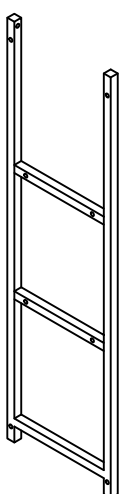


1PCS

3

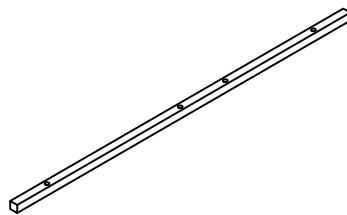





4PCS





4

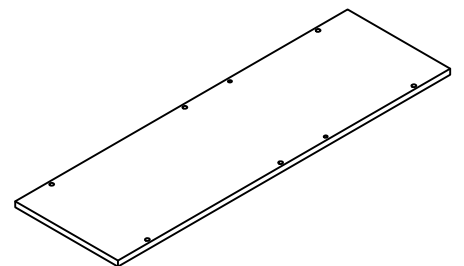





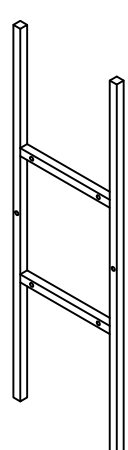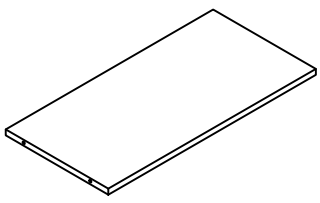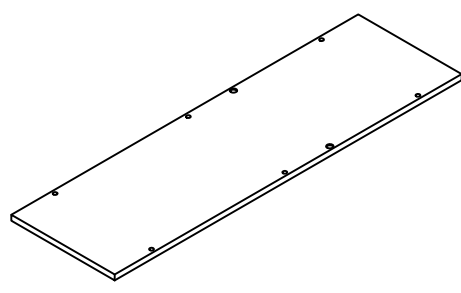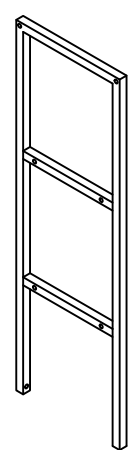

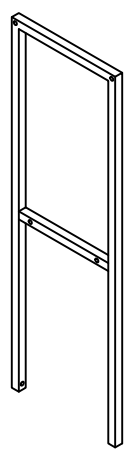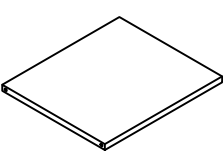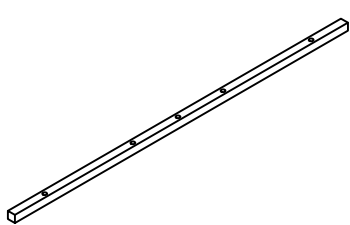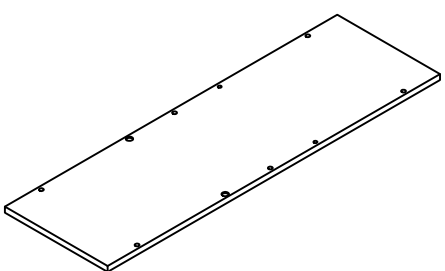

1PCS


# ASSEMBLY INSTRUCTION FOR JW0347 P2

<p>5</p>  <p>2PCS</p>	<p>6</p>  <p>4PCS</p>	<p>7</p>  <p>1PCS</p>	<p>8</p>  <p>1PCS</p>
--	--	---	--




<p>9</p>  <p>1PCS</p>	<p>10</p>  <p>2PCS</p>	<p>11</p>  <p>2PCS</p>	<p>12</p>  <p>1PCS</p>
--	---	---	---

<p><b>B</b></p>  <p>M7X50 24PCS</p>	<p><b>F</b></p>  <p>M6X30 18PCS</p>	<p><b>G</b></p>  <p>M6X35 16PCS</p>	<p><b>I</b></p>  <p>M6X50 4PCS</p>
--	--	--	---


<p><b>X</b></p>  <p>4PCS</p>	<p><b>Y</b></p>  <p>M8 4PCS</p>	<p><b>Z</b></p>  <p>2PCS</p>	<p><b>N</b></p>  <p>M6X10 8PCS</p>
---	--	---	---

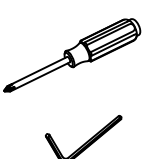



# ASSEMBLY INSTRUCTION FOR JW0347 P3


Y	 4PCS
1	 1PCS
2	 1PCS

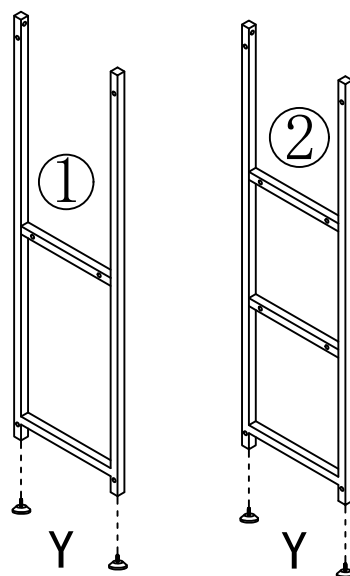
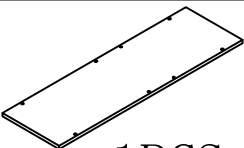
Step1




G	 4PCS
3	 2PCS

Step2

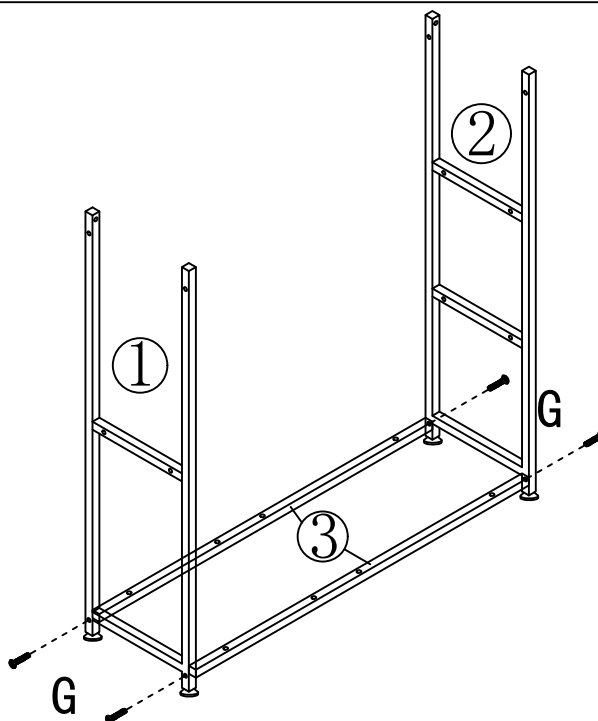



F	 6PCS
4	 1PCS


Step3

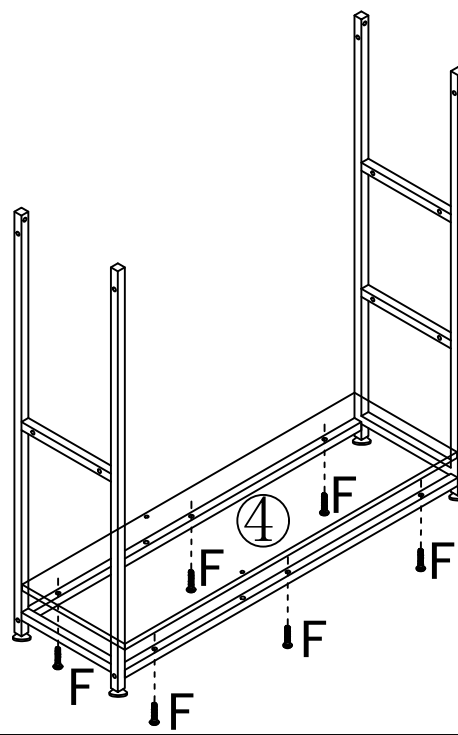
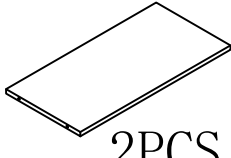


# ASSEMBLY INSTRUCTION FOR JW0347 P4


1		2PCS
5		1PCS


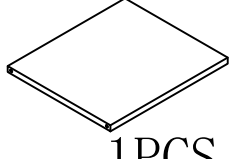
Step4

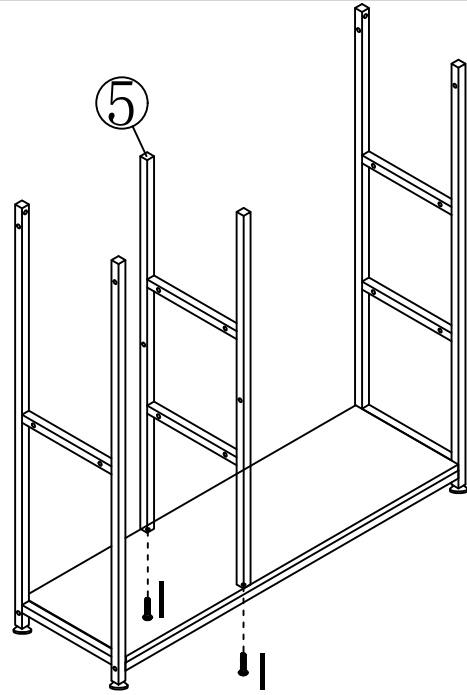


B		8PCS
6		2PCS

Step5

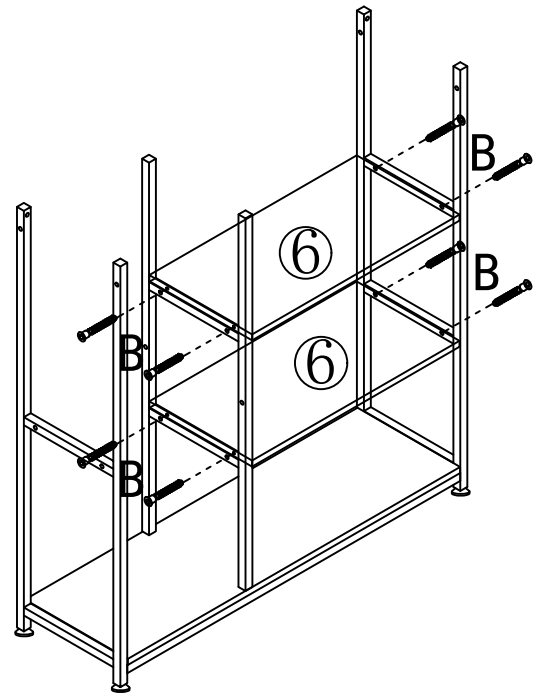



B		4PCS
10		1PCS

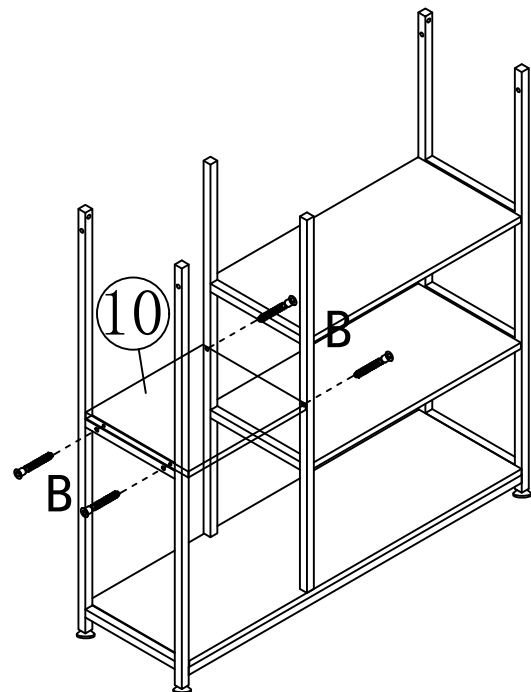
Step6






# ASSEMBLY INSTRUCTION FOR JW0347 P5


N	 4PCS
X	 4PCS

Step7

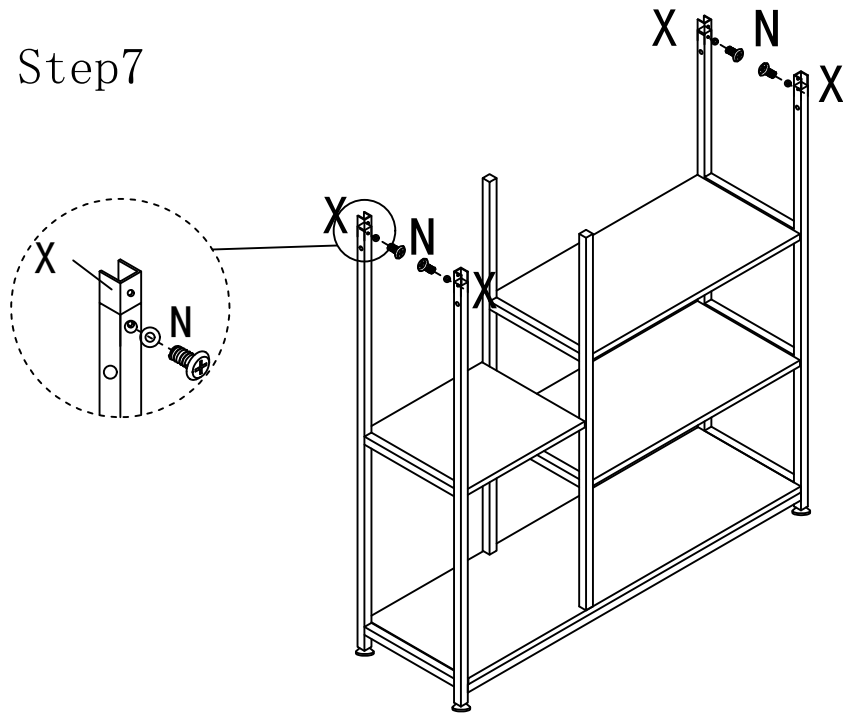



N	 4PCS
8	 1PCS
9	 1PCS

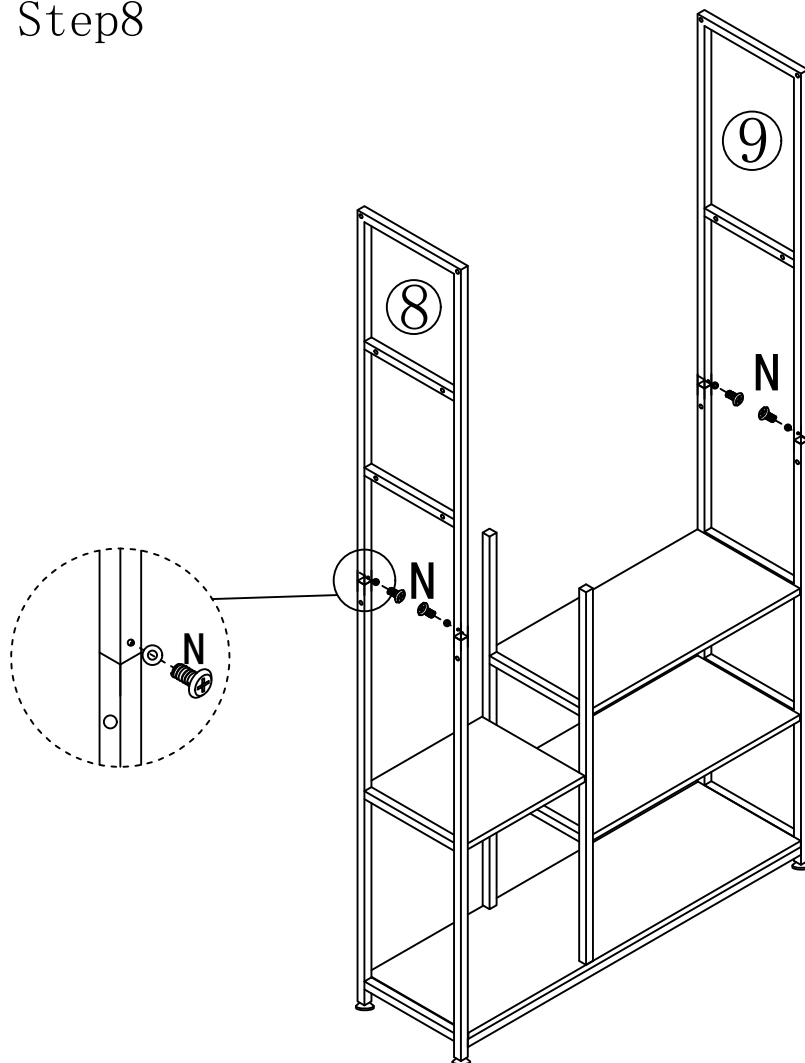
Step8


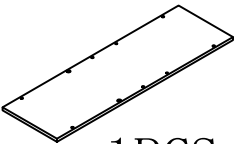


# ASSEMBLY INSTRUCTION FOR JW0347 P6


G	 6PCS
11	 2PCS

Step9

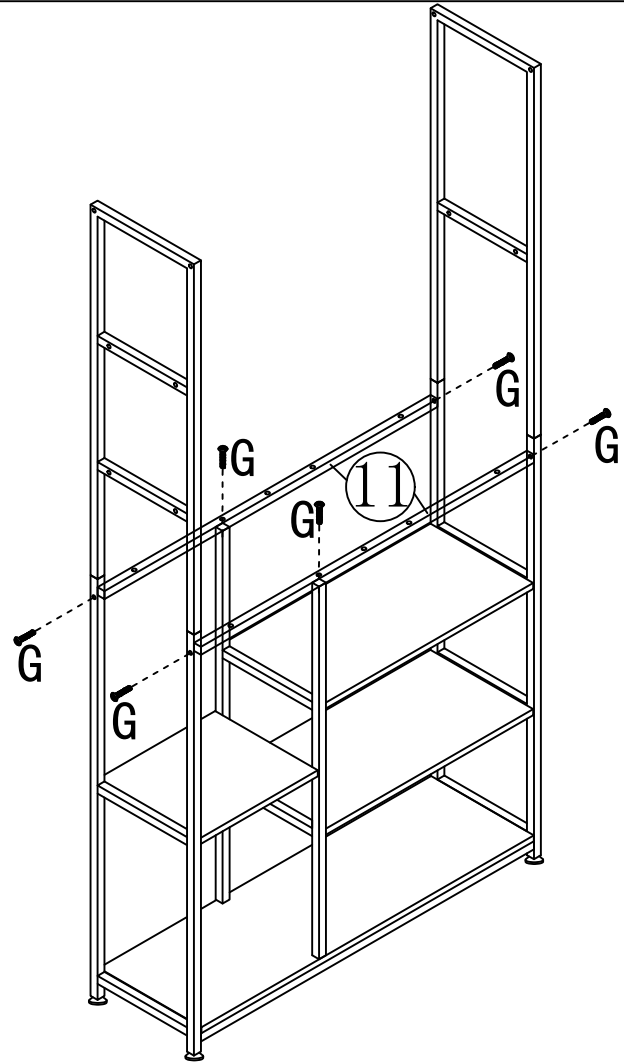



F	 6PCS
12	 1PCS


Step10

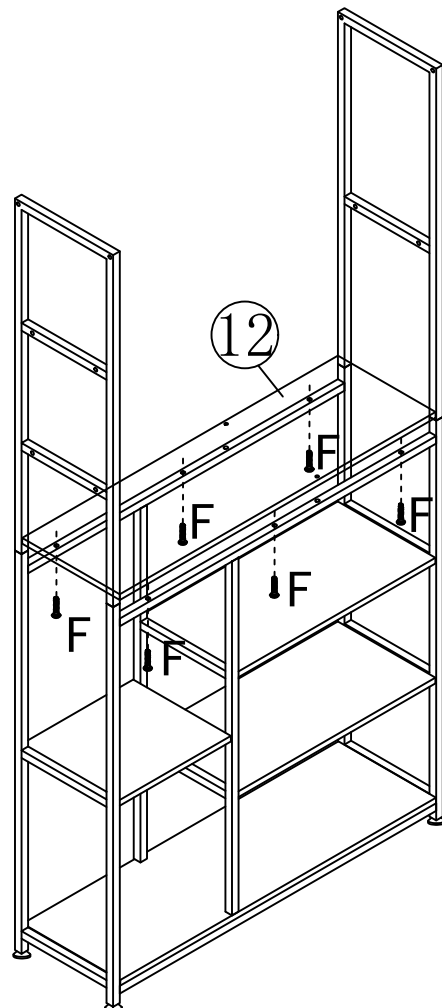
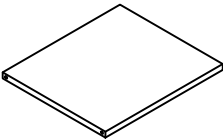


# ASSEMBLY INSTRUCTION FOR JW0347 P7


1	 2PCS
5	 1PCS

Step11

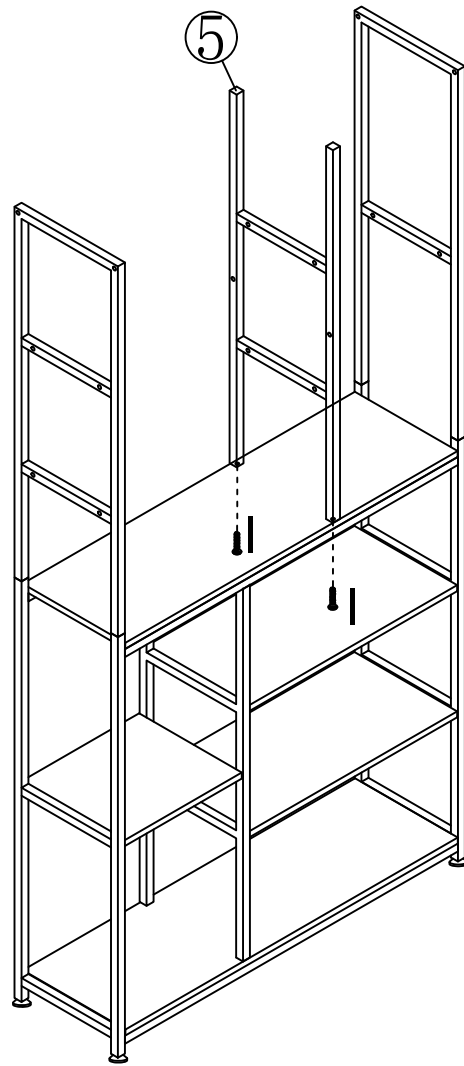



B	 4PCS
10	 1PCS

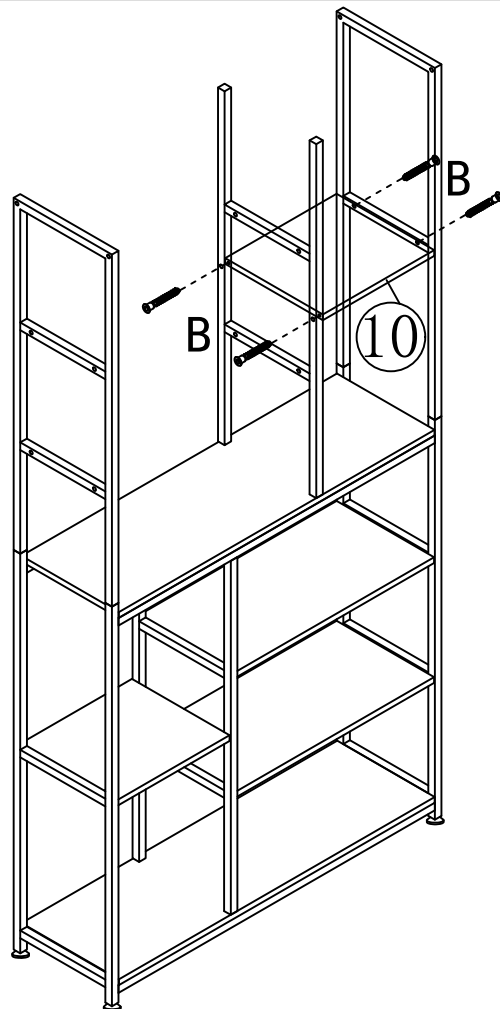
Step12


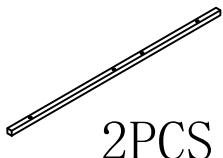


# ASSEMBLY INSTRUCTION FOR JW0347 P8


B		8PCS
6		2PCS

Step13

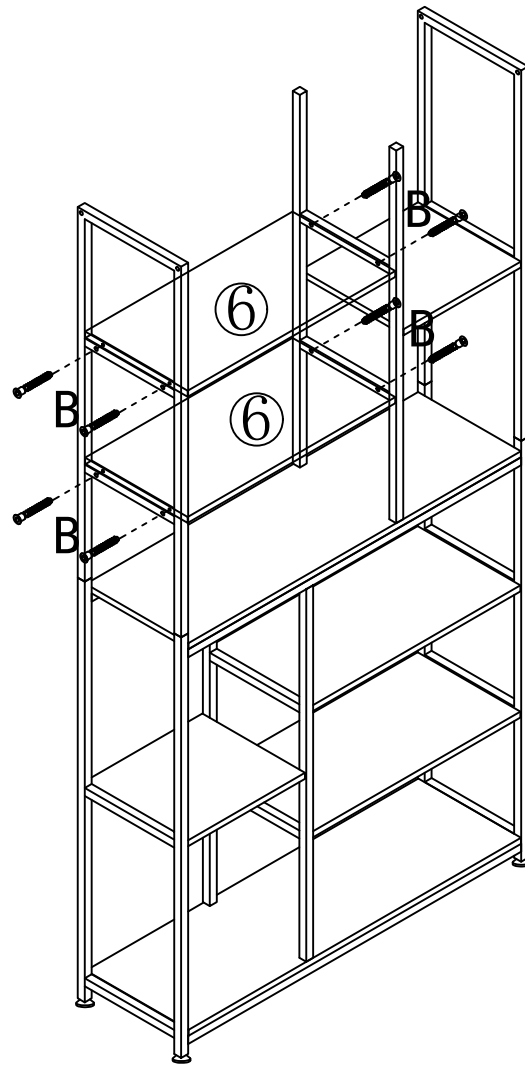


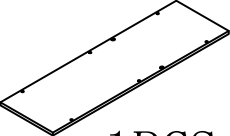
G		6PCS
3		2PCS

Step14

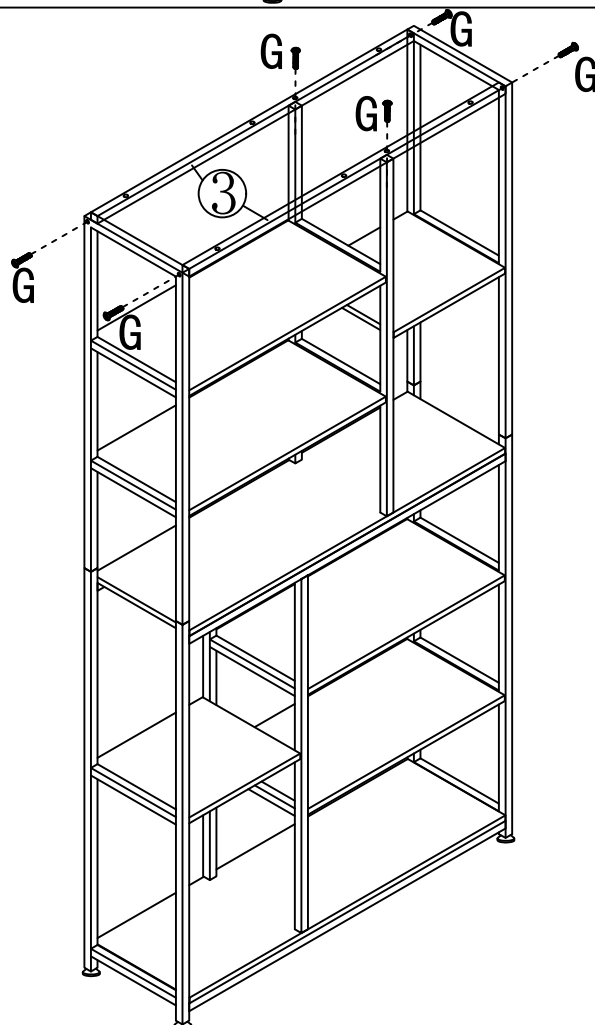





# ASSEMBLY INSTRUCTION FOR JW0347 P9

F	 6PCS
7	 1PCS


Step15

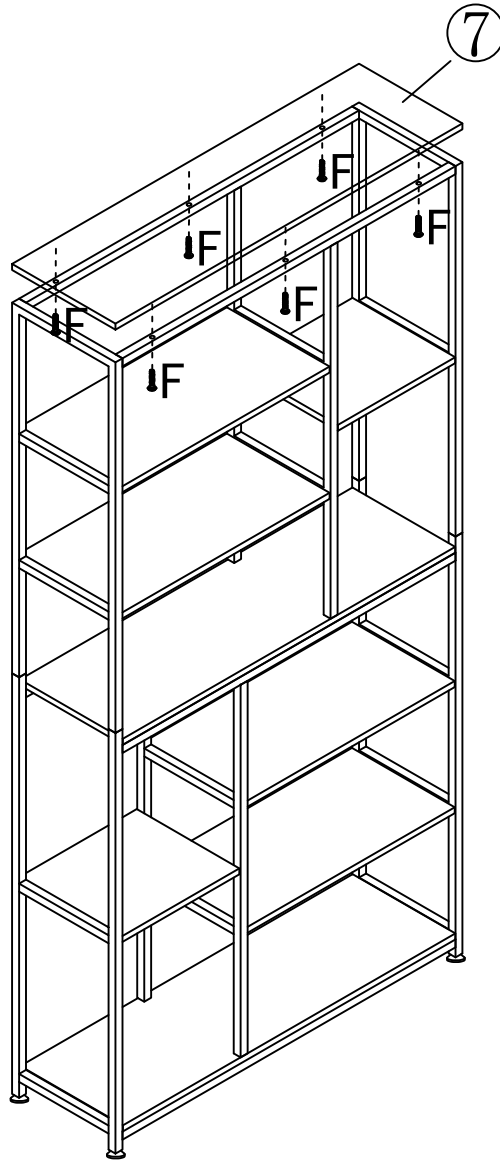

# ASSEMBLY INSTRUCTION FOR JW0347 P10

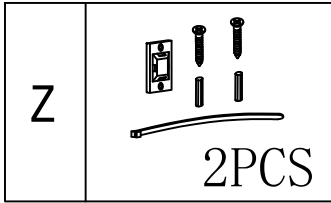

Step16

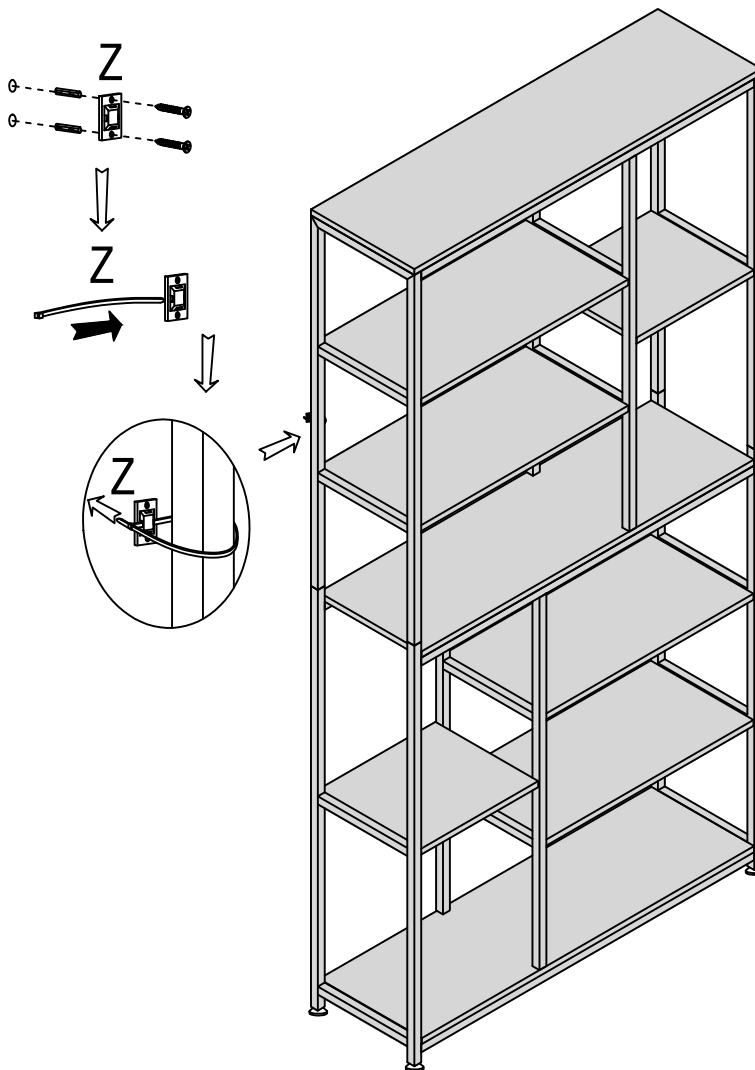

Thanks for choosing Tribesigns File cabinets , your satisfaction is our priority.  
If you have any installation problems or any damages caused by shipping, feel free to contact us at " support@tribesigns.com", our friendly customer service will solve problem for you  
www.tribesigns.com