




DESIGNED FOR LIFE

Assembly Instructions

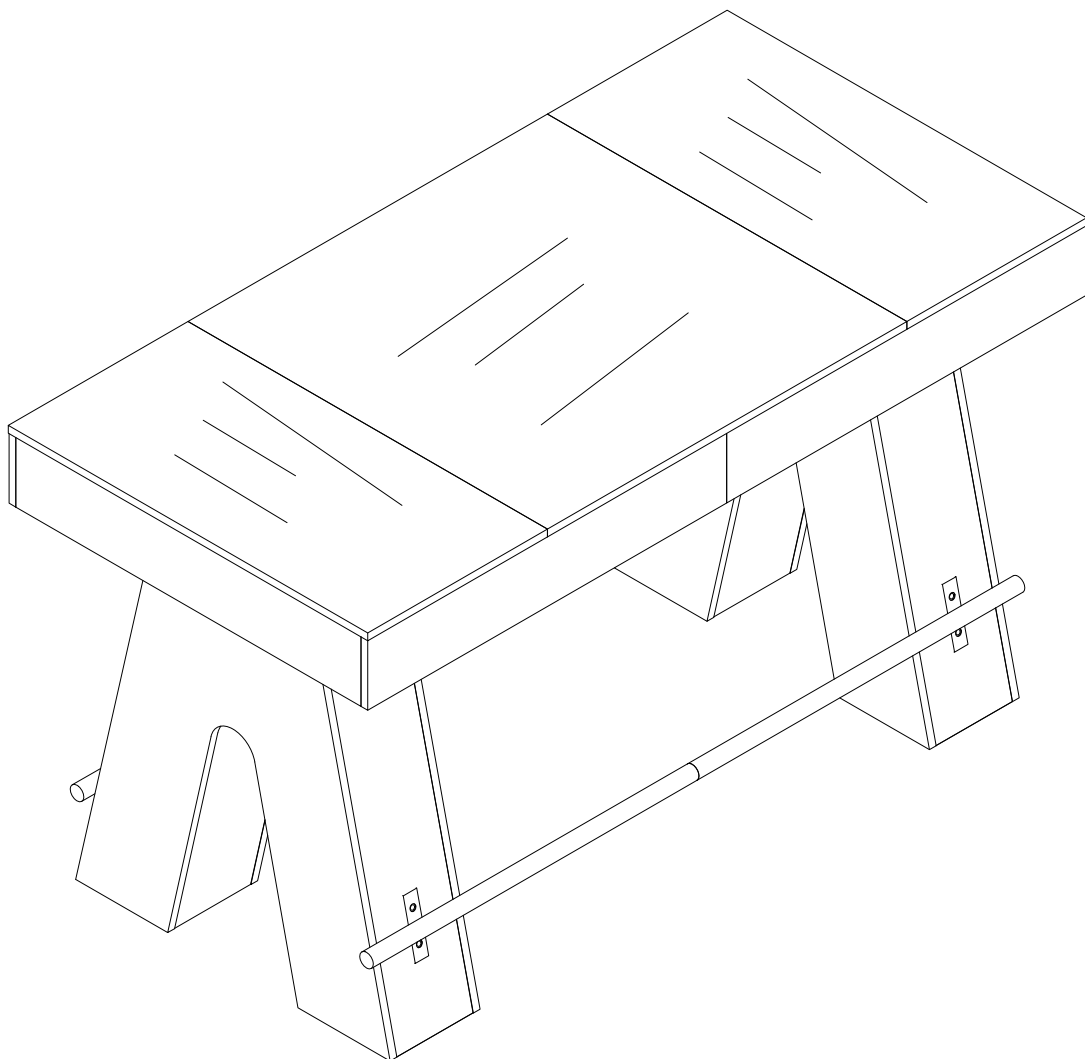

Bar Table

Model No.
HOGA-JW0972/JW1076



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1

Scan the QR code.



Installation Video




Step2

Search with the Model No.
(on the bottom left corner of the title page)




HOGA-JW0972
JW1076

Note: If you can't find the assembly video, please contact us.

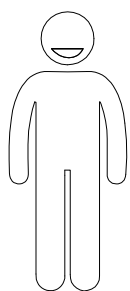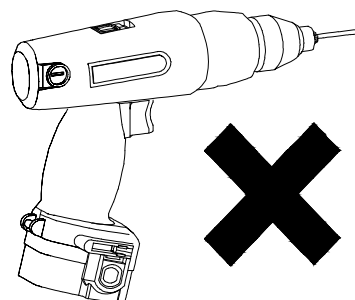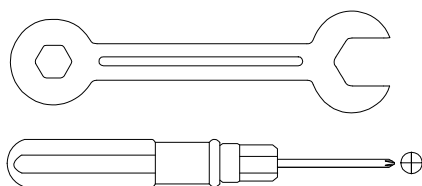**X2**



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

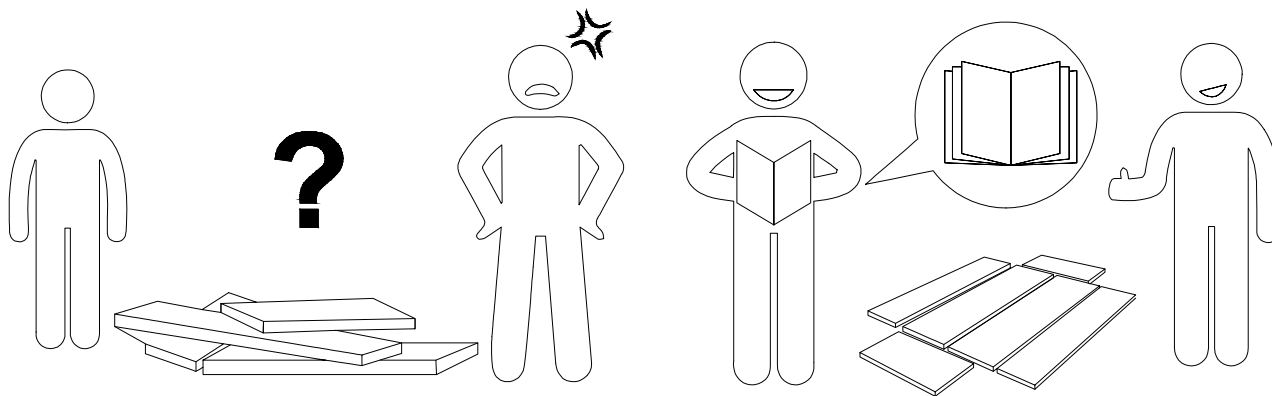

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

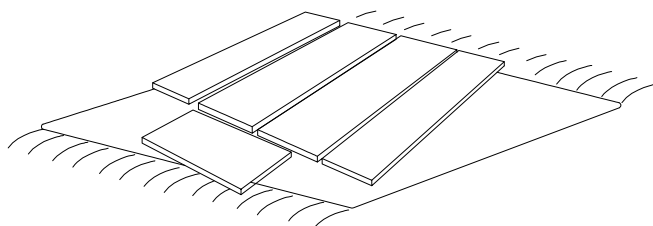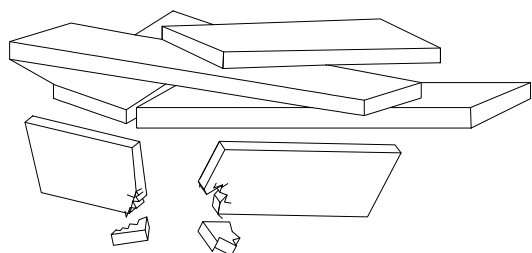

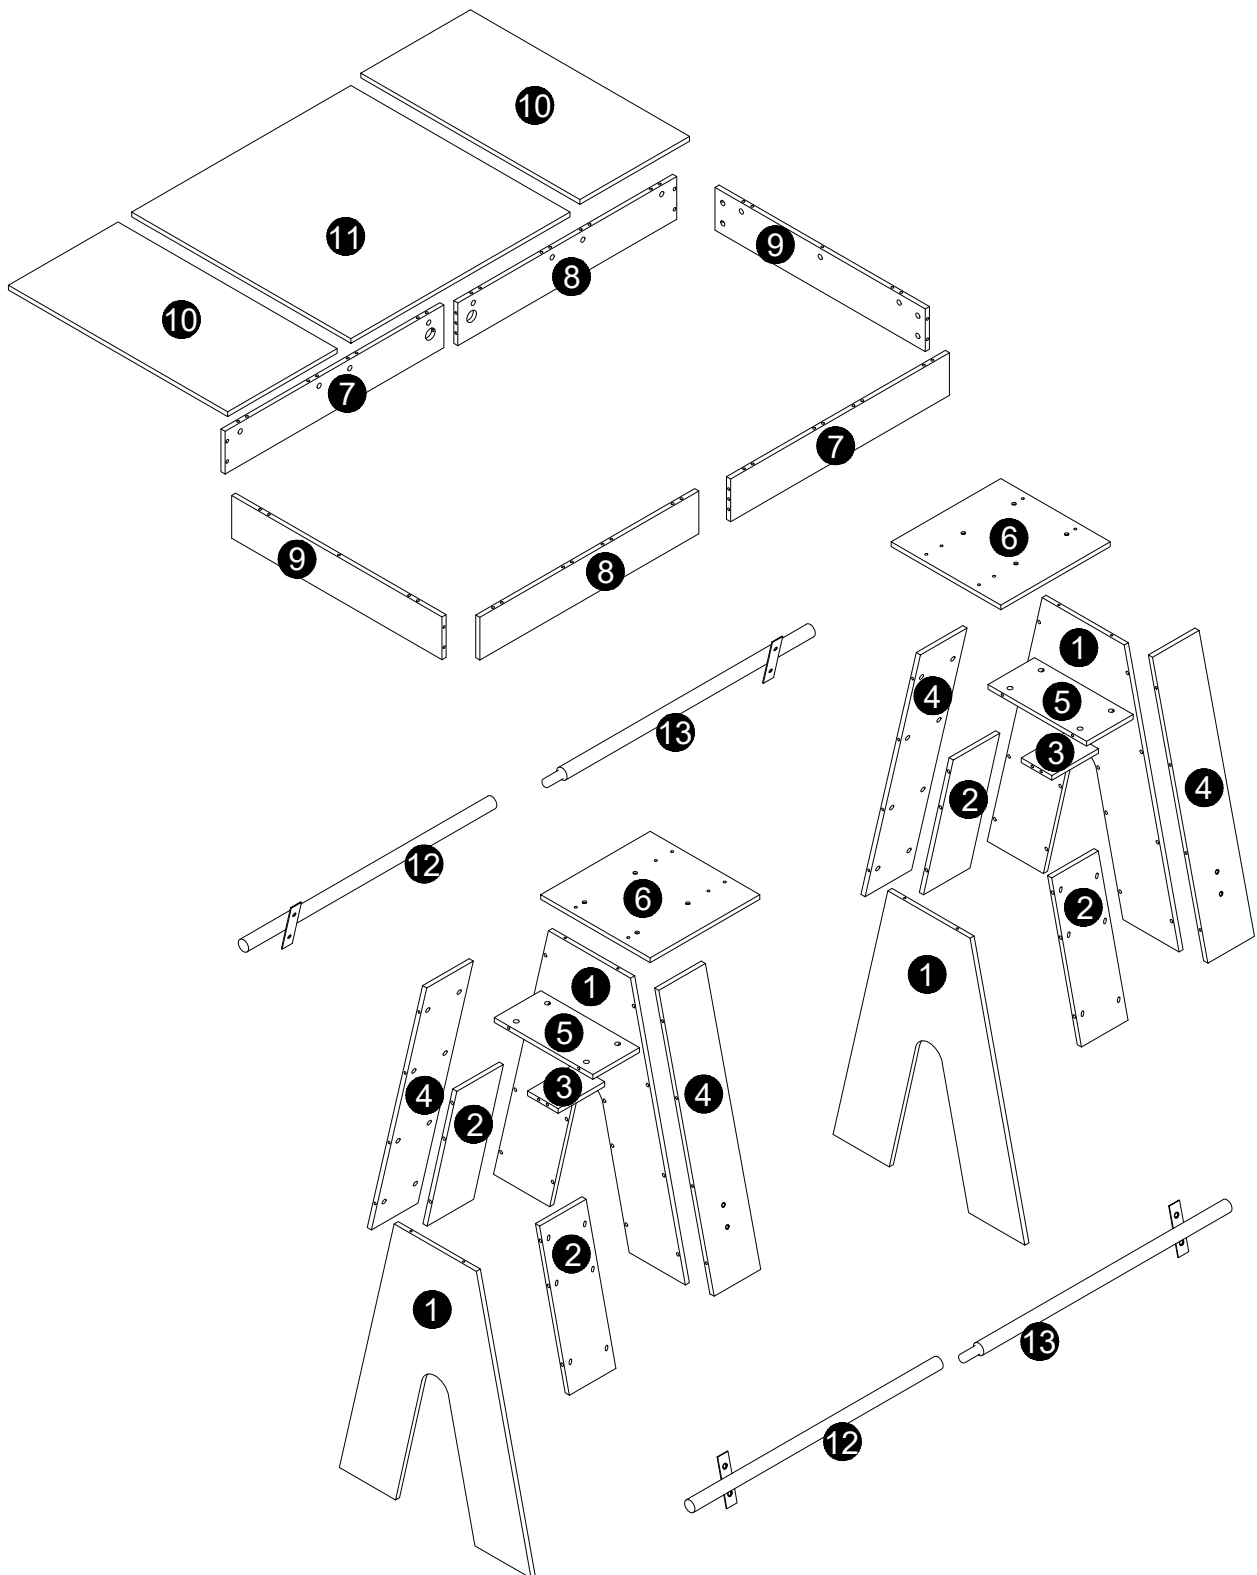**⚠ Caution**

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.









Parts List

1 4 pcs	2 4 pcs	3 2 pcs	4 4 pcs	5 2 pcs
6 2 pcs	7 2 pcs	8 2 pcs	9 2 pcs	10 2 pcs
11 1pc	12 2 pcs	13 2 pcs		



Hardware List

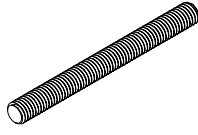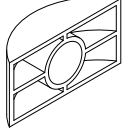A	B	C	D	E	F
 M6x35mm	 Ø15x12mm	 Ø8x30mm	 Ø8x40mm	 M6x100mm	
102 pcs	102 pcs	20pcs	4 pcs	2 pc	4 pcs

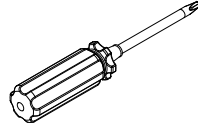
G	H	I	J	K	L
 M6mm	 M6x20mm	 M7x38mm		 Screwdriver	 M6mm
4 pcs	12 pcs	8 pcs	8 pcs	1 pc	2 pcs

M					
 M6x12mm					
12 pcs					




Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

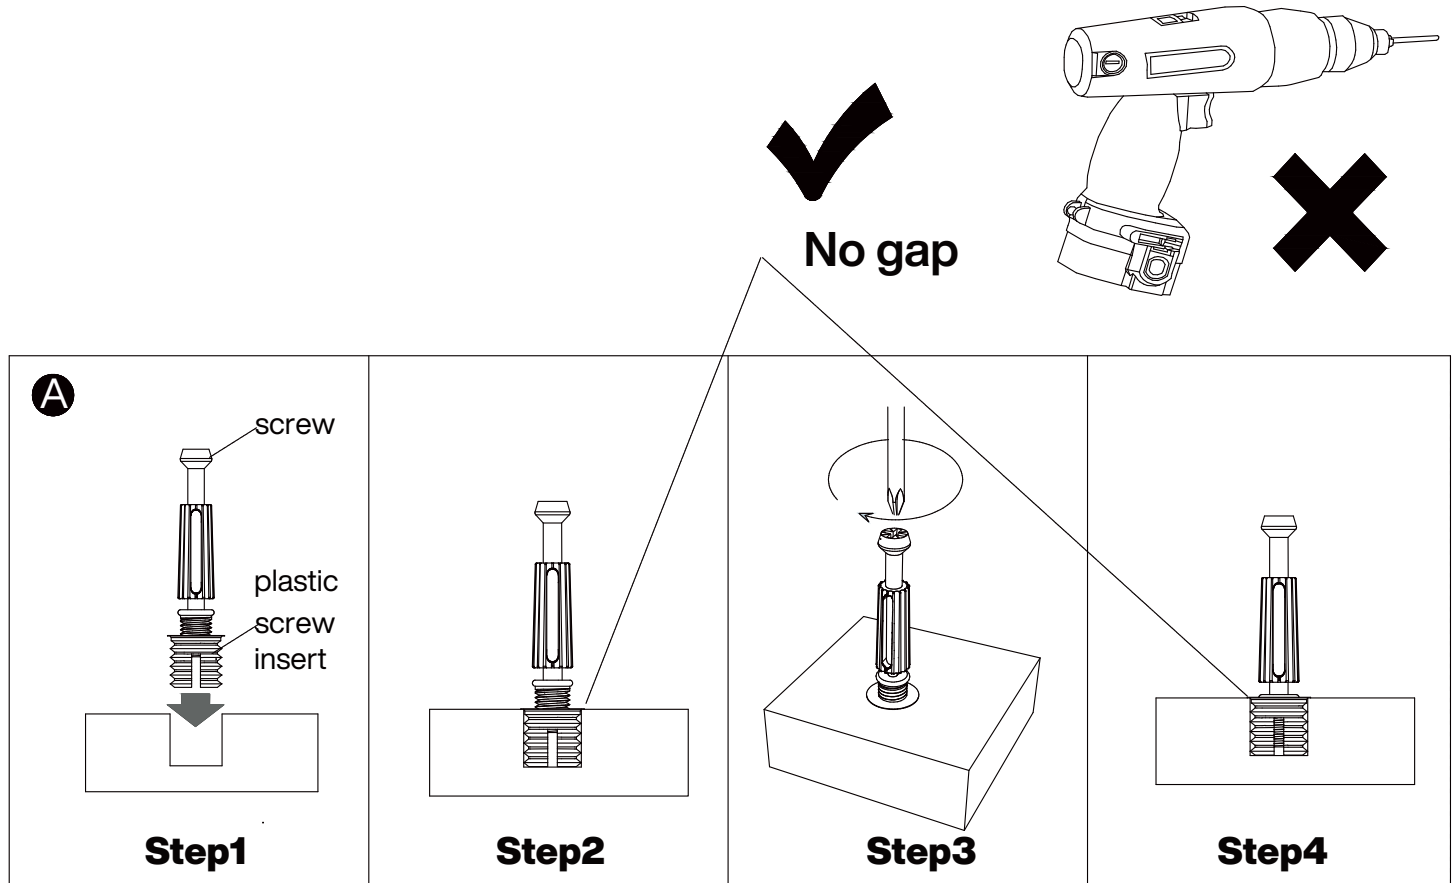


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

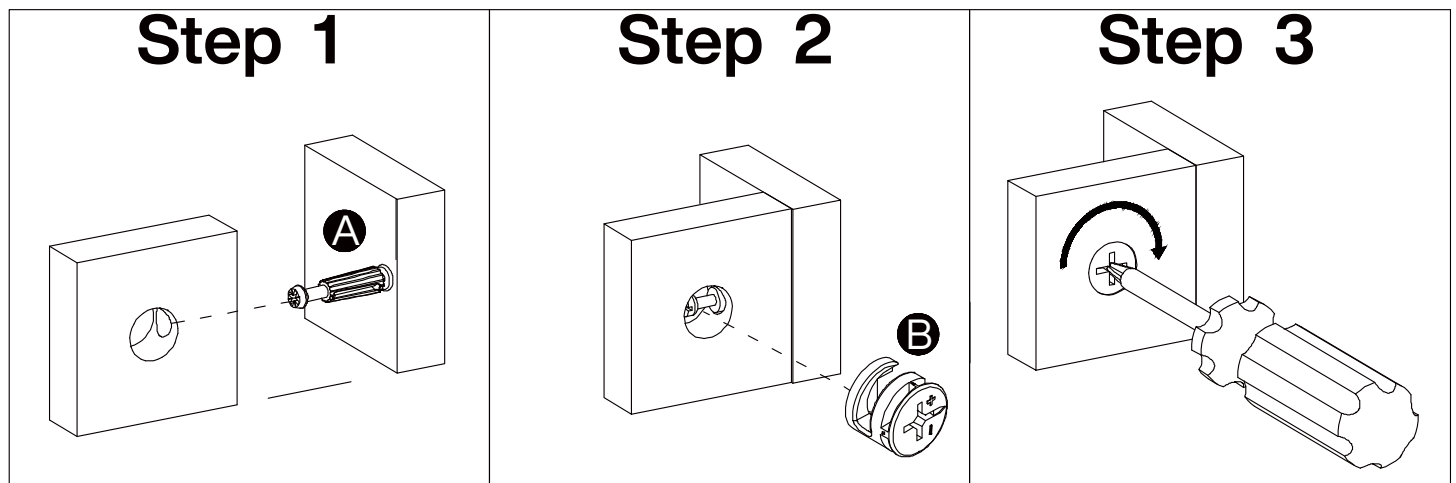




1

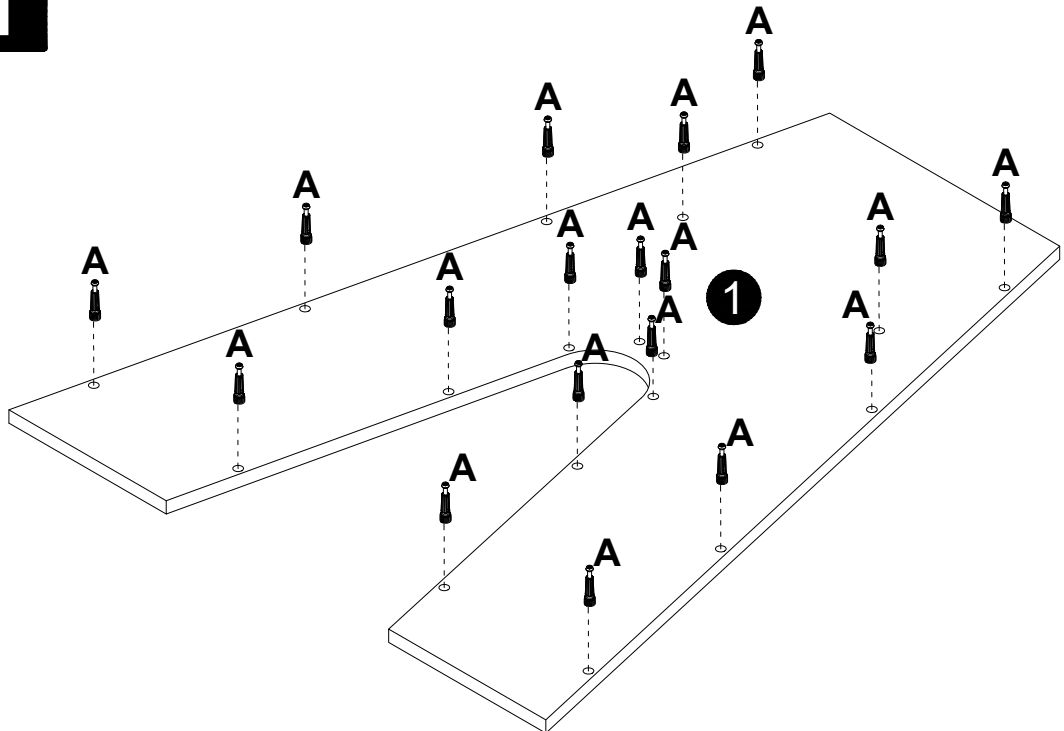

A


M6x35mm
72pcs

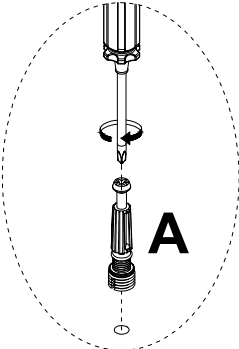


x4

2


Step 1




Step 2




Step 3

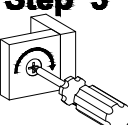

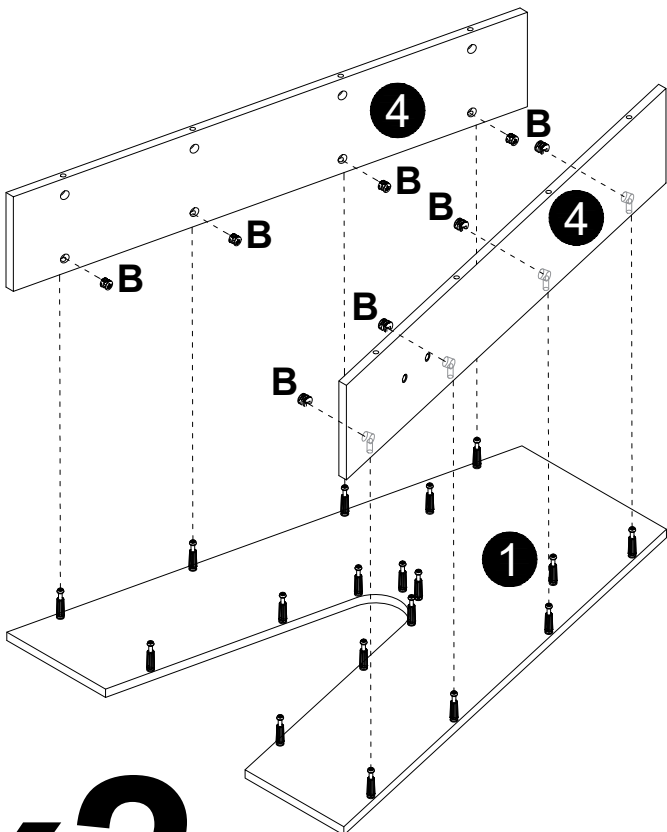


B

Ø15x12mm
16pcs

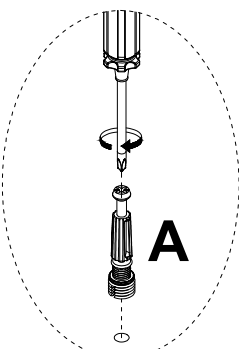


x2

3

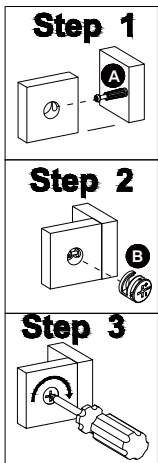


x2

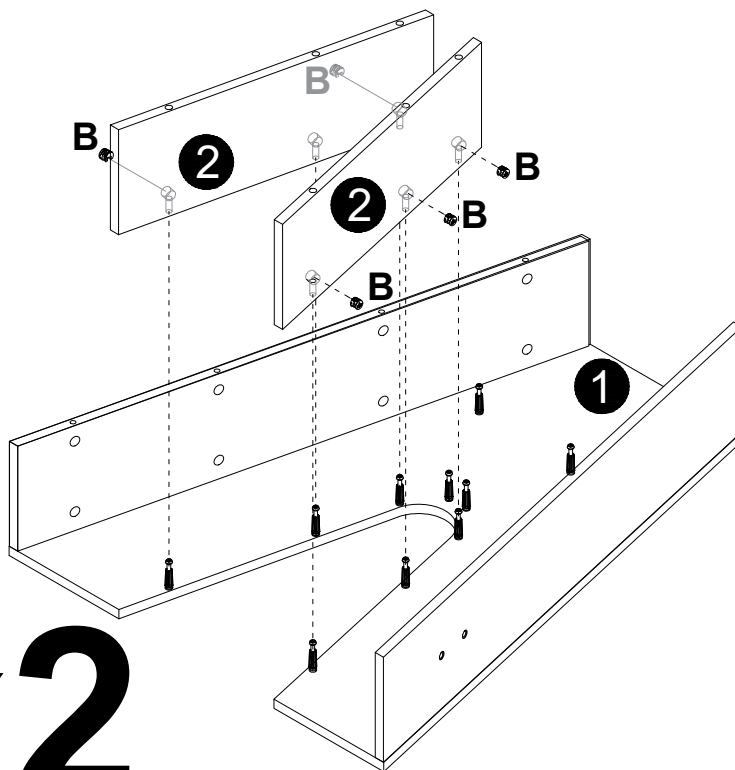


B
Ø15x12mm
12pcs


4

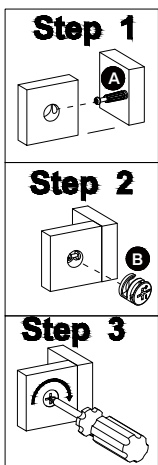

x2

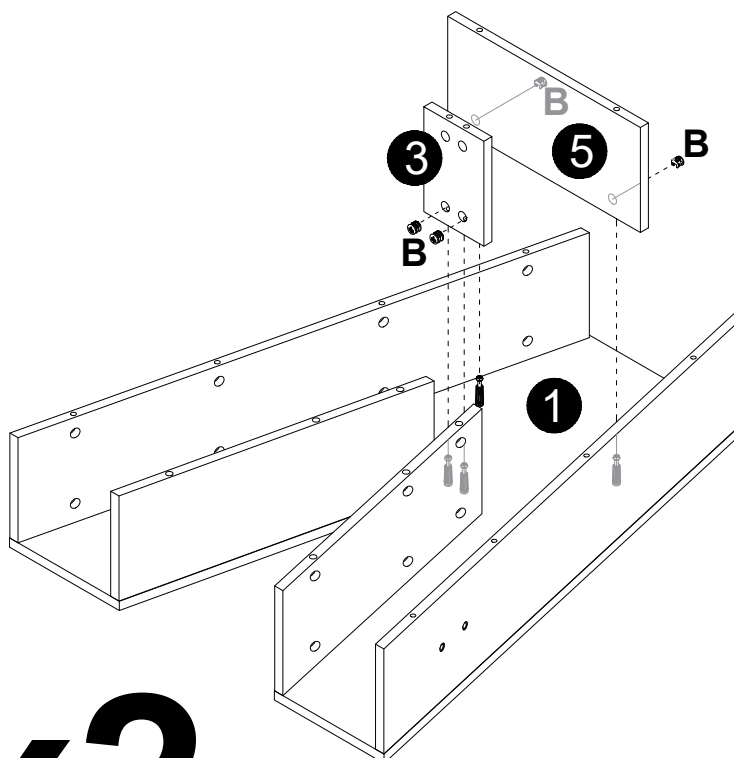


B
Ø15x12mm
8pcs

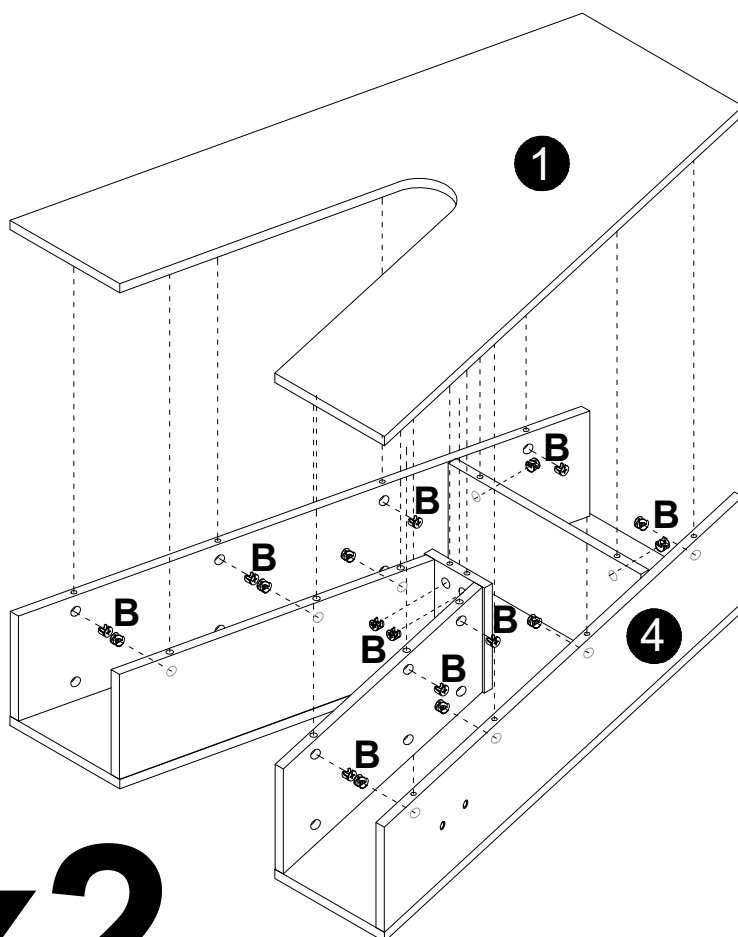
**5****B**

Ø15x12mm

36pcs

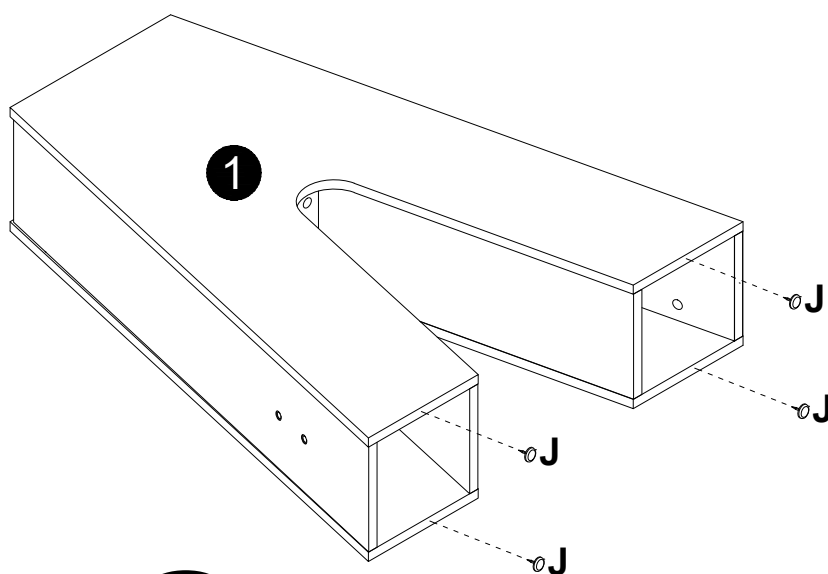x2**6****J**


8 pcs

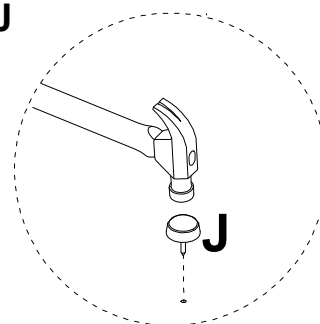x2**⚠ Caution! Tap lightly**




7

x2

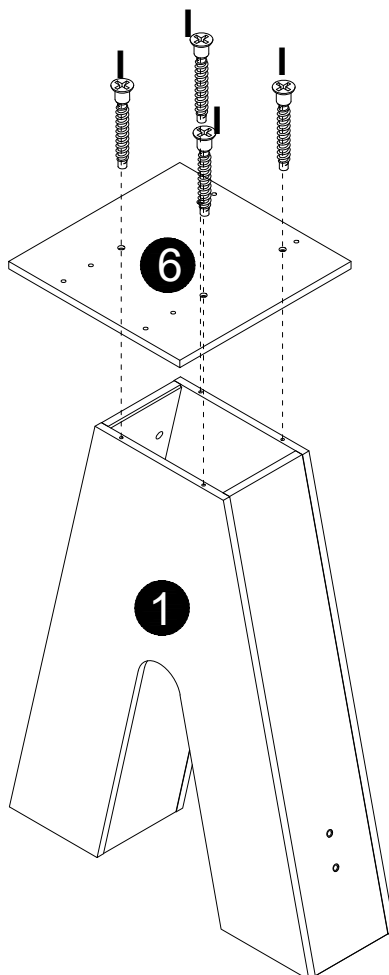


I

Ø7x38mm
8pcs

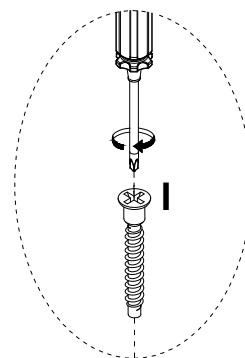

8

x2

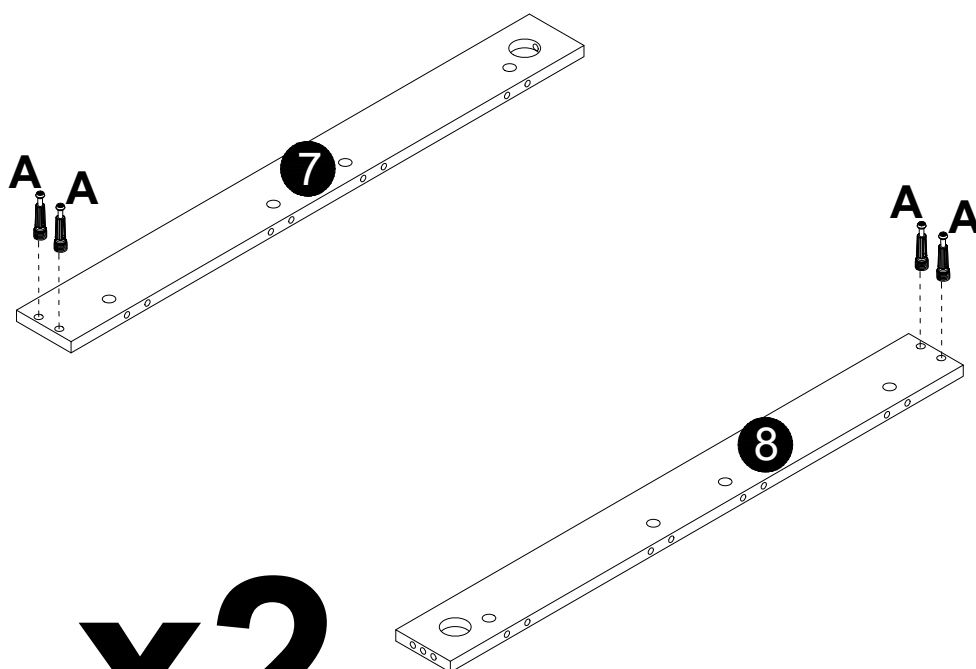



A

M6x35mm
8pcs





9

E	F
 M6x100mm 2 pcs	 4 pcs
G	D
 M6mm 4 pcs	 M8x40mm 4 pcs

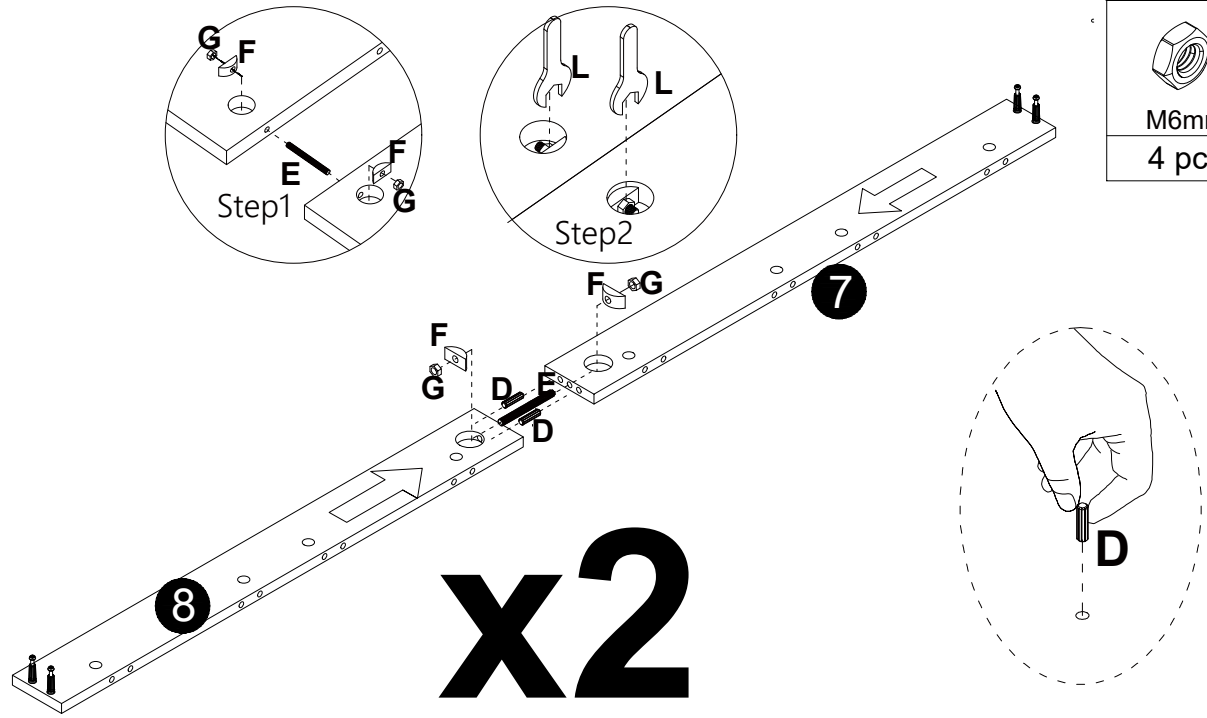


10


B
 Ø15x12mm 8 pcs

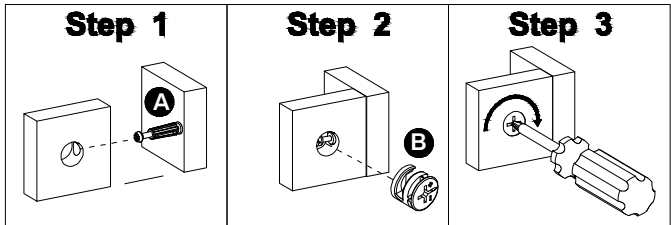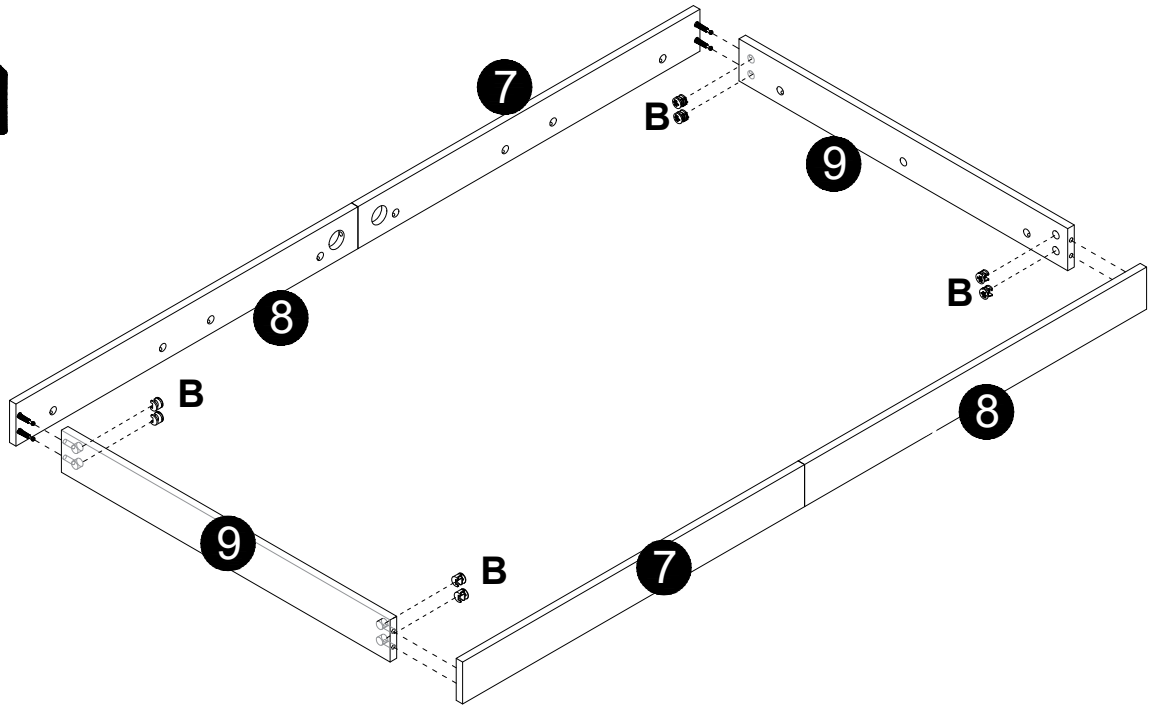



11


A	C
	
M6x35mm	M8x30mm
14pcs	12pcs

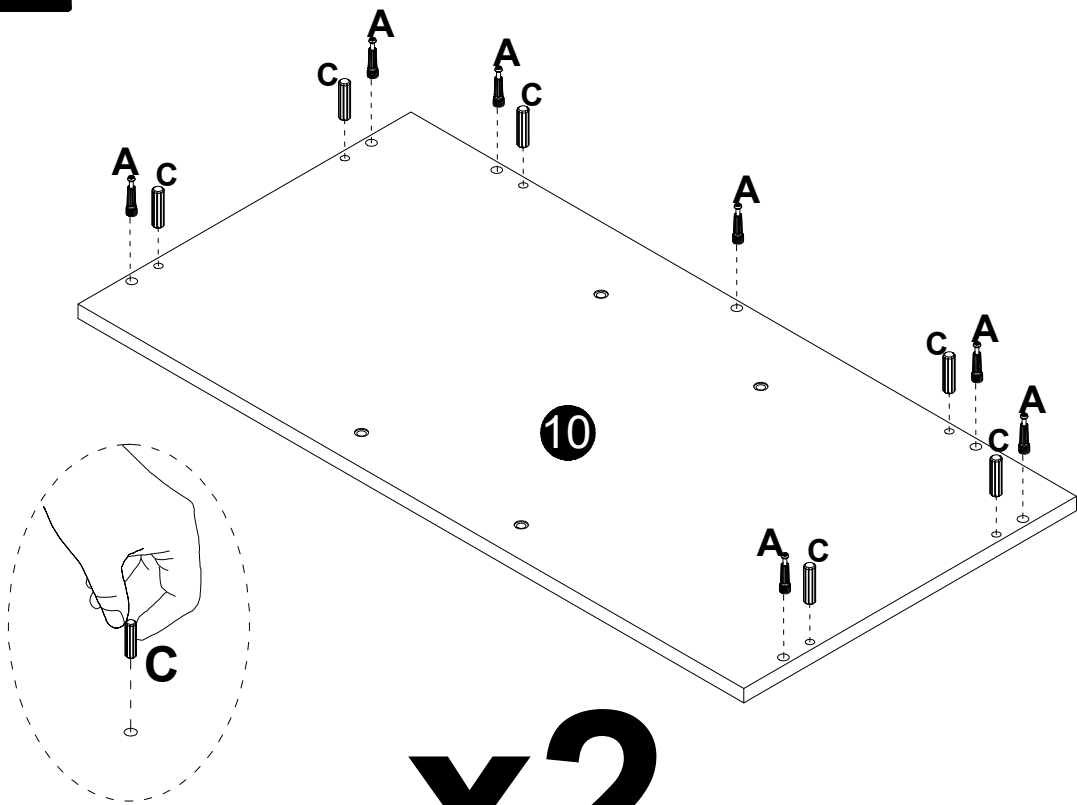

x2



12

A	C
	
M6x35mm	M8x30mm
8pcs	8pcs

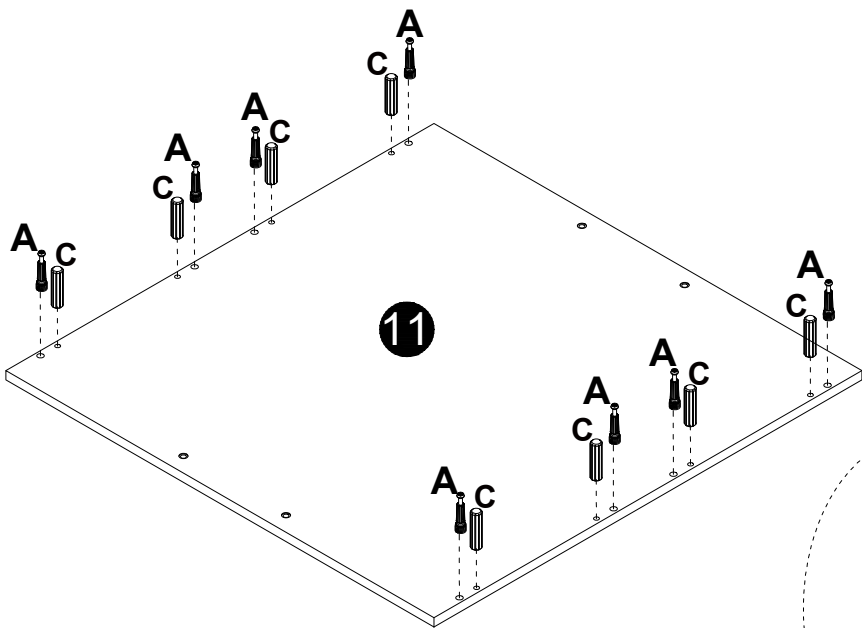




13

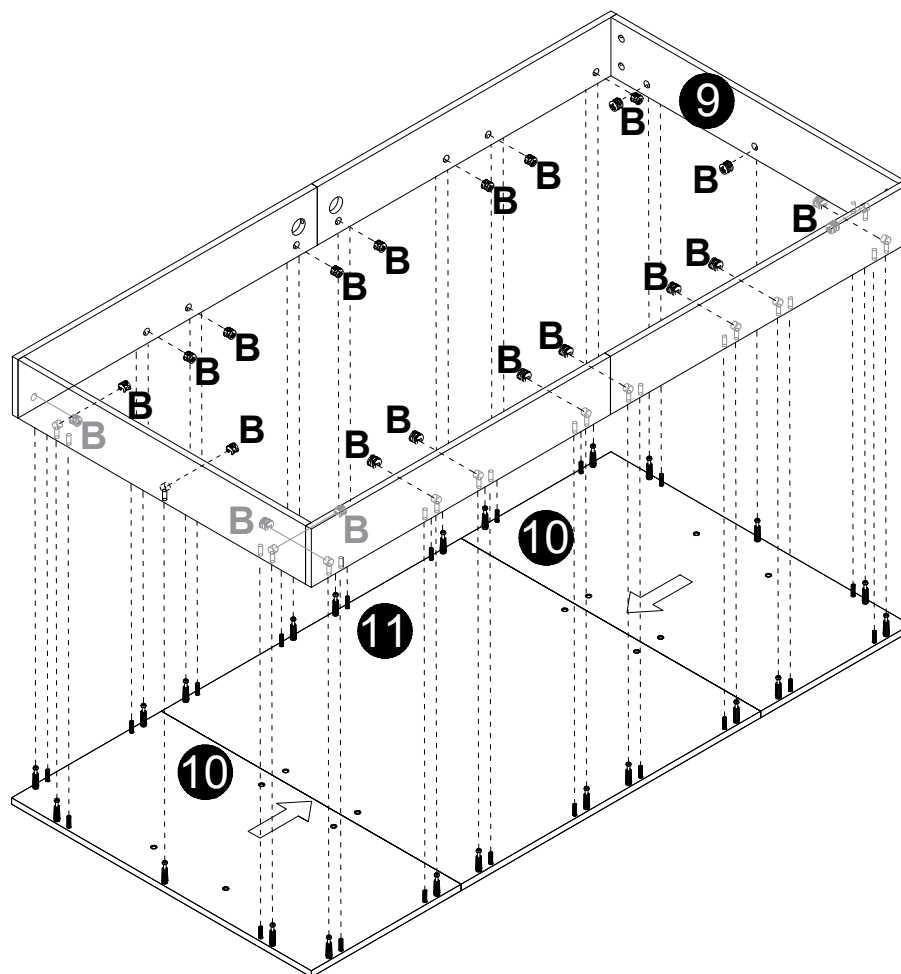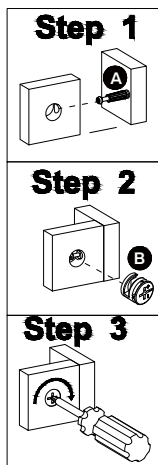

B

Ø15x12mm
22pcs

14

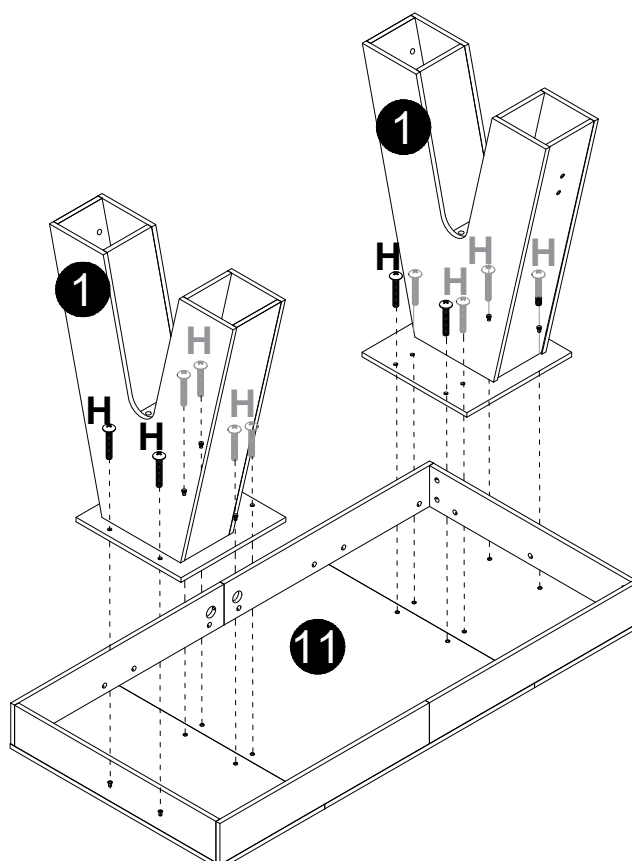

H


M6x20mm
12pcs



15

M


M6x12mm
4pcs

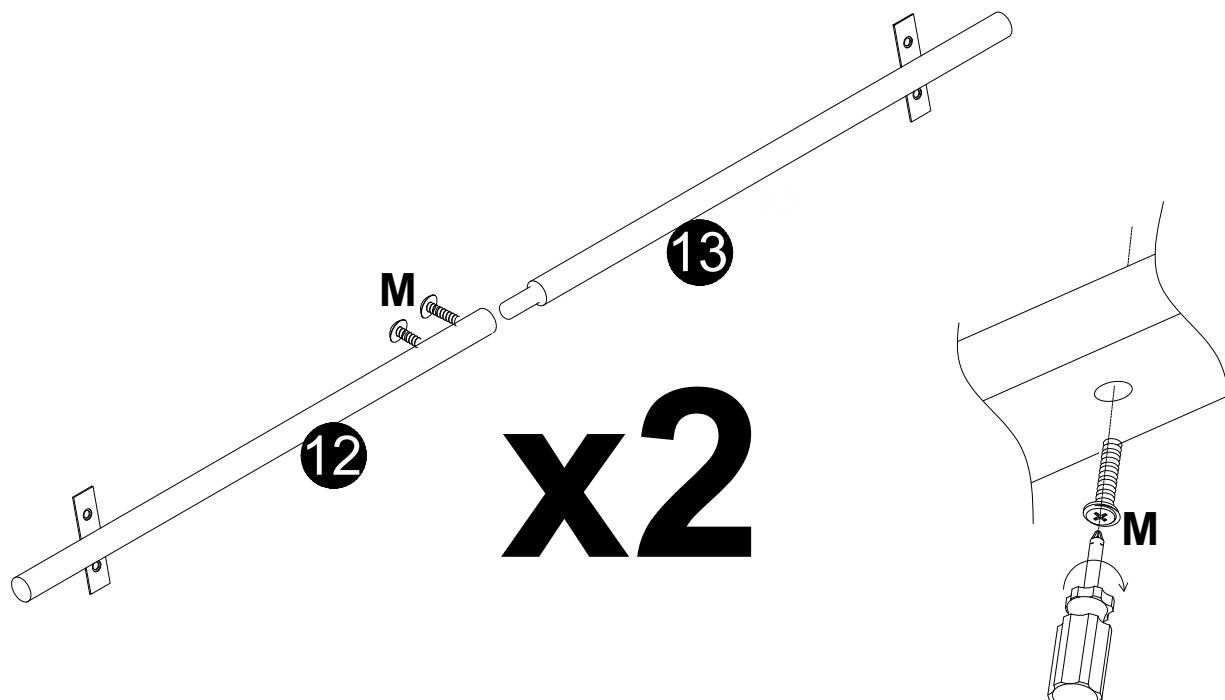

16

M


M6x12mm
8pcs

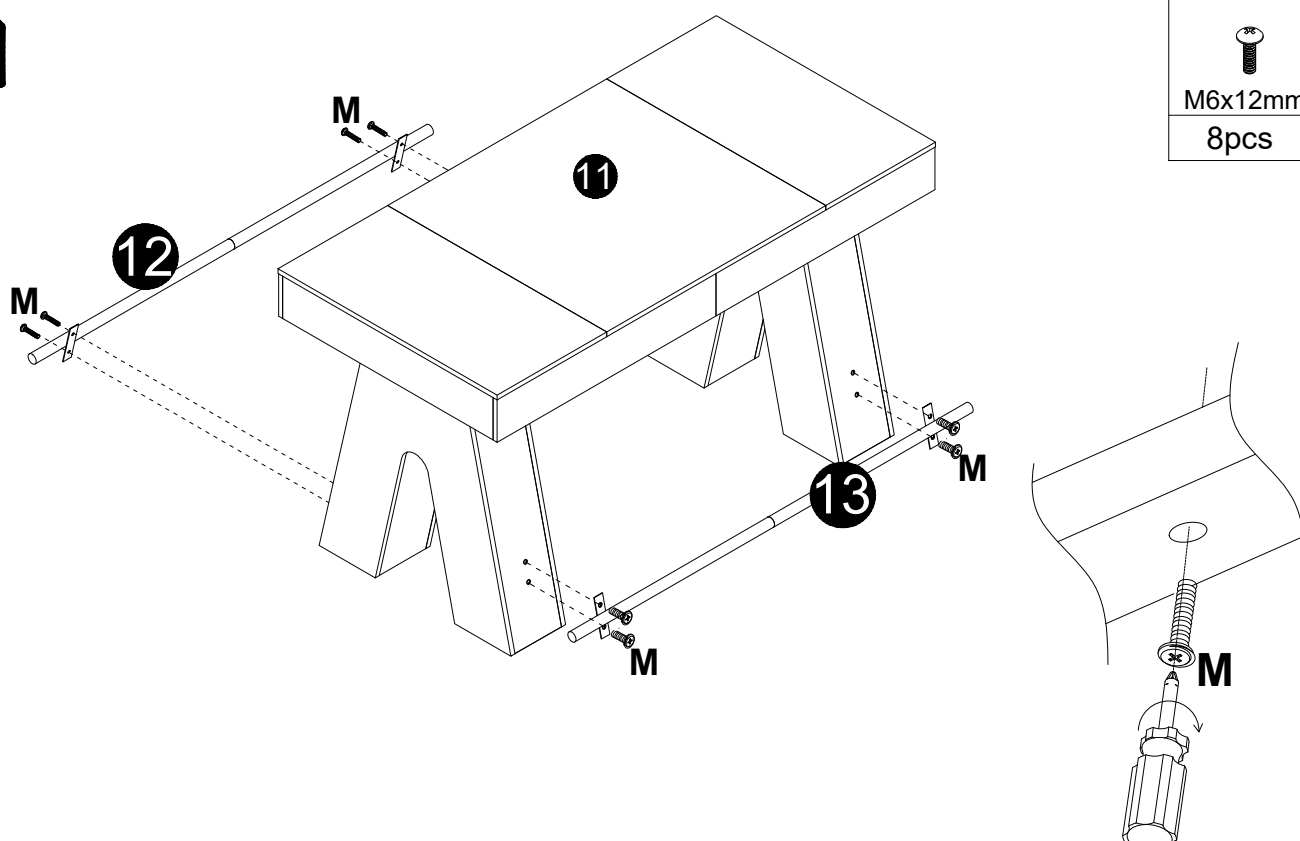



DESIGNED FOR LIFE

Thank you for your support!

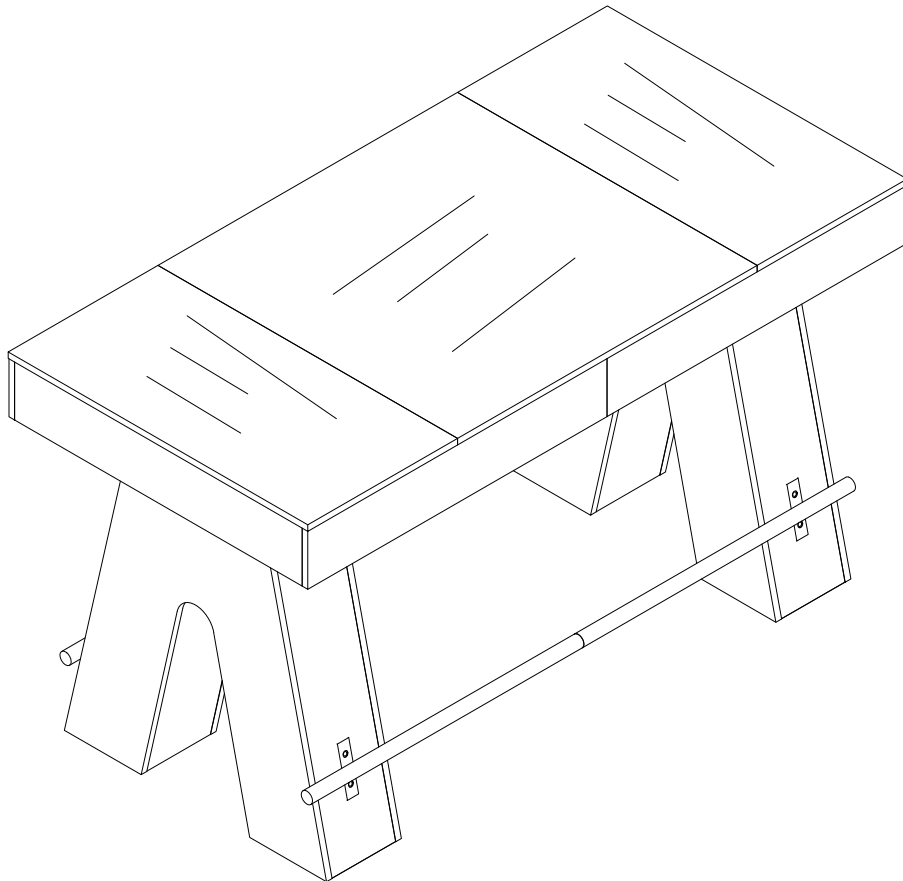

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888
7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp