


Tribesigns
LITTLE TREE
Assembly Instructions

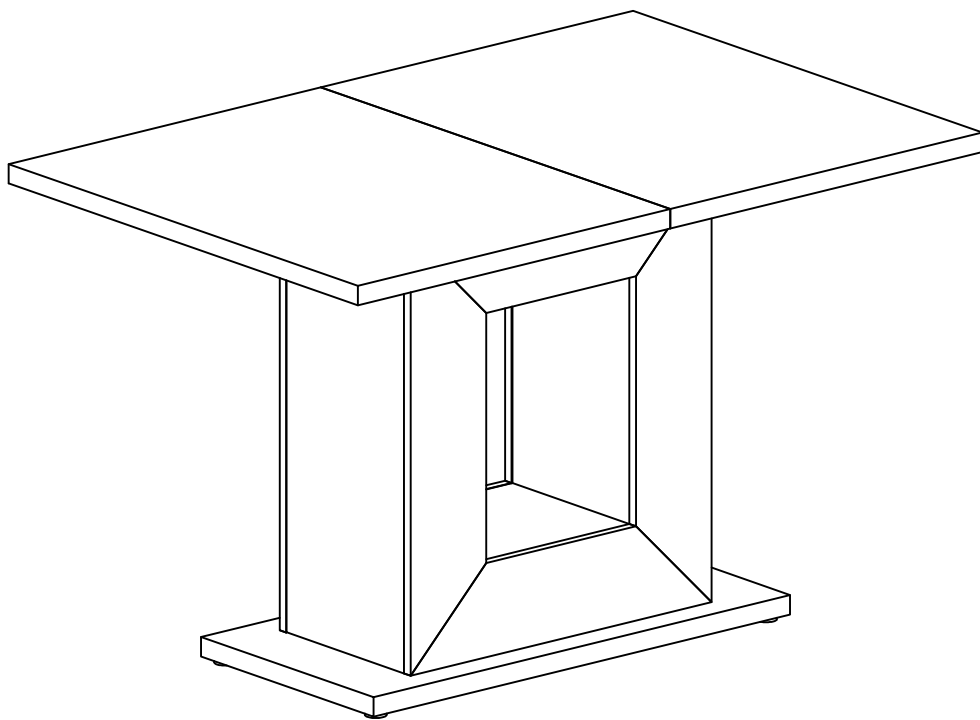

Model No. HOGA-RY0140

Dining Table

Call us!

We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at **support@tribesigns.com** or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:



Facebook



Twitter






Pinterest






YouTube




Instagram

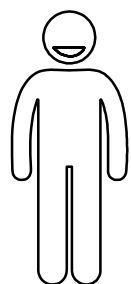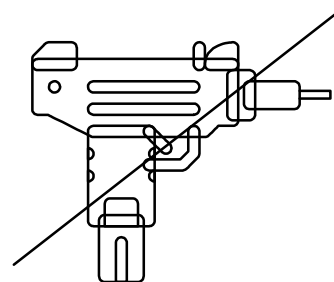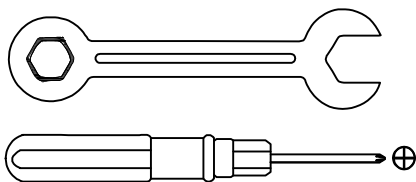**X2**

When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

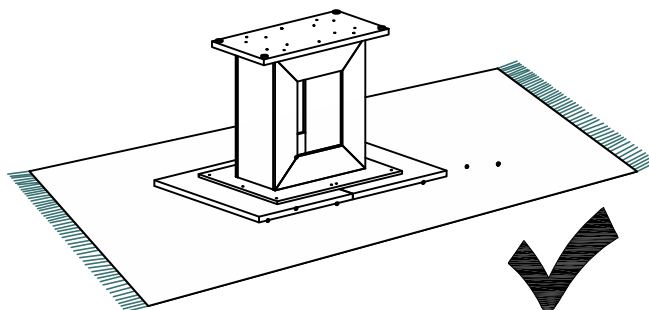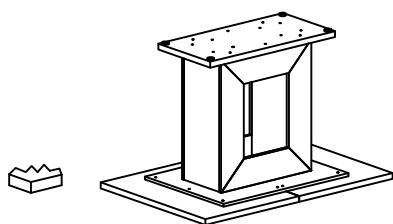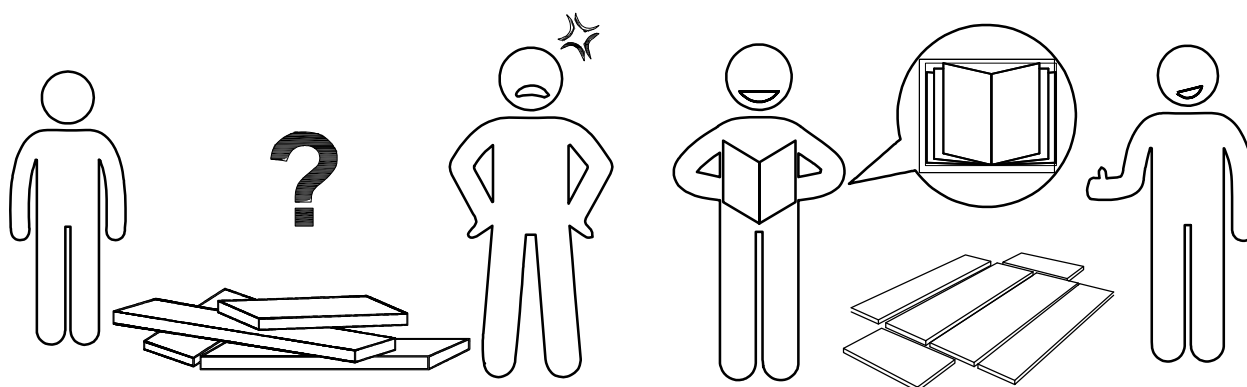


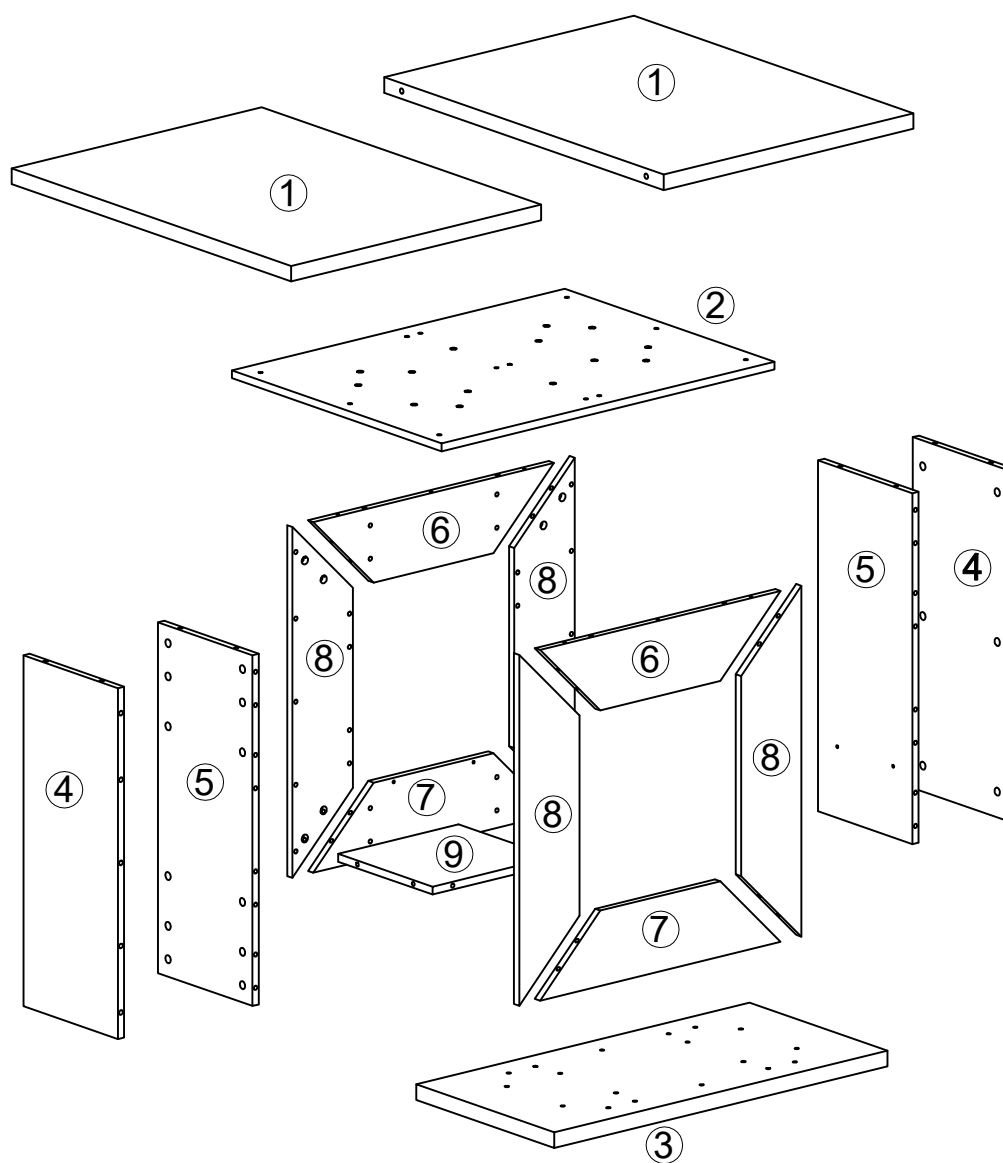


Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.


Parts & Hardware List

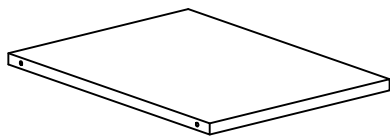


① 2pcs

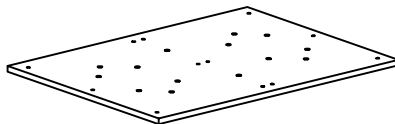

② 1pc

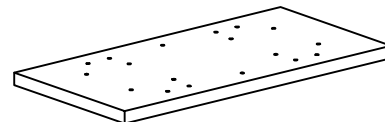

③ 1pc



④ 2pcs



⑤ 2pcs




⑥ 2pcs



⑦ 2pcs












⑧ 4pcs



⑨ 1pc


Hardware List

A	X60+1	B	X60+1	C	X24+1	D	X2+1	E	X14+1
									
φ6X35mm		φ15X12mm		φ8X30mm		Ø10X50mm		φ7X47mm	


F	X14+1	G	X1	H	X12+1	I	X4
							
φ7X57mm		M4X55mm		M6X30mm		M6XØ30mm	

Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

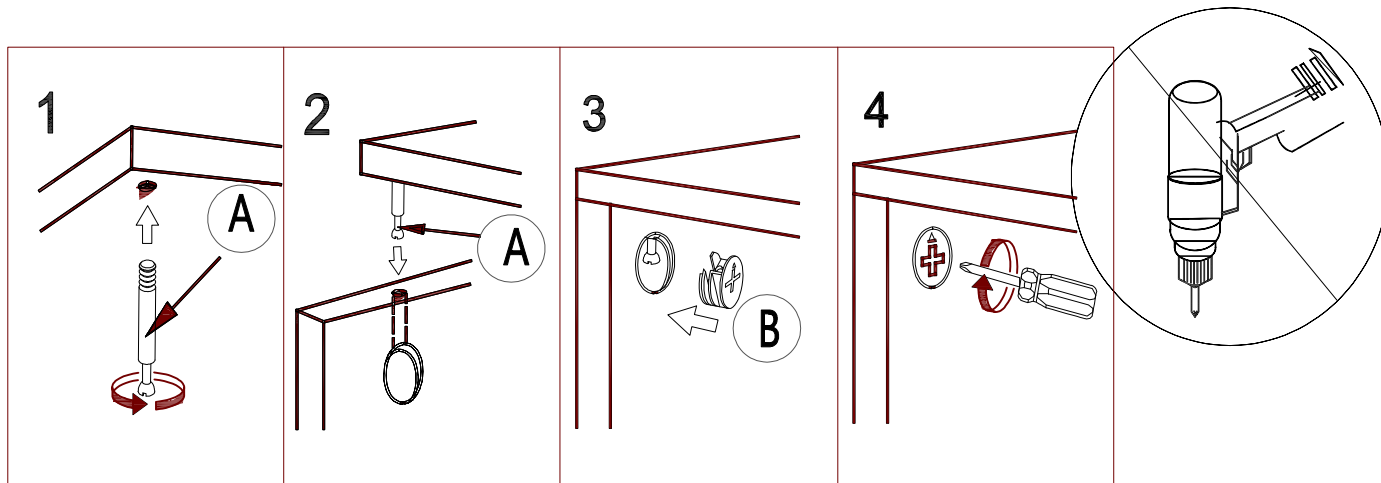


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

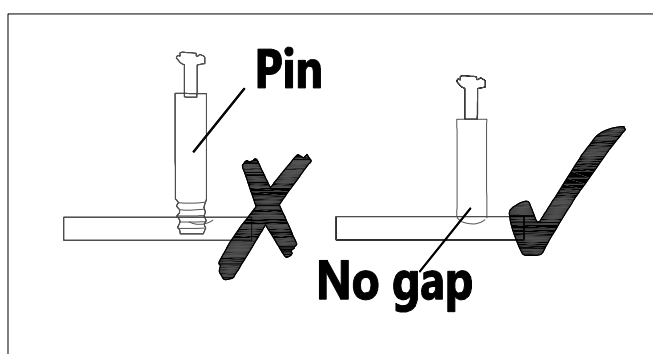


1

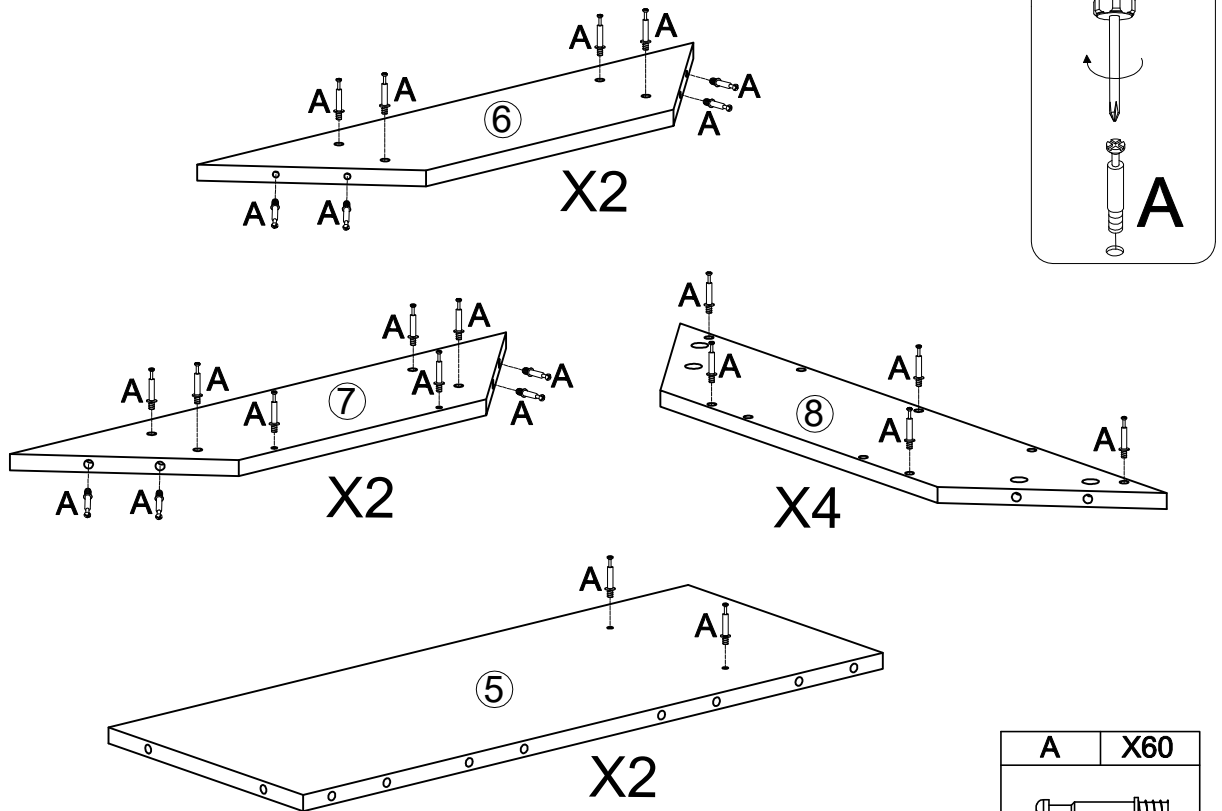



2

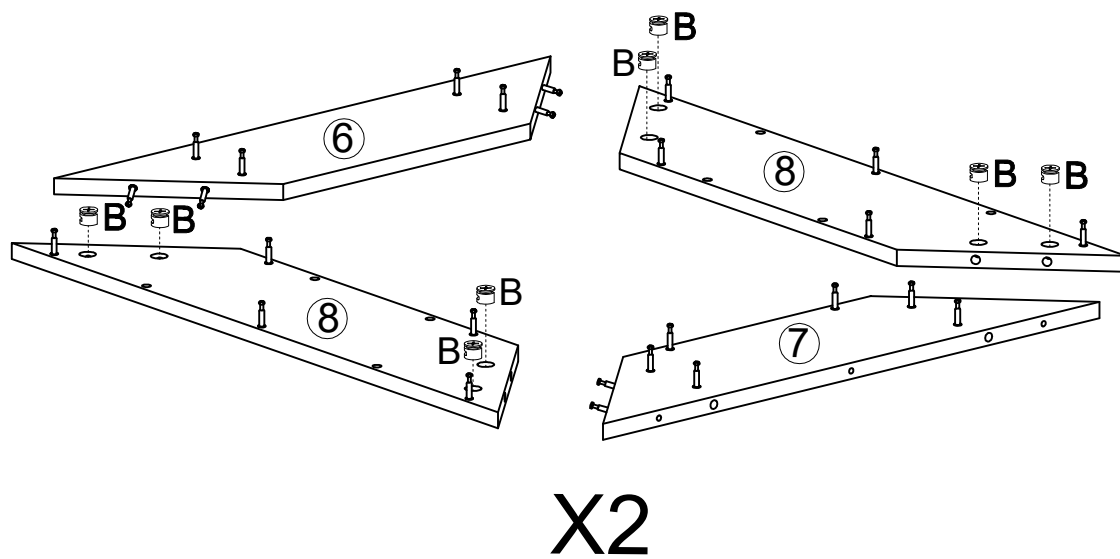


B	X16
	
φ15X12mm	

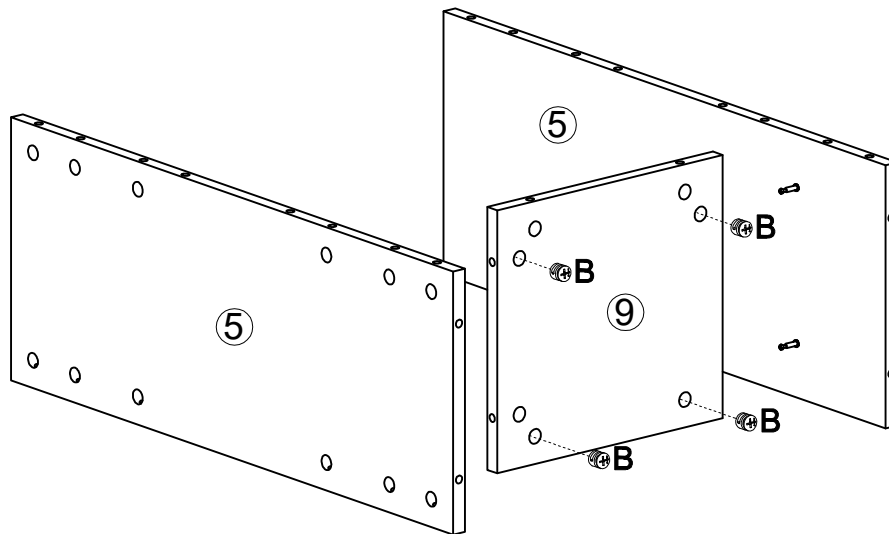

3




B	X4
	
φ15X12mm	

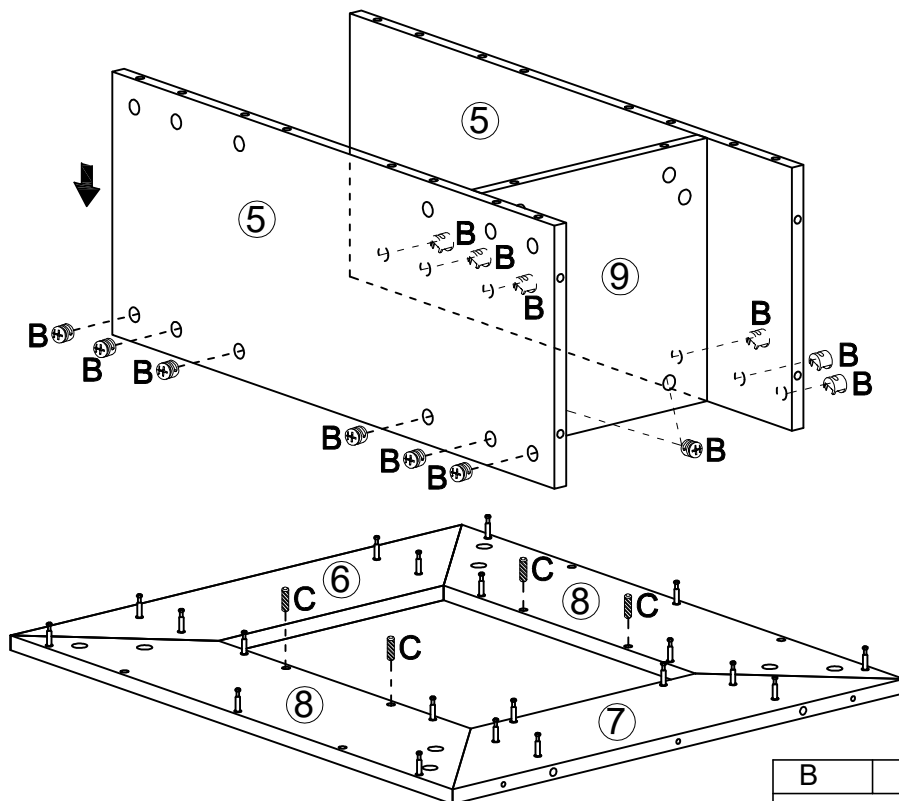

4




B	X14	C	X4
			
φ15X12mm		φ8X30mm	

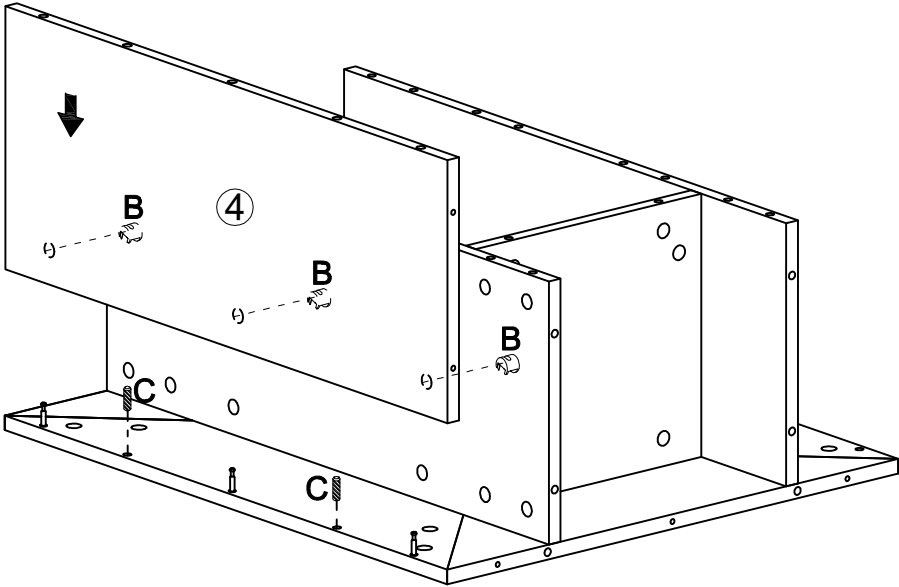

5




B	X3	C	X2
			
φ15X12mm		φ8X30mm	

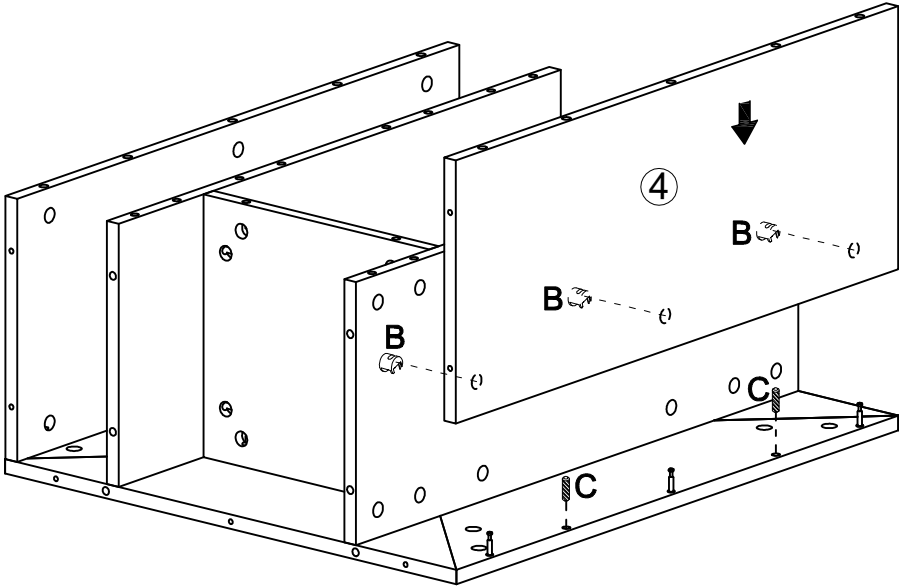

6




B	X3	C	X2
			
φ15X12mm		φ8X30mm	

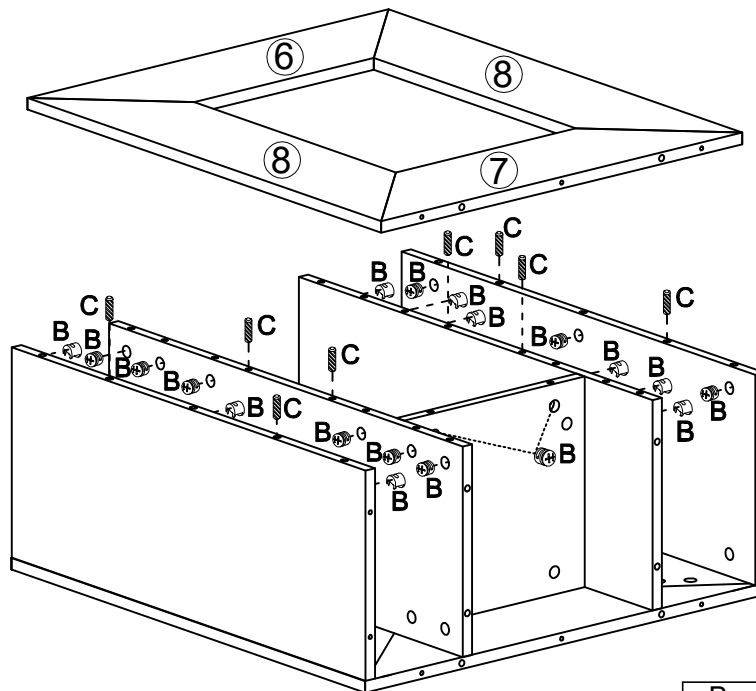


7




B	X20	C	X8
			
φ15X12mm		φ8X30mm	

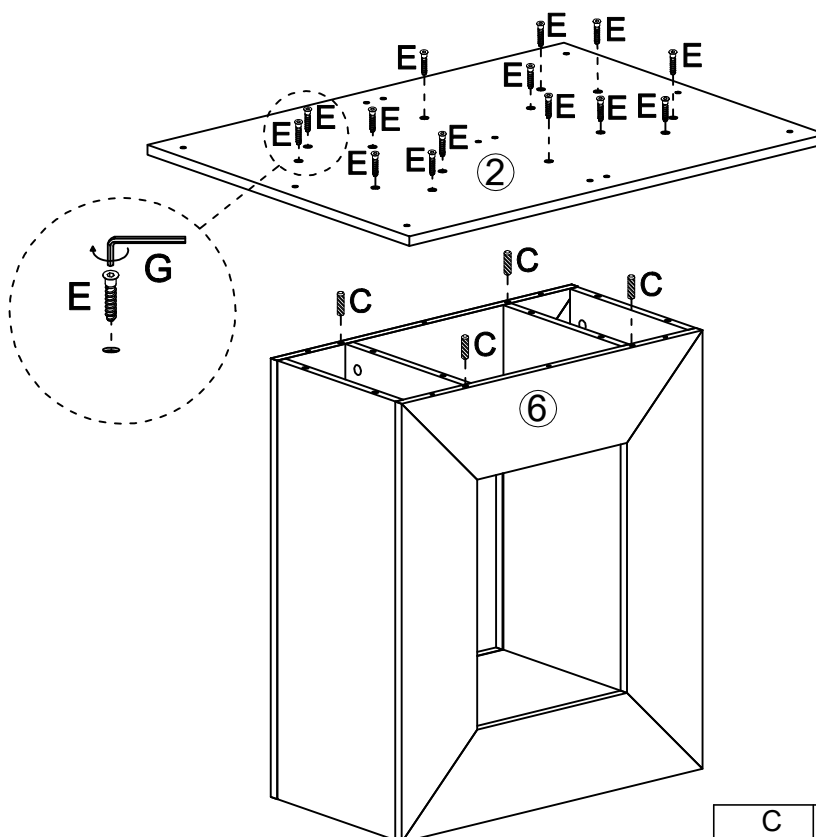

8




C	X4	E	X14	G	X1
					
φ8X30mm		φ7X47mm		M4X55mm	

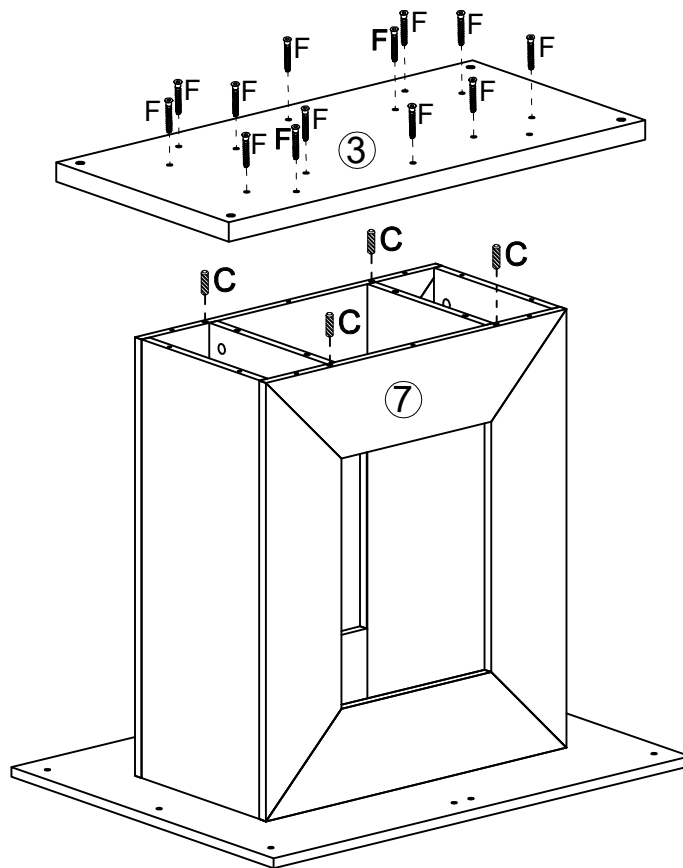
9




C	X4	F	X14
			
φ8X30mm		φ7X57mm	


10

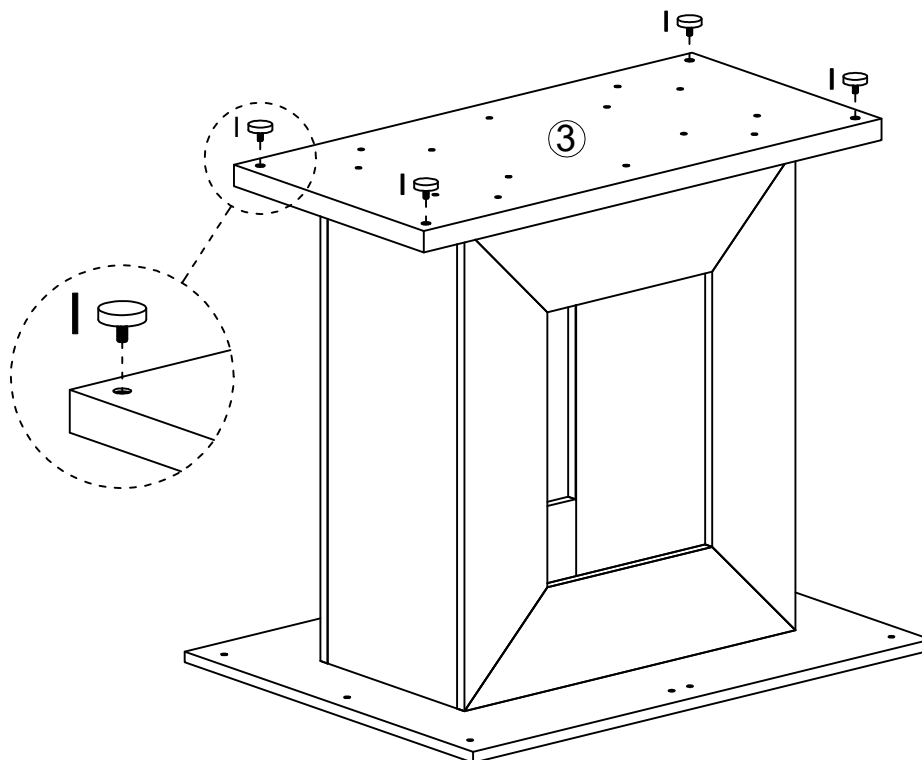


I	X4
	
M6XØ30mm	


11

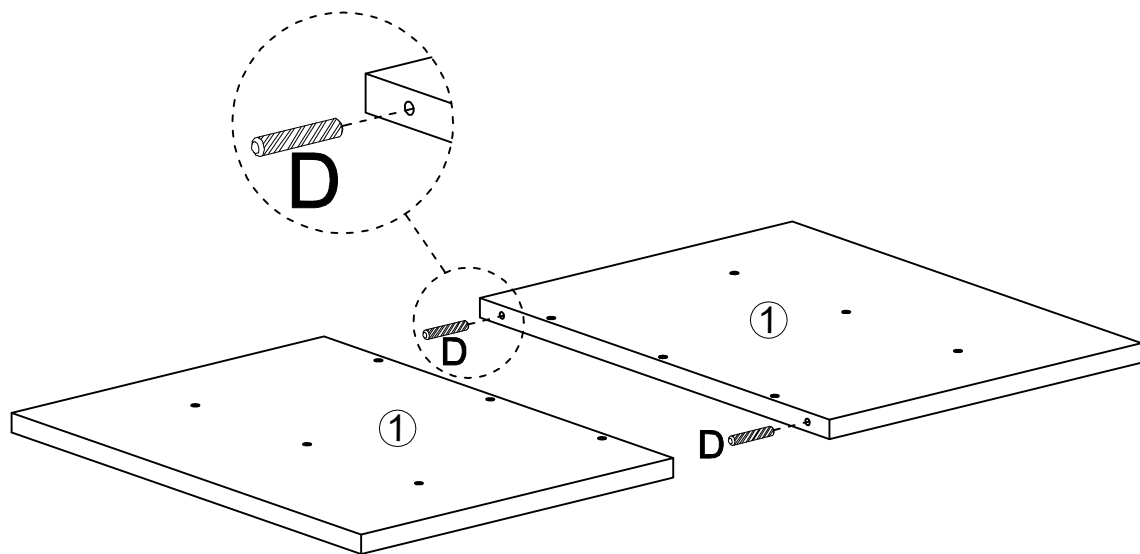


D	X2
	
Ø10X50mm	

12

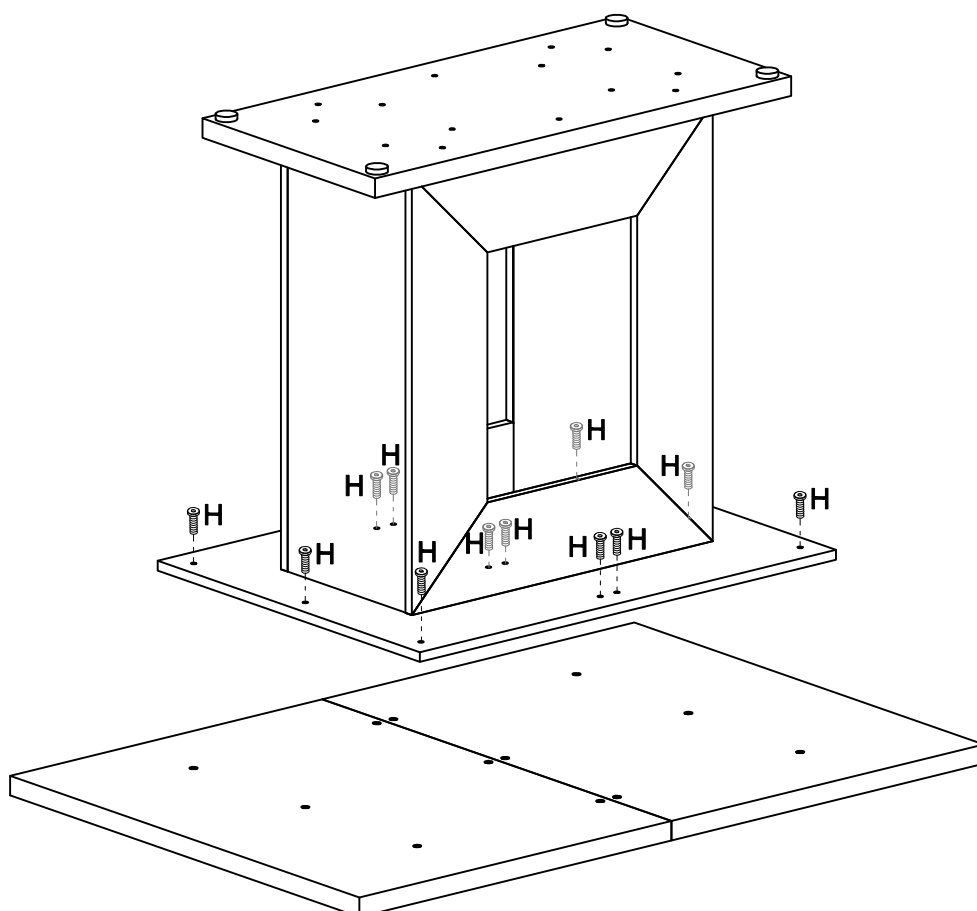

H	X12
	
M6X30mm	

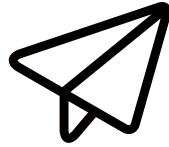

No heartburn, when we handle the return

Our way



support@tribesigns.com



Replacement/Refund



You

Their way



Re-package item



Schedule pick-up



Track package



Replacement



You

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888