


DESIGNED FOR LIFE

Assembly Instructions

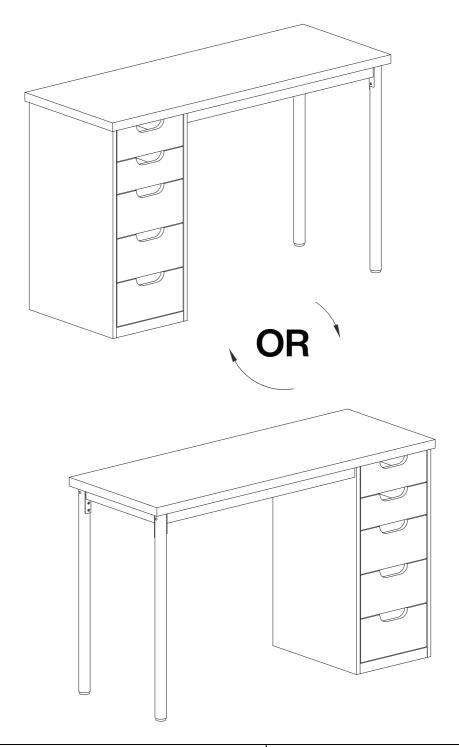

Computer Table

Model No. HOGA-RY0060X/HOGA-RY0146 HOGA-RY0191/HOGA-RY0227 HOGA-RY0268



www.tribesigns.com



Contact Us We're here to help you.




Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips


- 1. Carefully read these instructions and keep them for future reference.
- 2. Check the parts list and confirm everything's there before starting assembly.
- 3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
- 4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

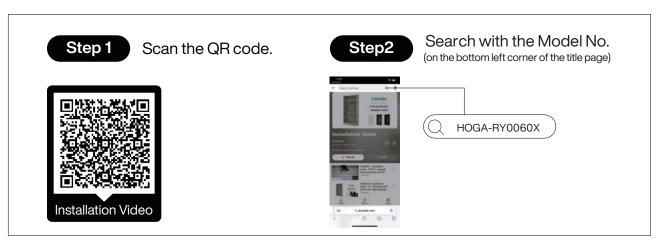


Note: If you can't find the assembly video, please contact us.



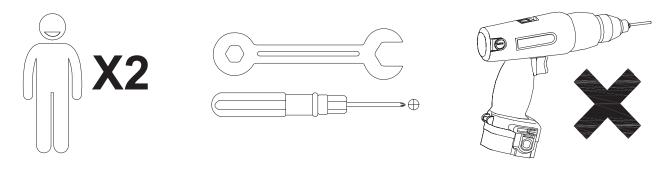


We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

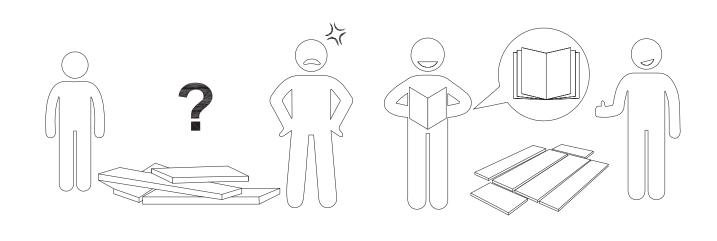


AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

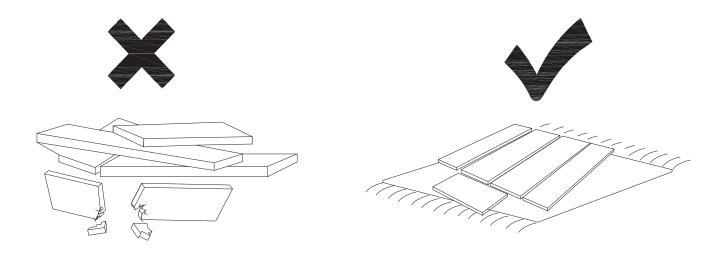



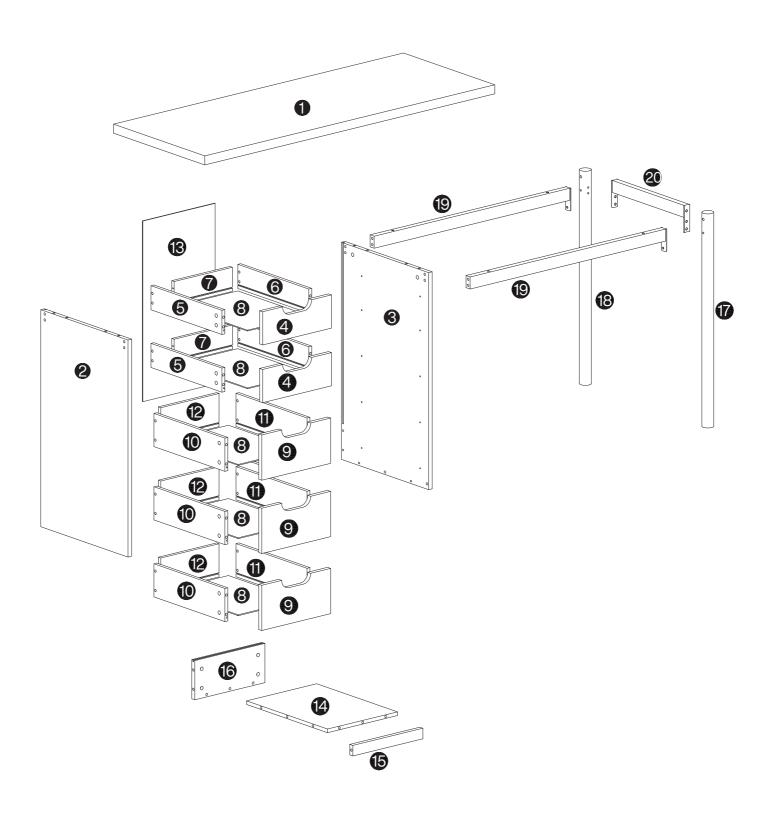




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List

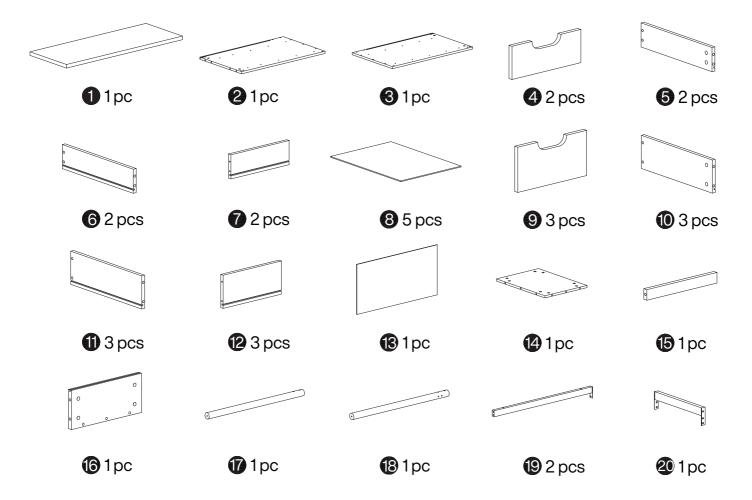

Hardware List

L350 mm

Α	X36+1	В	X16+1	С	X20+1	D	X10+1	Е	X1	F	X44+1
			*	(*,*)							
Ø6X	35 mm	Ø15X	(12 mm	Ø15)	X10 mm	Ø8X	30 mm	M4X	55 mm	3.5X	14 mm
G	X20+1	Η	X6+1		X4+1	J	X6+1	K	X4	L	X2
	THILL B						(I)		0		
Ø4X35 mm		M6X	12 mm	M6>	(35 mm	M6X	(55 mm	14X14	X9 mm	M6X)32 mm
	М	X5	N	X5	0	X5	Р	X5	Q	X1	
				, (3	0	,,,			<u> </u>	> · · · · · · · · · · · · · · · · · · ·	


L350 mm


L350 mm

L350 mm

Ø20 mm



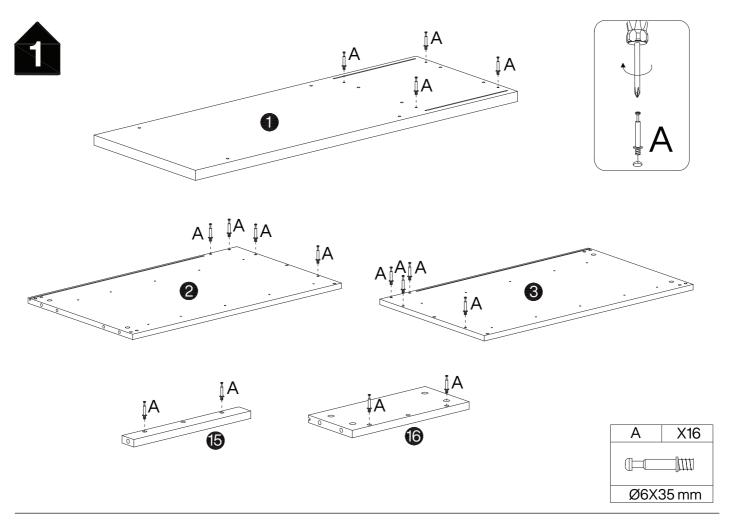


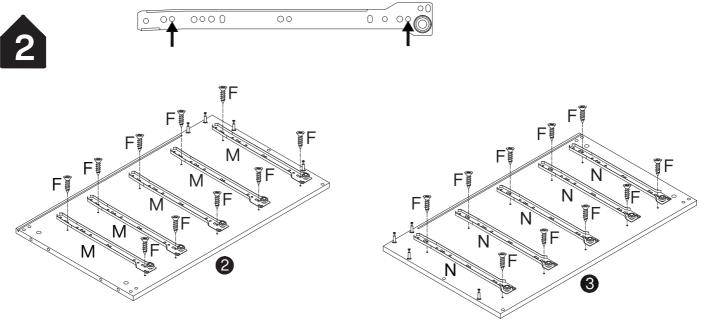


F	X20	М	X5	N	X5
3.5X14 mm		L350 mm		L350 mm	






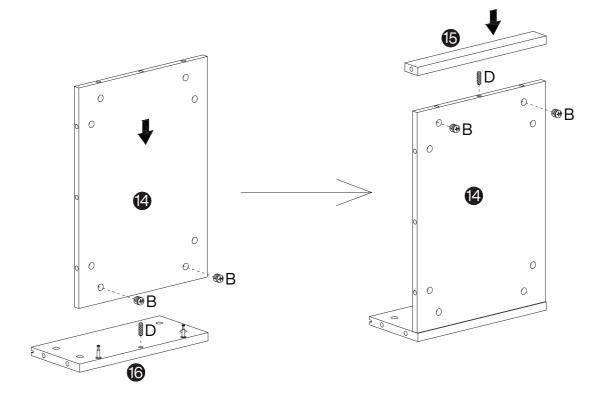




B X4		D	X2	
Ø15X	12 mm	Ø8X30 mm		



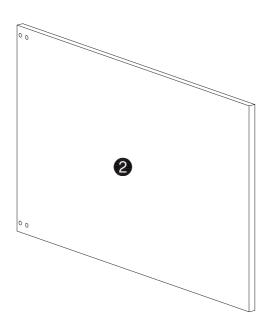

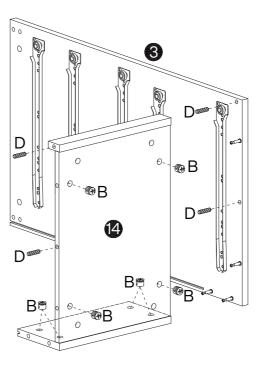


Step 1	Step 2	Step 3
0-		


В	B X8		X4
(x)	*		
Ø15>	Ø15X12 mm		0 mm





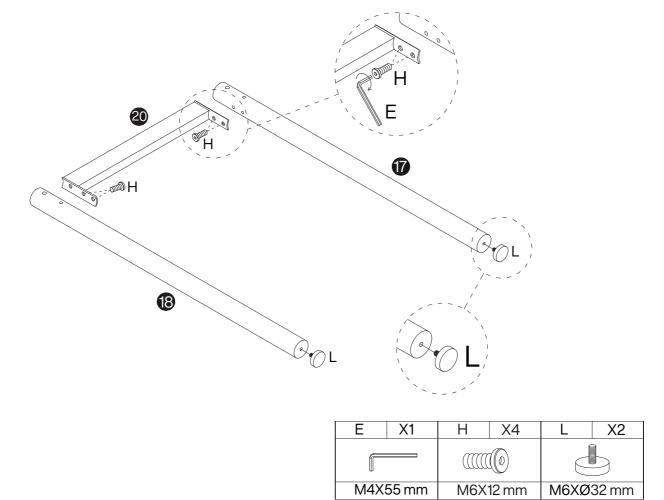




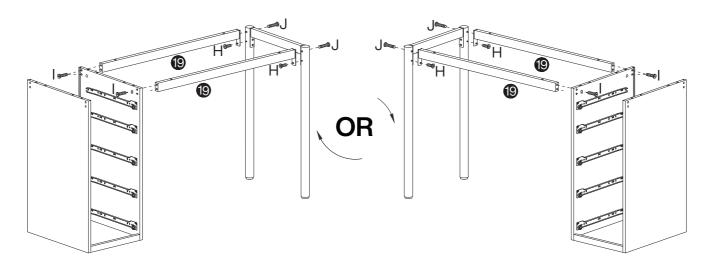


Н	X2	I	X4	J	X2
M6X12mm		M6X35mm		M6X	55mm





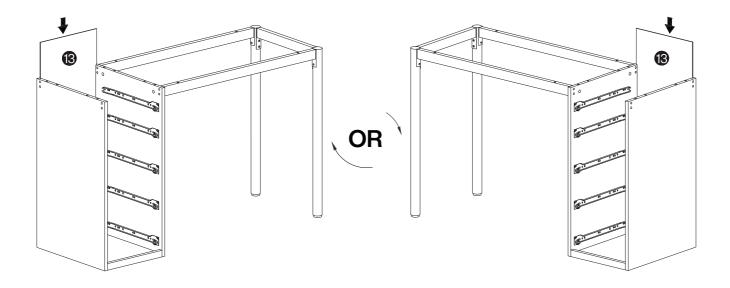

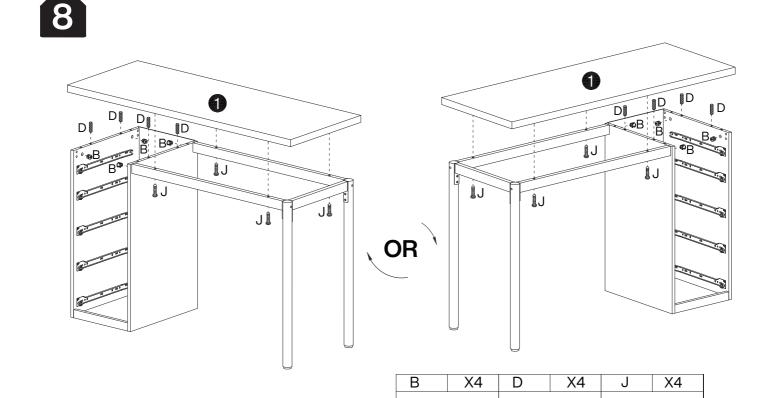


M6X55mm

Ø8X30 mm


Ø15X12 mm





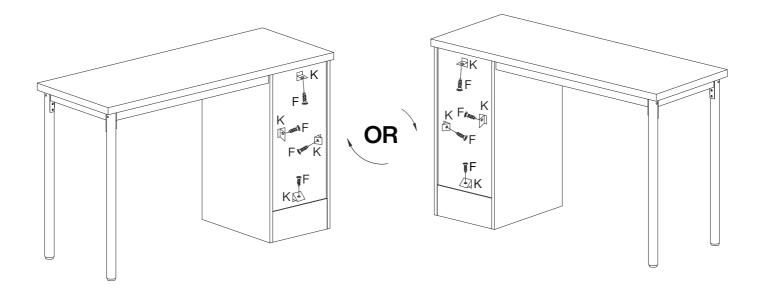


F	X4	K	X4
		0	
3.5X1	3.5X14 mm		X9 mm

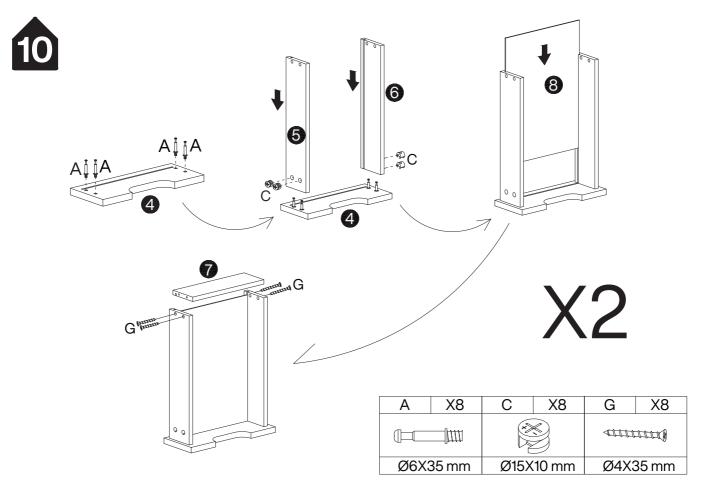


Ø4X35 mm



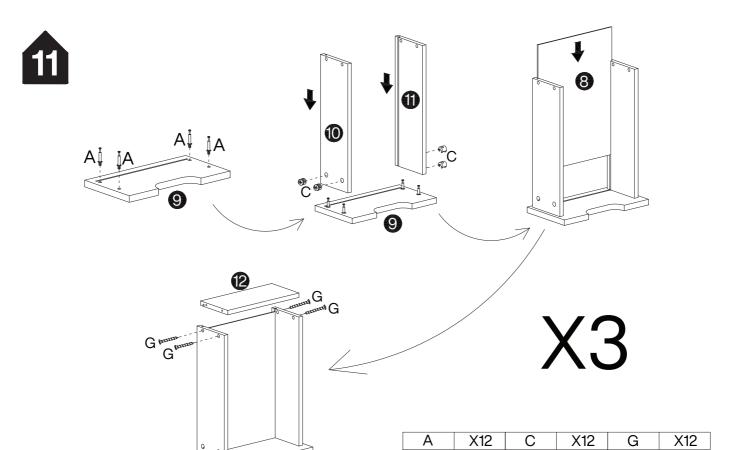


Ø15X10 mm

Ø6X35 mm

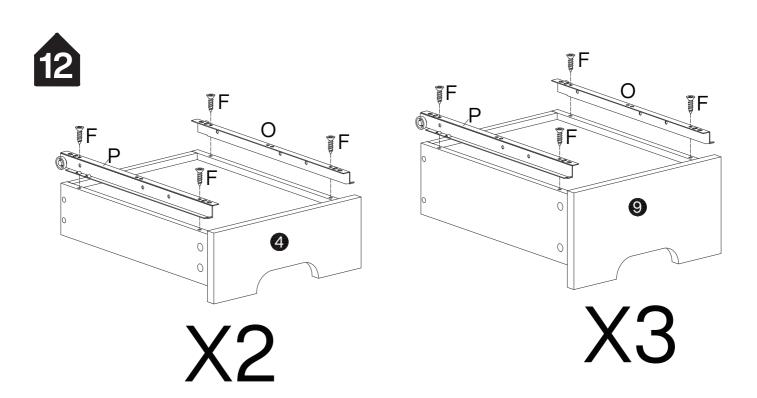


F	X20	0	X5	Р	X5
3.5X14 mm		L350 mm		L350 mm	



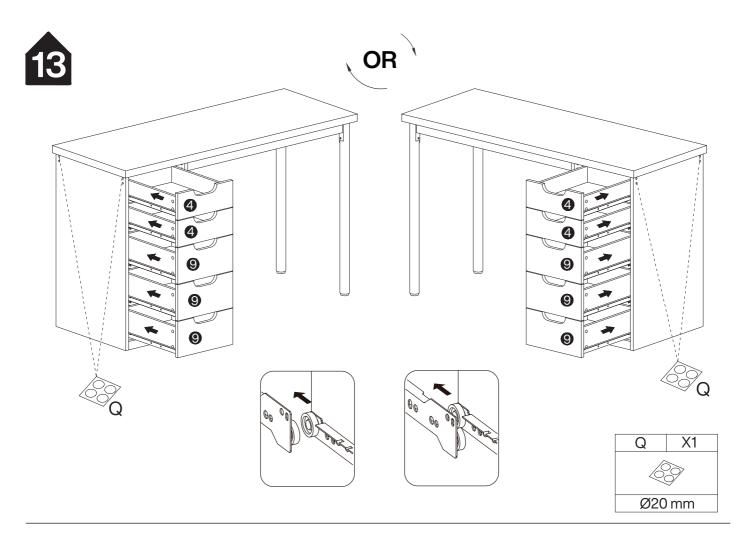




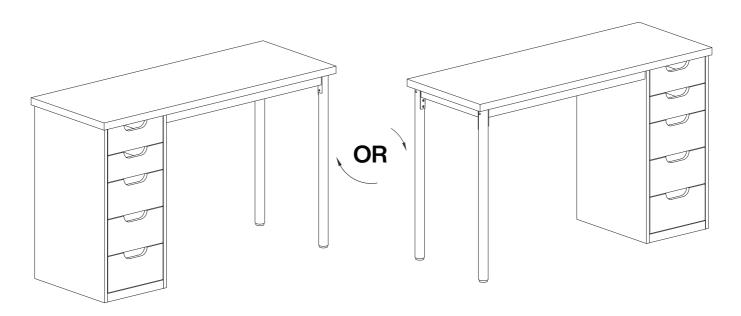



DESIGNED FOR LIFE

Thank you for your support!

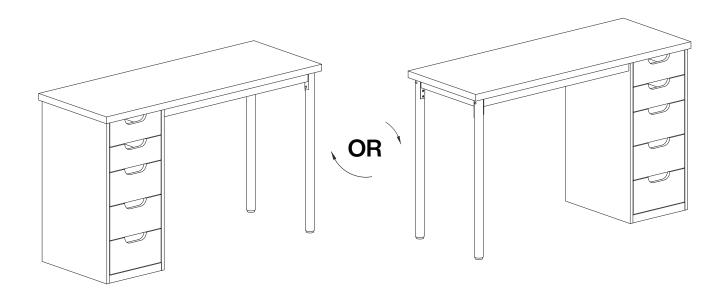

Contact our customer service team



support@tribesigns.com www.tribesigns.com



1-424-220-6888 7 AM to 8 PM EST, Monday to Friday

Follow Tribesigns







Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp