


Assembly Instructions

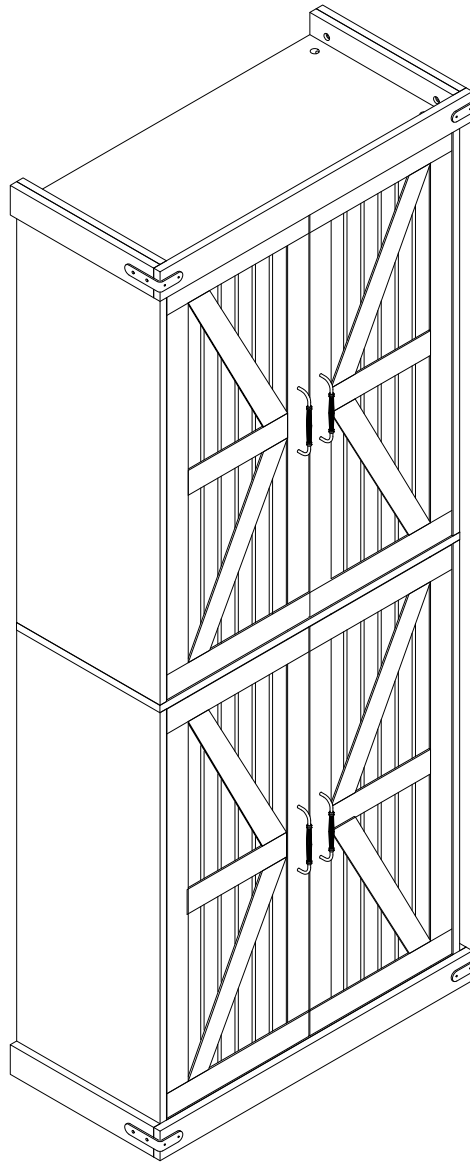


Storage Cabinet

Model No.
HOGA-RY0282

Contact Us




We're here to help you.

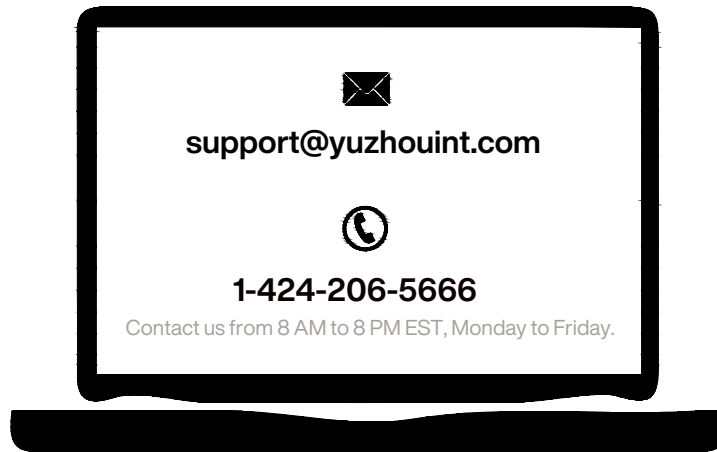

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

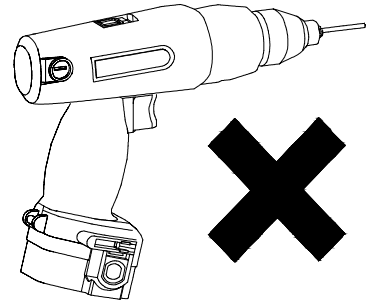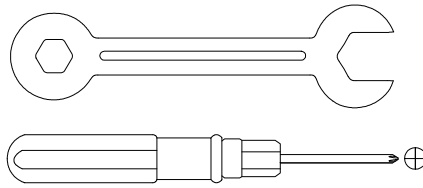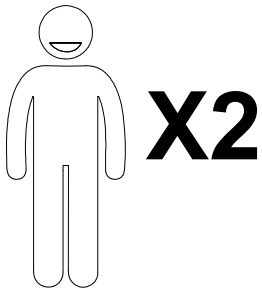


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

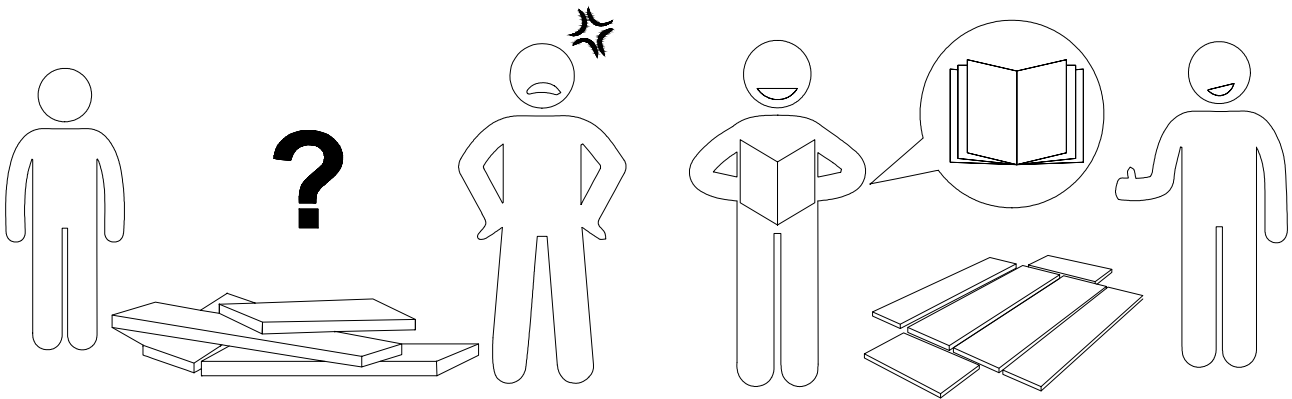

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.














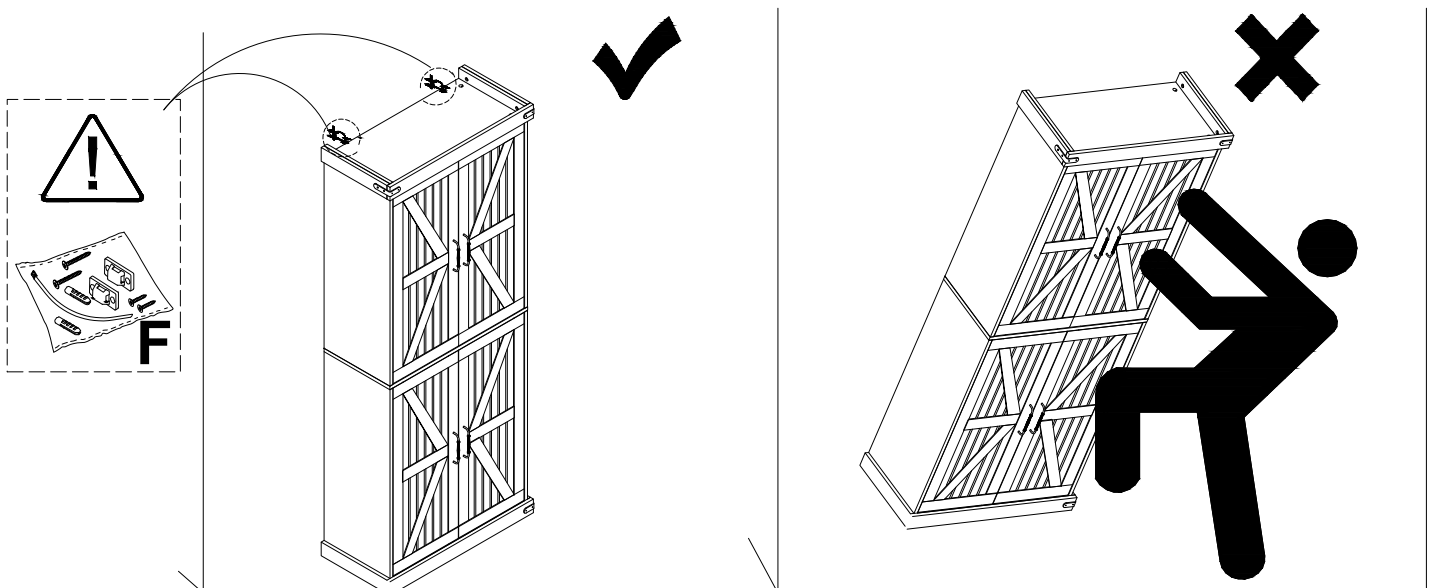


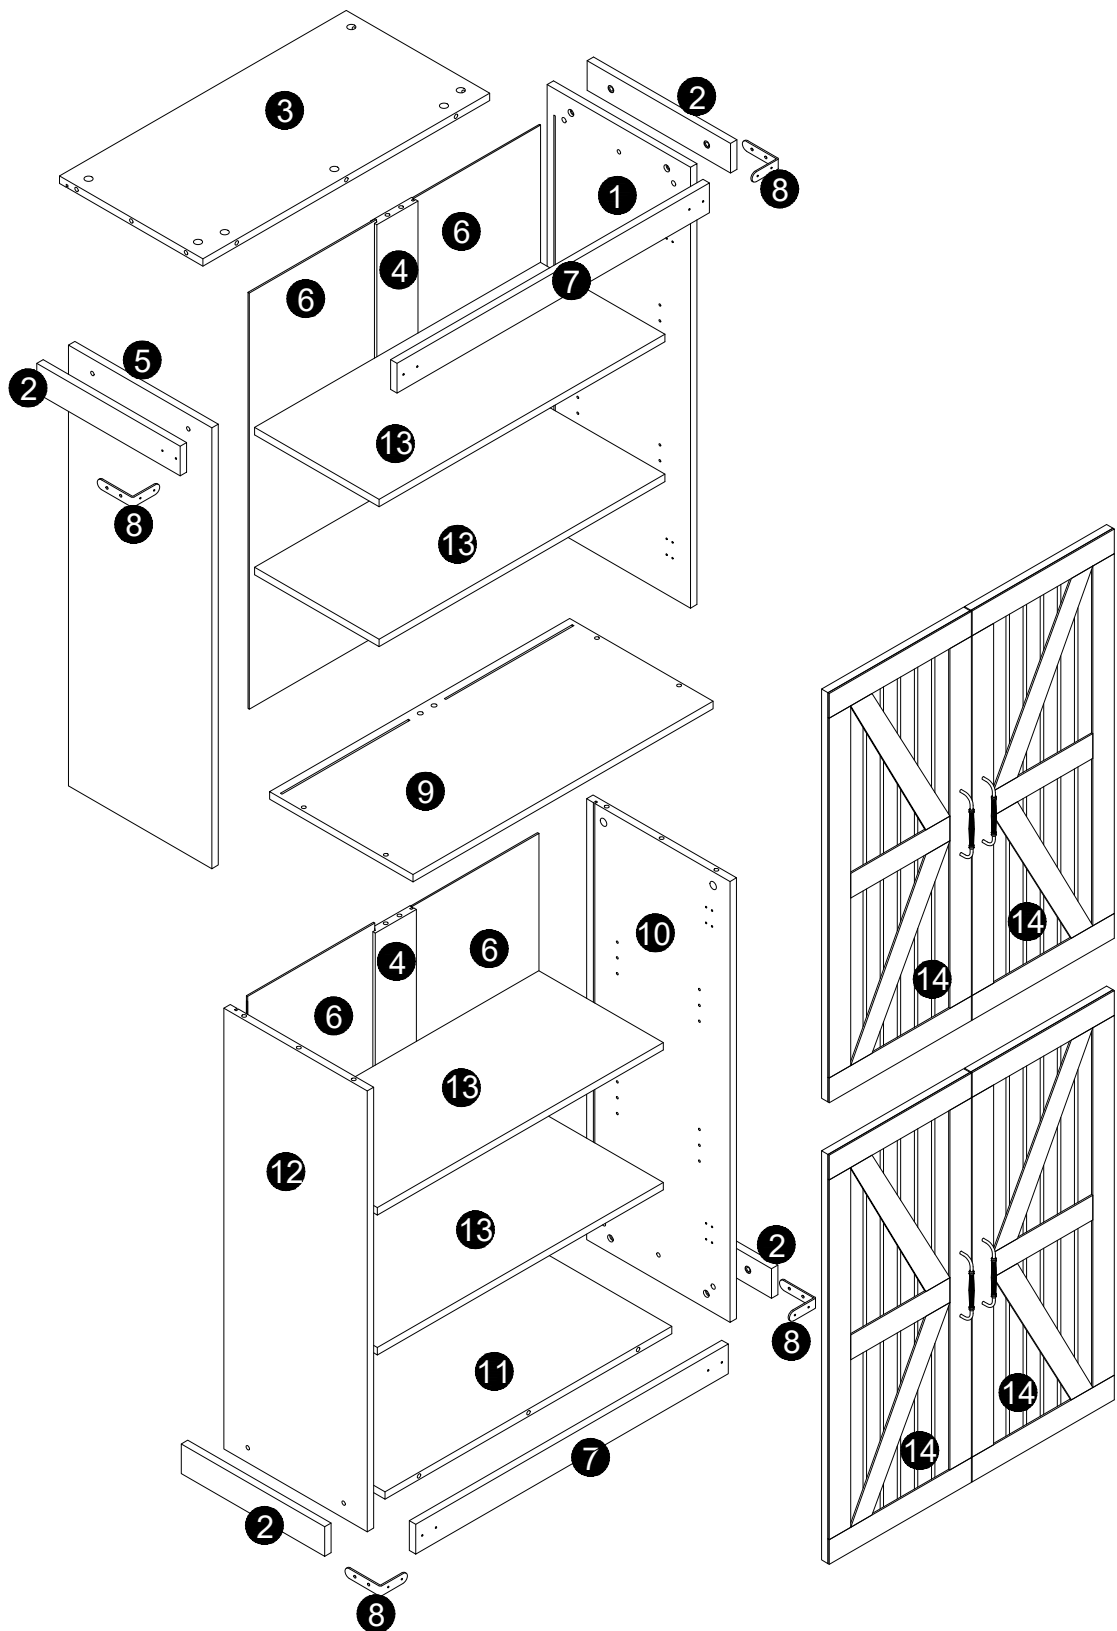





⚠ Caution




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List

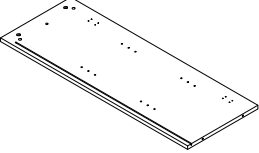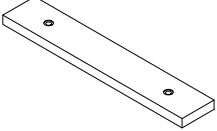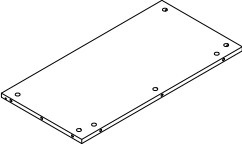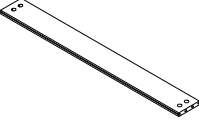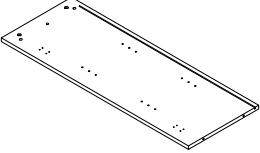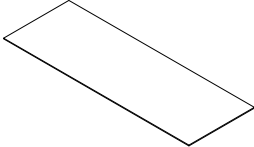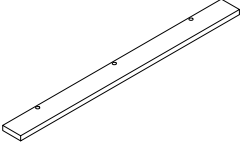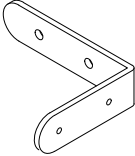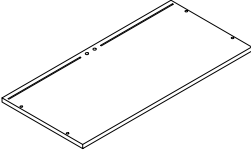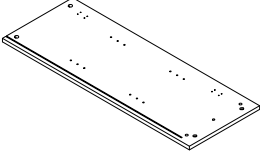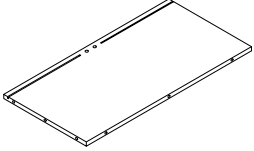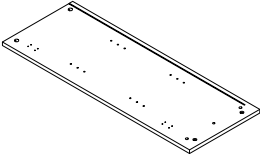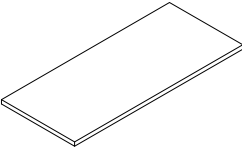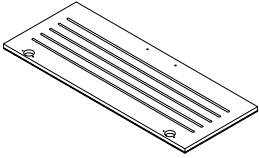1  1 pc	2  4 pcs	3  1 pc	4  2 pcs	5  1 pc
6  4pcs	7  2pcs	8  4pcs	9  1 pc	10  1 pc
11  1 pc	12  1 pc	13  4 pcs	14  4 pcs	

Hardware List


A	B	C	D	E	F
					
M6x35mm	Ø15x12mm	Ø8x30mm	Ø6x20mm	Ø7x38mm	128mm
22 pcs	26 pcs	6 pcs	8 pcs	4 pcs	4 pcs

G	H	J	K	L	M
					
M4x18mm		M6x35mm	M3. 5x14mm	M9x14mm	
8 pcs	24 pcs	4 pcs	72 pcs	16 pcs	8 pcs

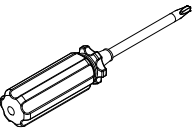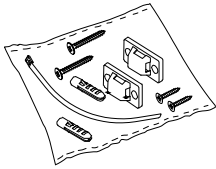
N	O	P	Q		
					
Screwdriver					
1 pc	2 pcs	6 pcs	16 pcs		

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.


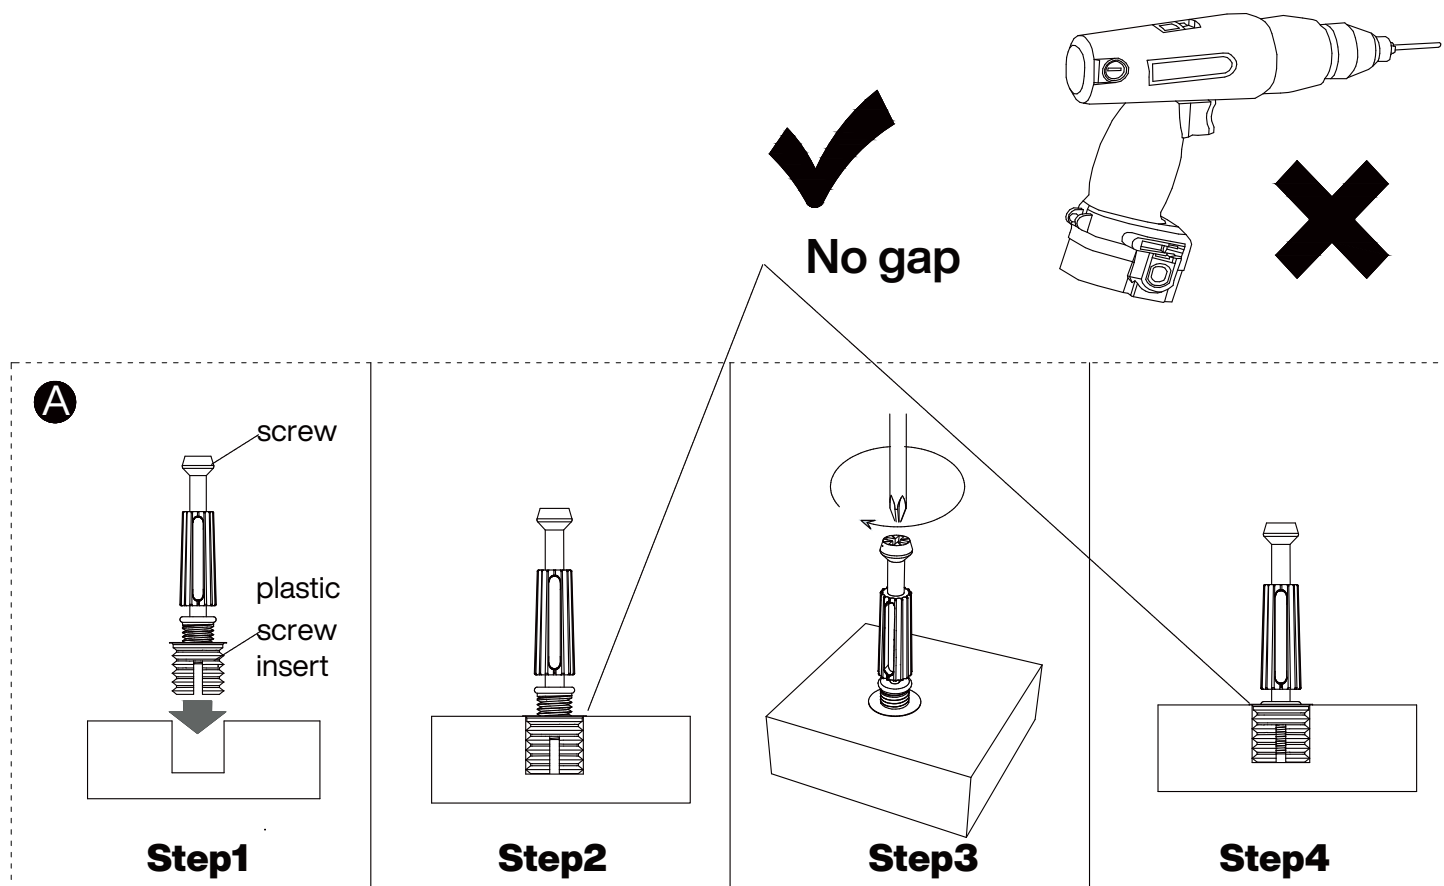


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

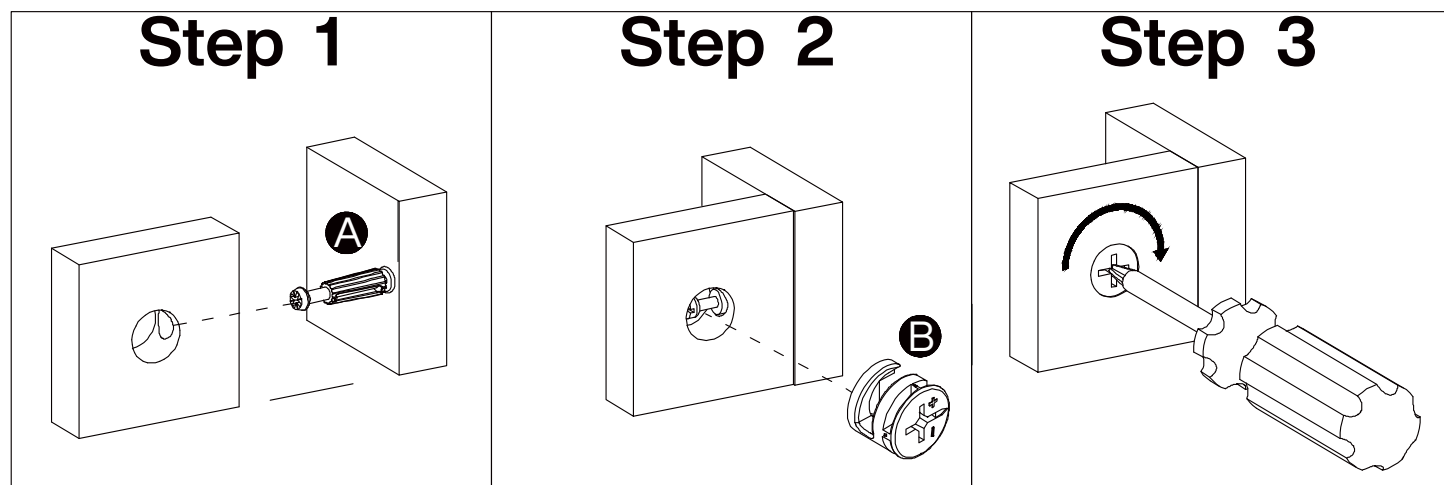


Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

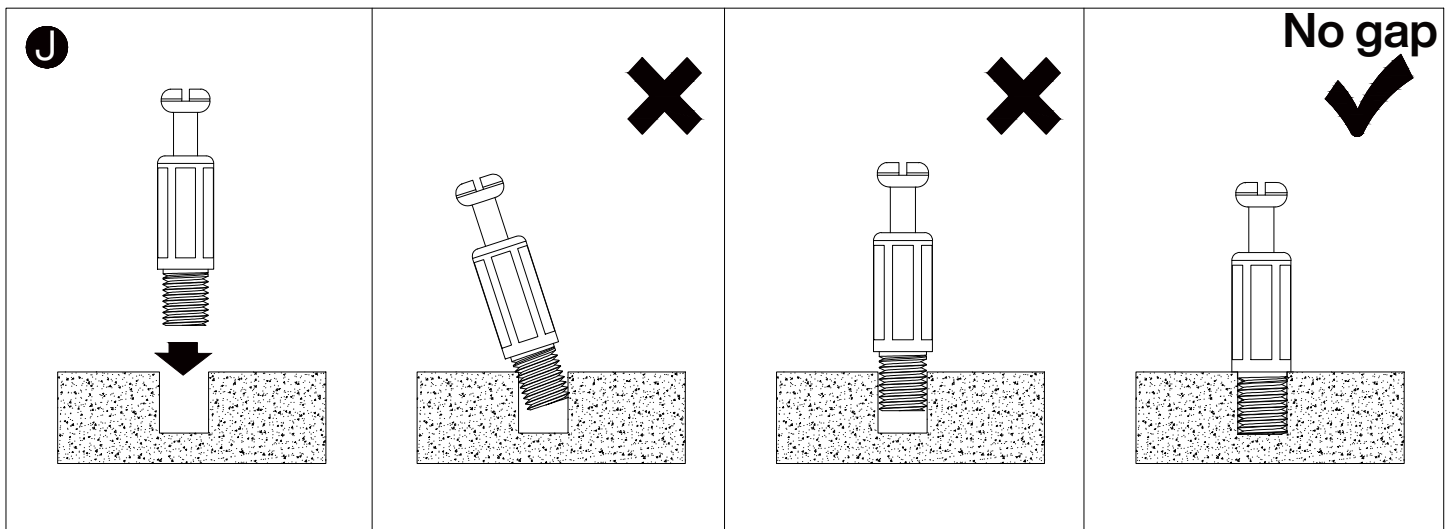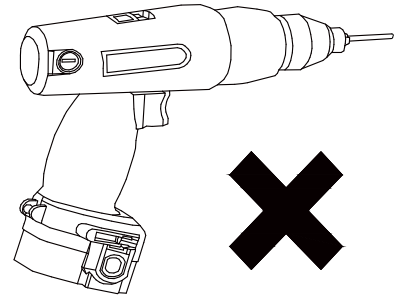


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

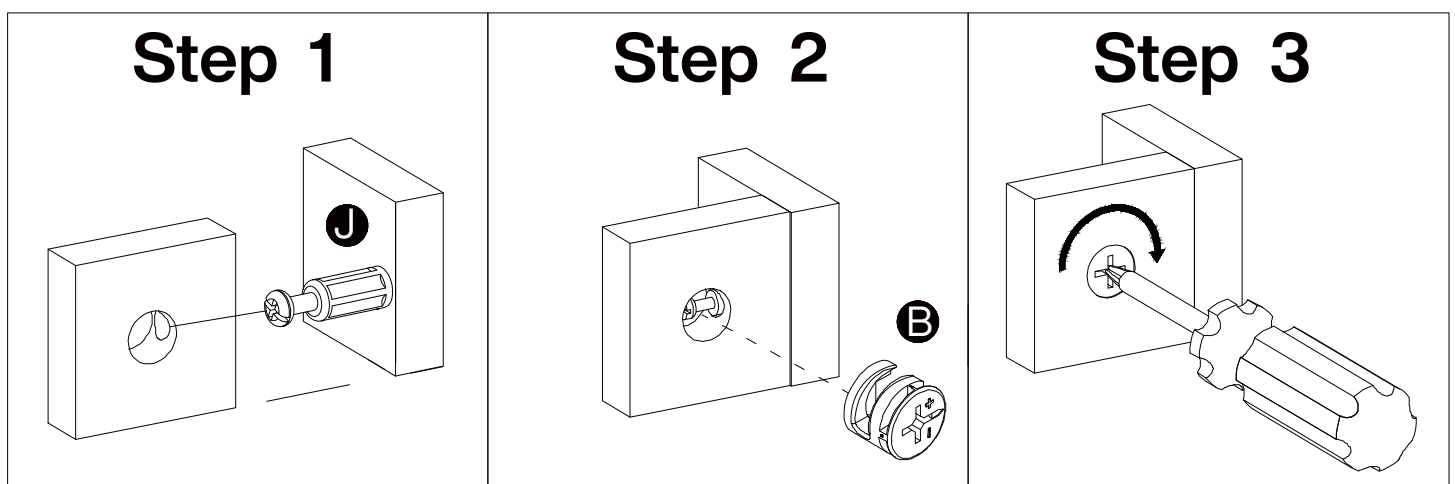


1

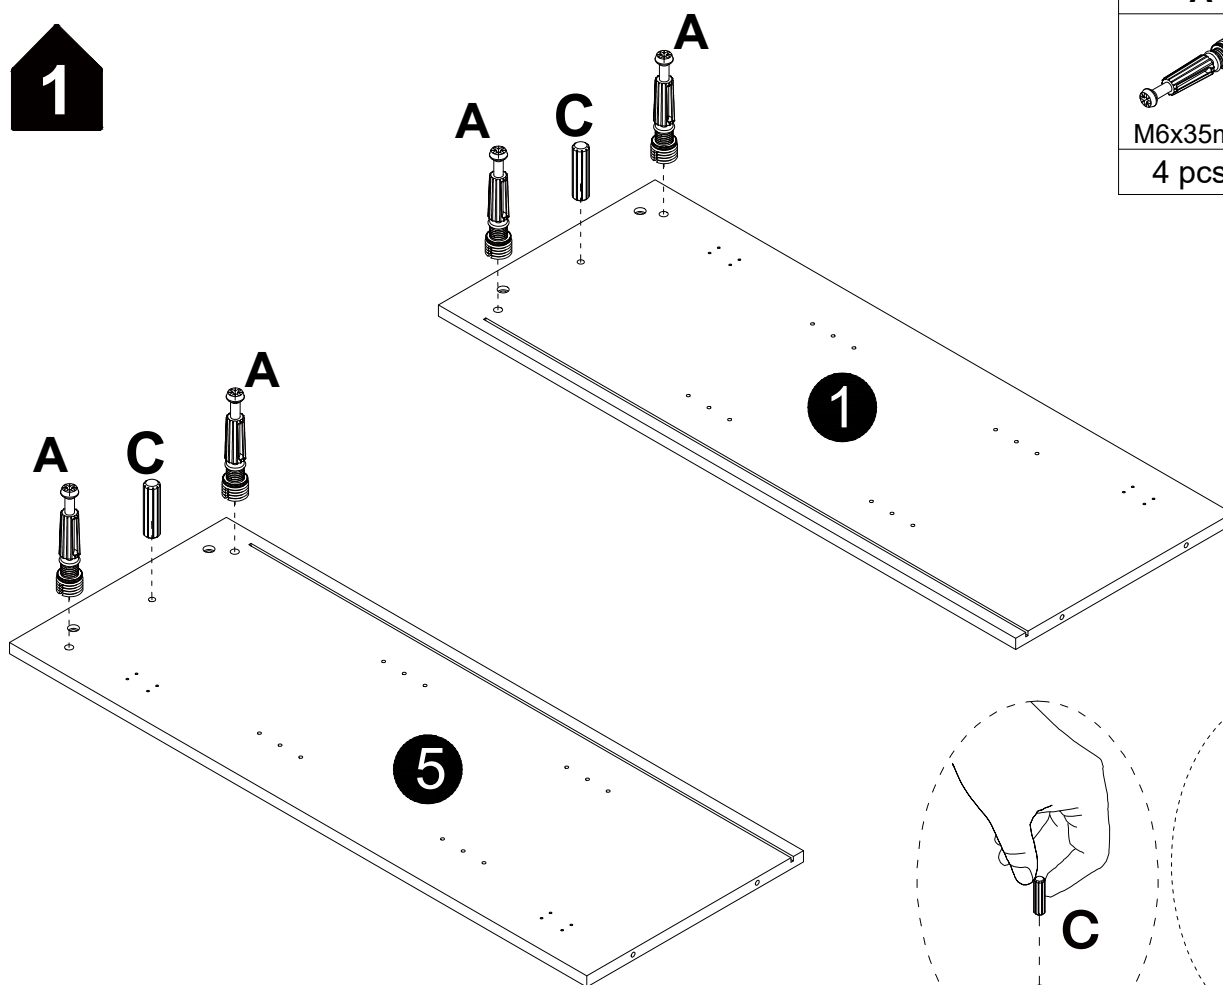

A	C
	
M6x35mm	Ø8x30mm
4 pcs	2 pcs

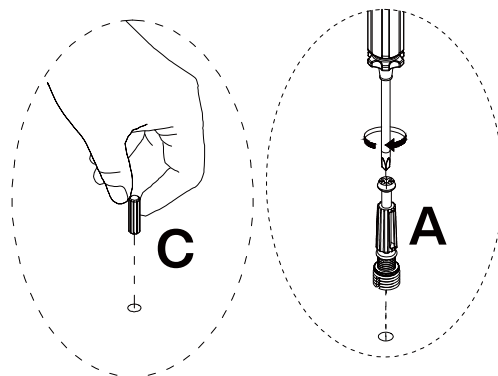


2

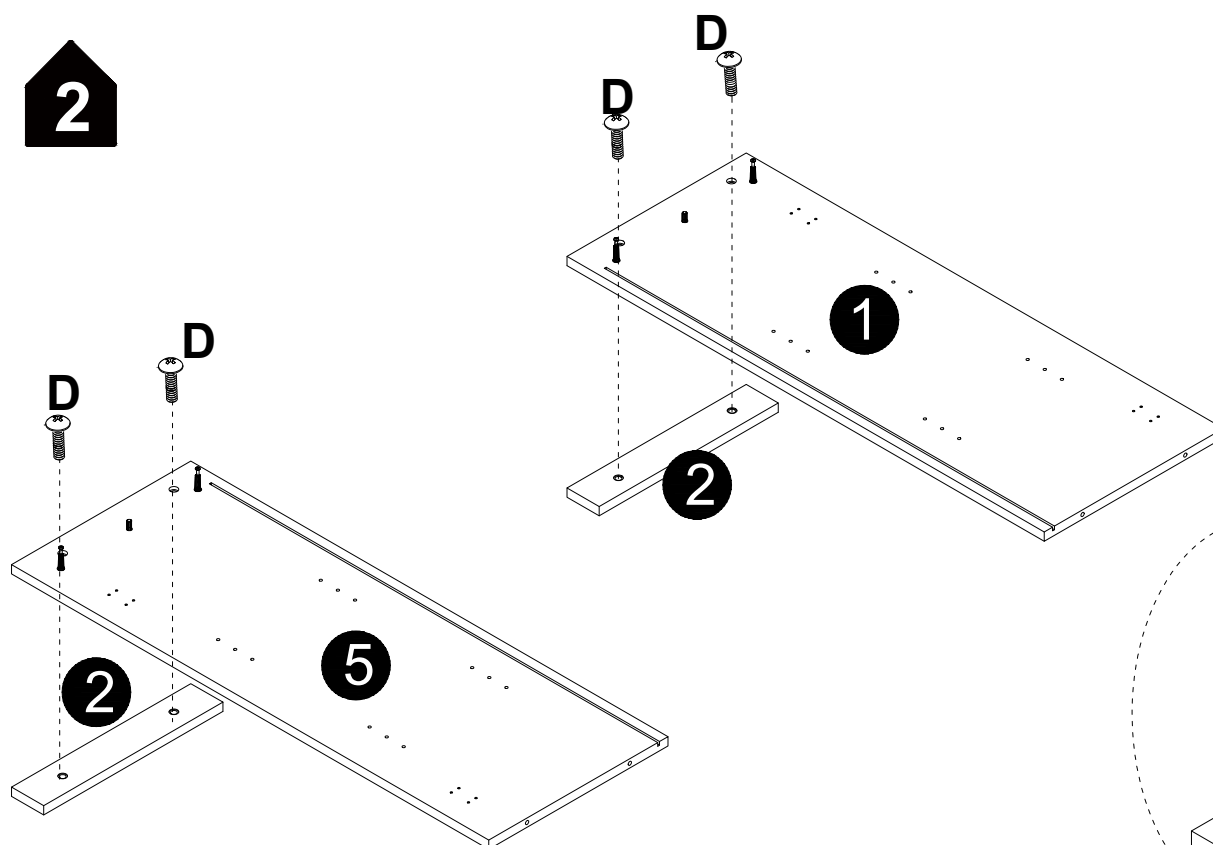

D



Ø6x20mm
4 pcs

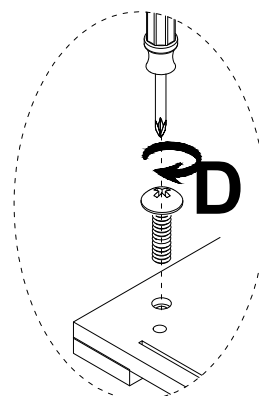

3

A

M6x35mm
2 pcs

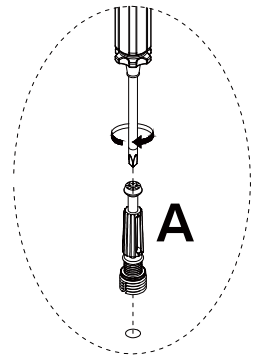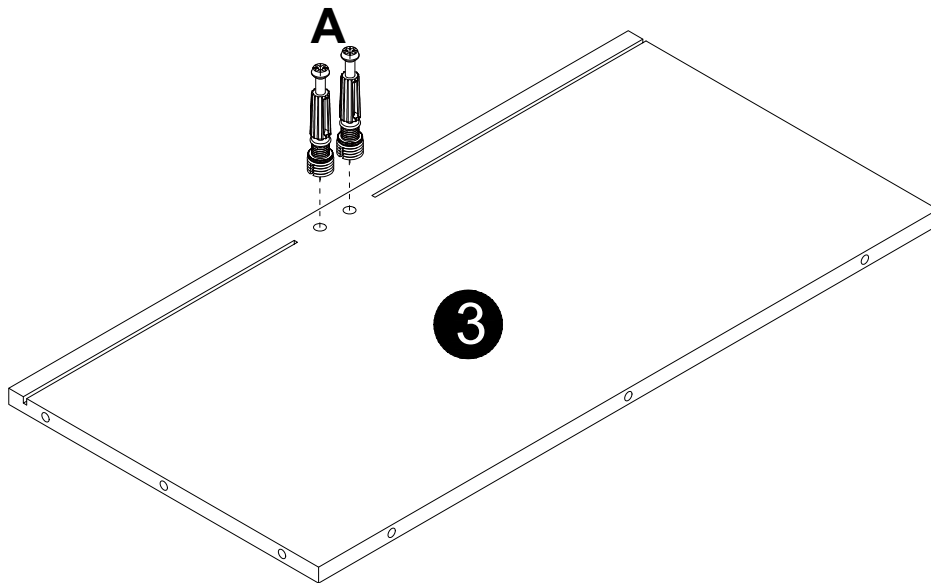


4


B

Ø15x12mm
4 pcs


Step 1

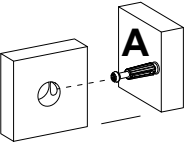


Step 2

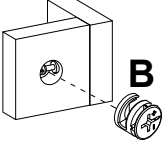

Step 3


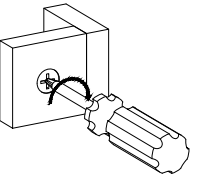


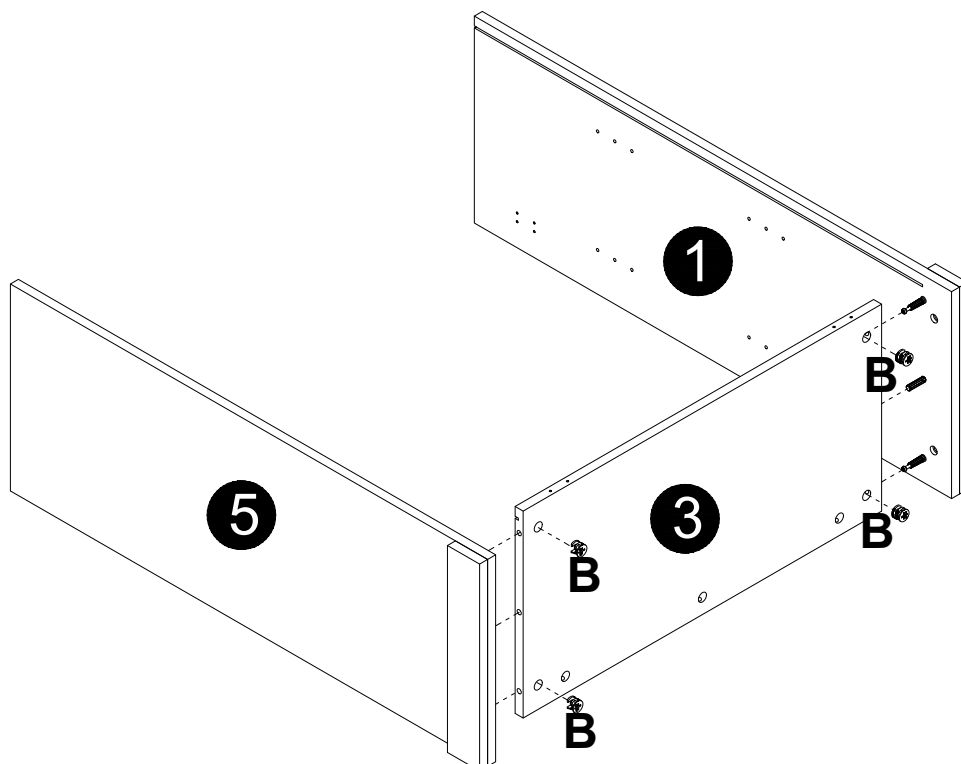


5

B


Ø15x12mm
2 pcs

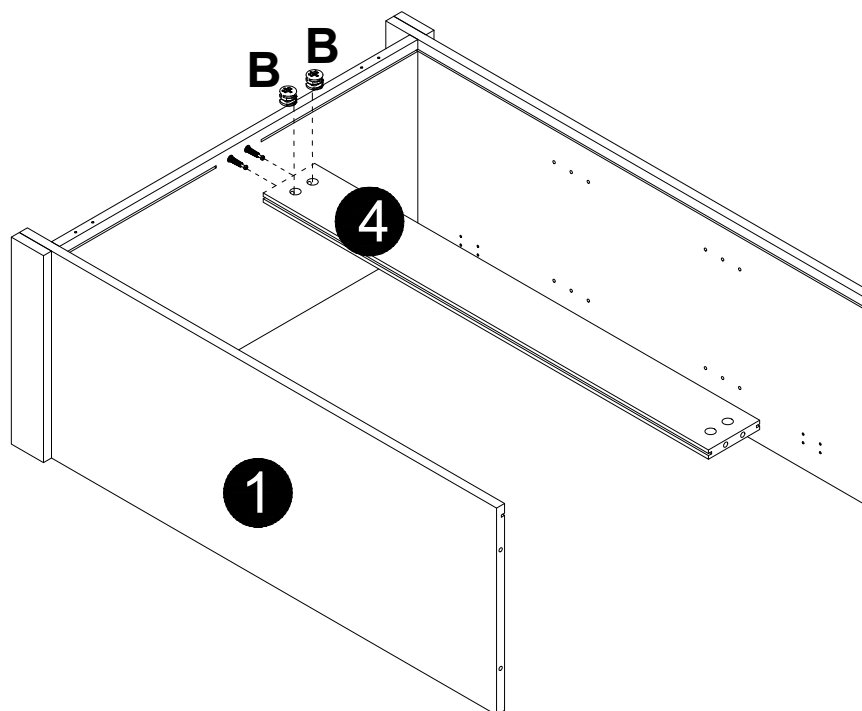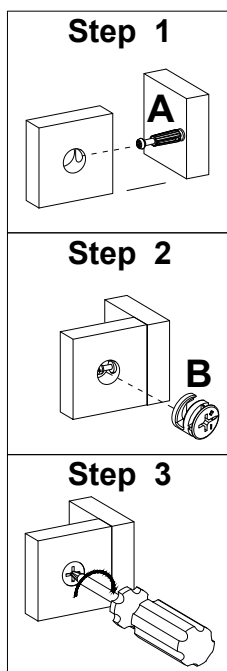


6



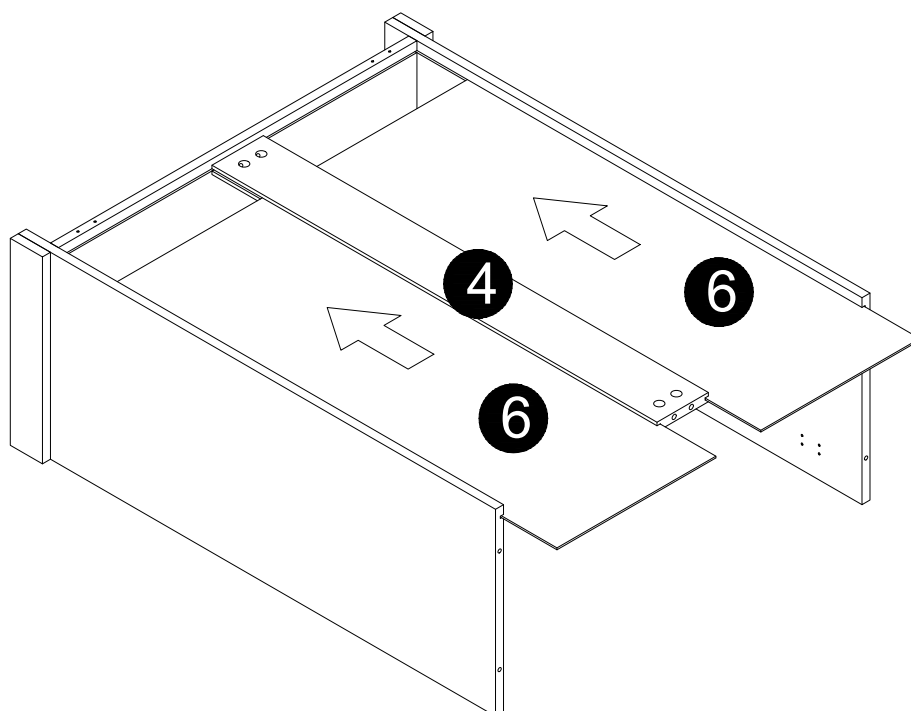


7

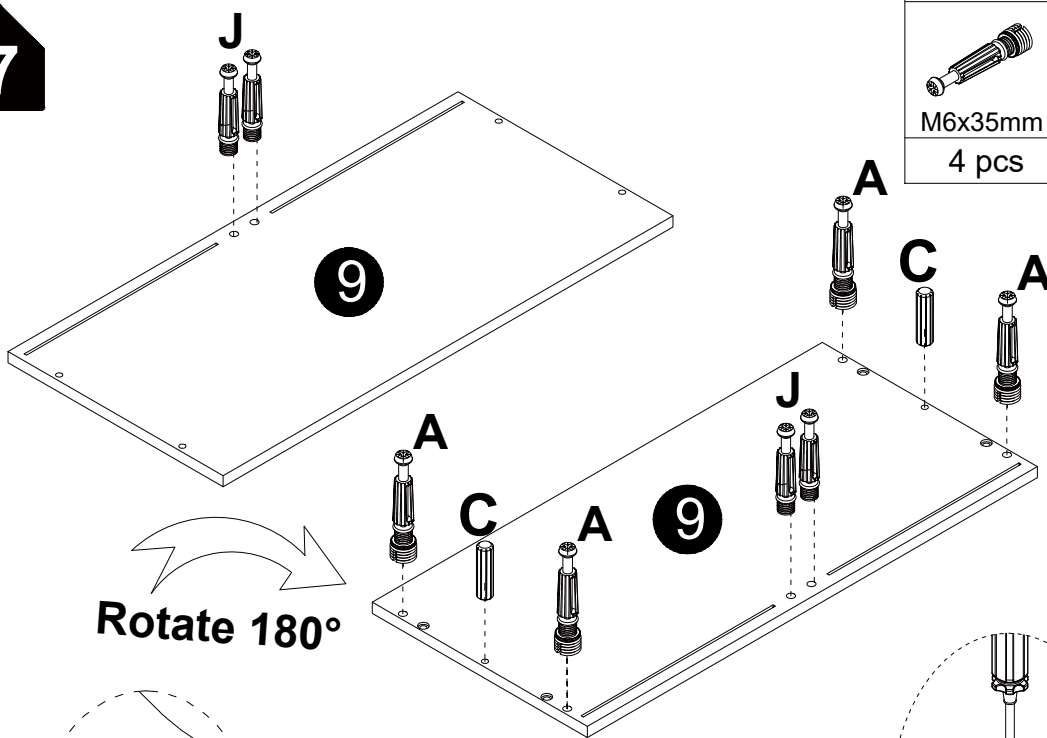


A	J	C
		
M6x35mm	M6x35mm	Ø8x30mm
4 pcs	4 pcs	2 pcs

Rotate 180°

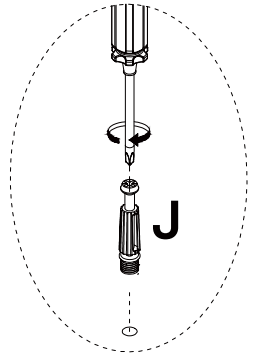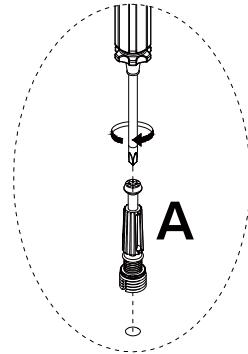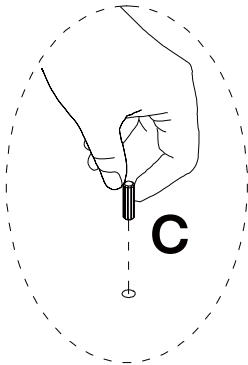


8

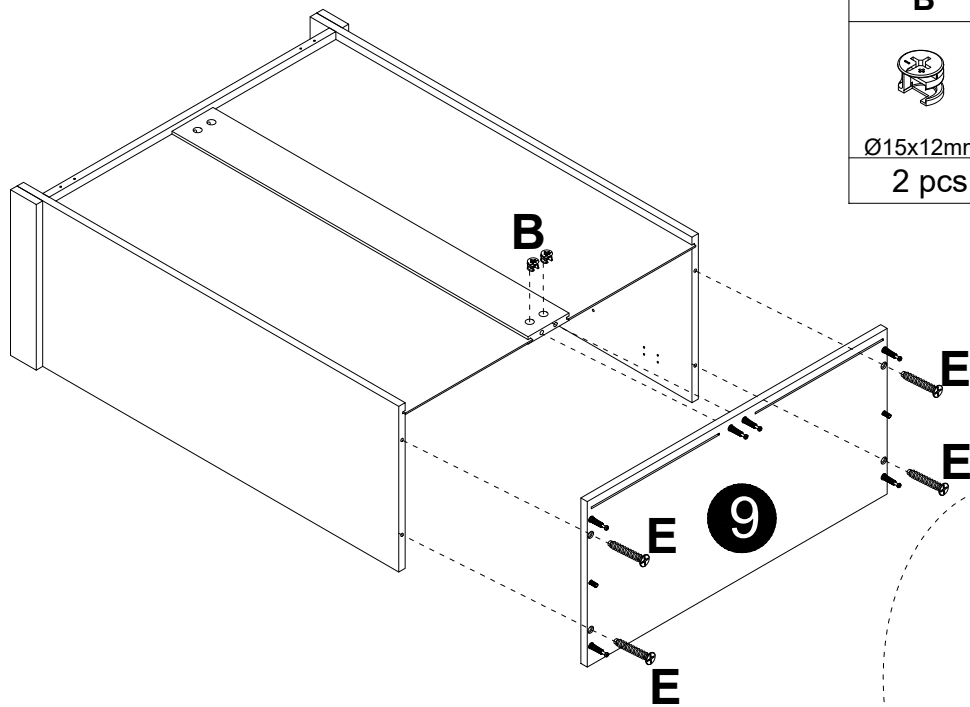


B	E
	
Ø15x12mm	Ø7x38mm
2 pcs	4 pcs



Step 1

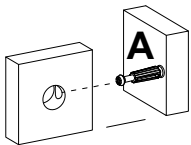


Step 2

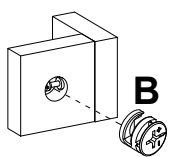

Step 3

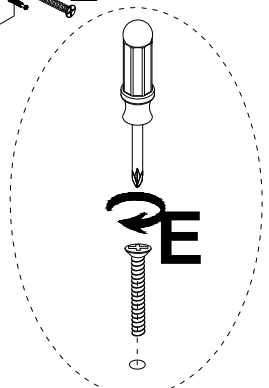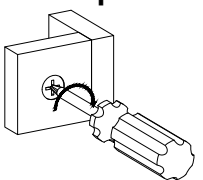


9


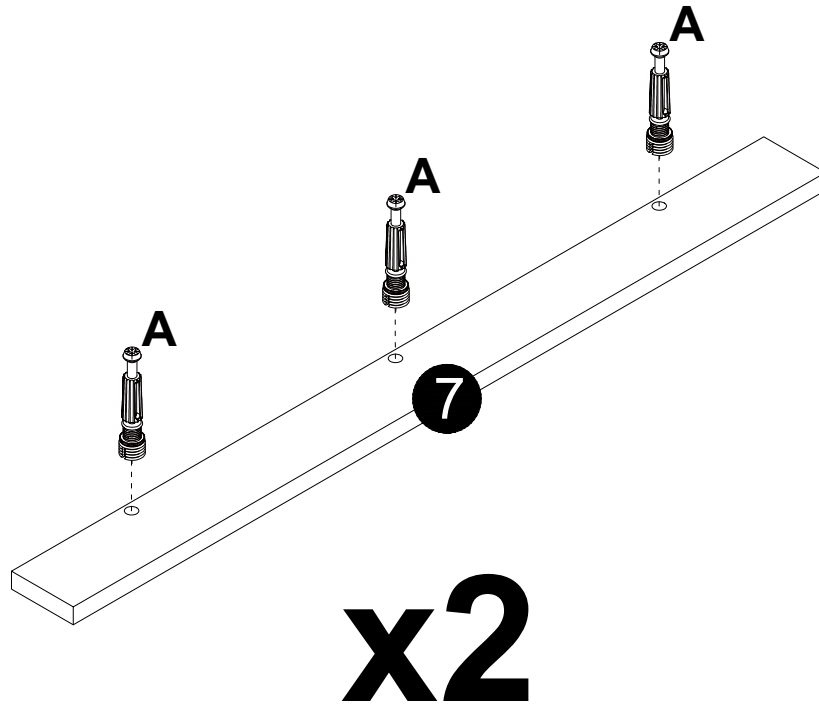


A

M6x35mm
6 pcs

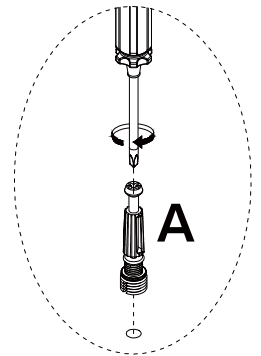


10

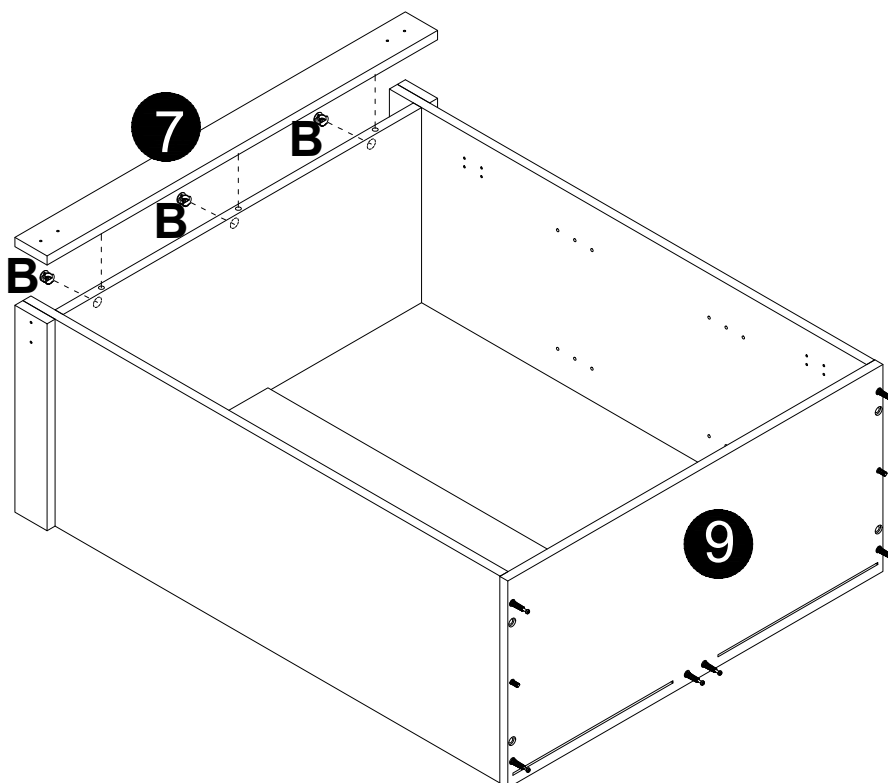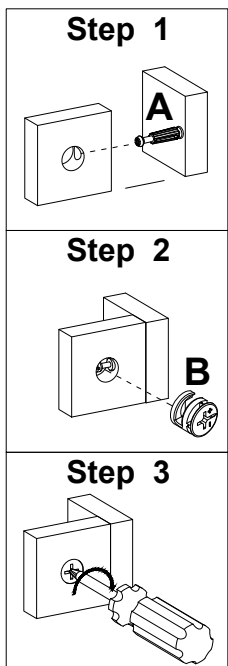

B

Ø15x12mm
3 pcs


11

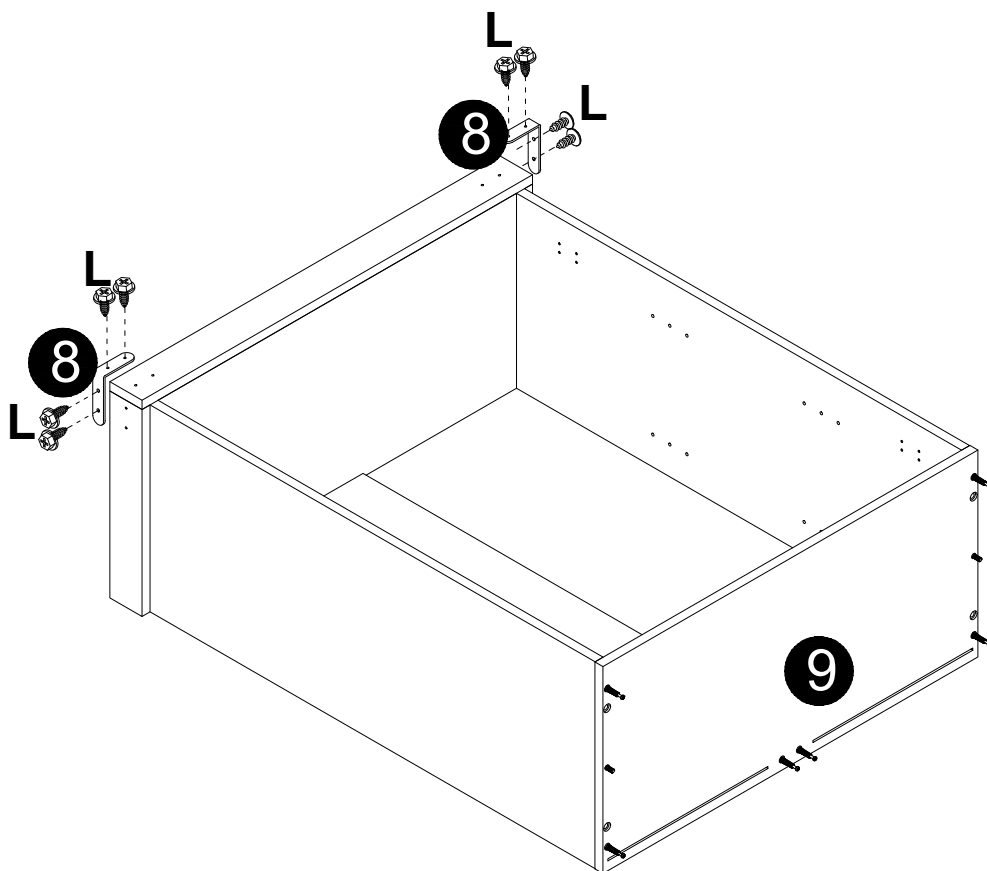


L

Ø9x14mm
8 pcs


12

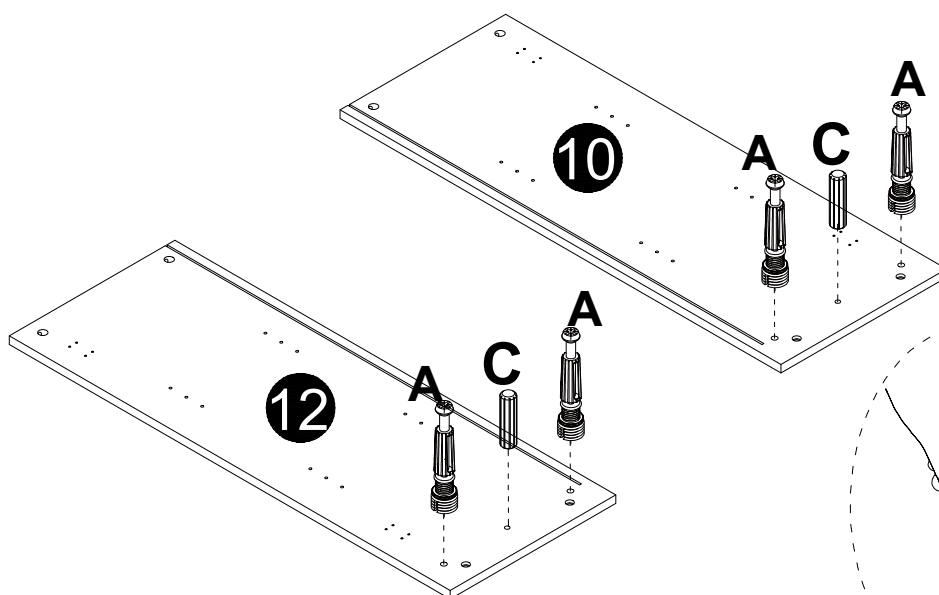

A	C
	
M6x35mm	Ø8x30mm
4 pcs	2 pcs

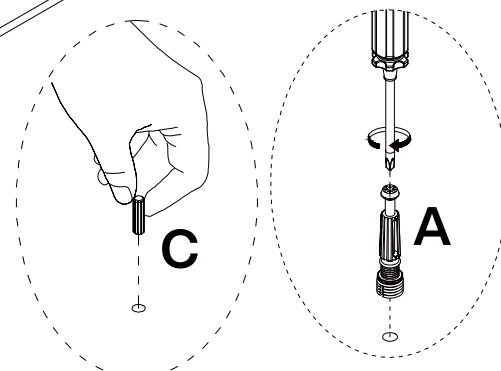


13

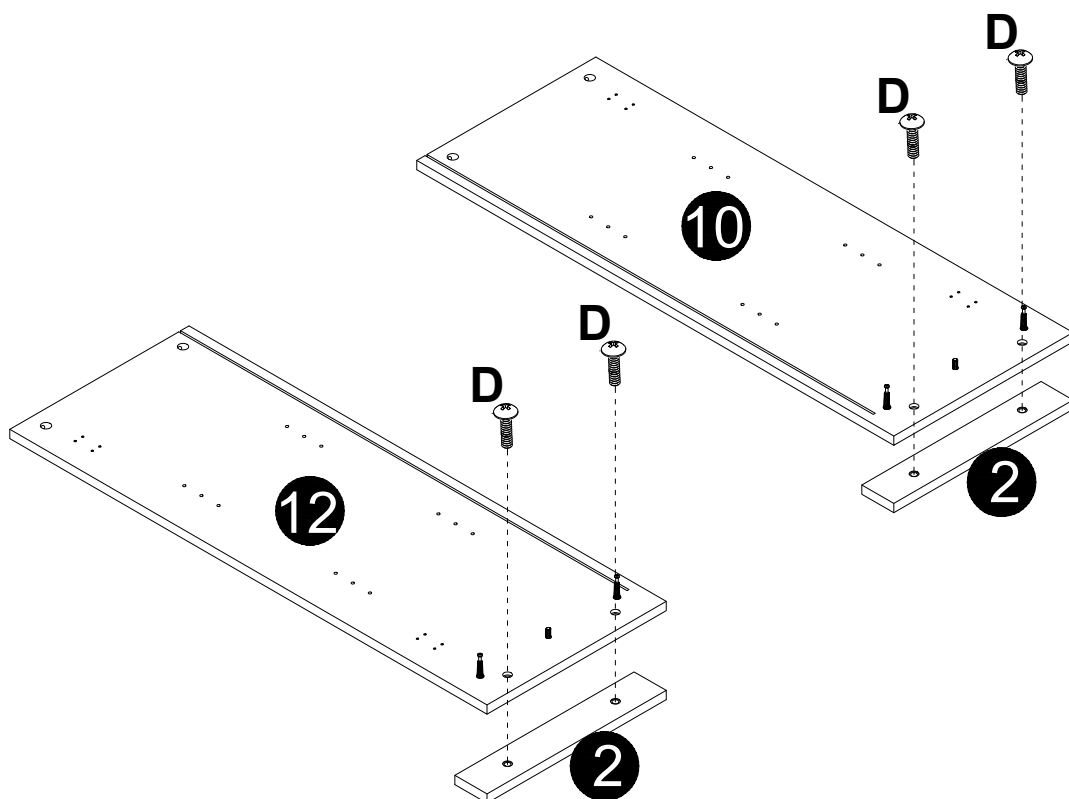



D


Ø6x20mm
4 pcs

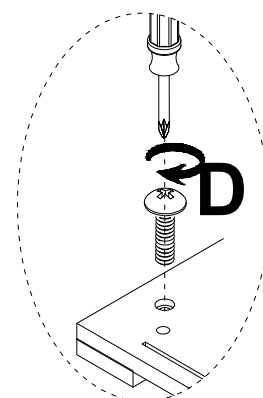

14

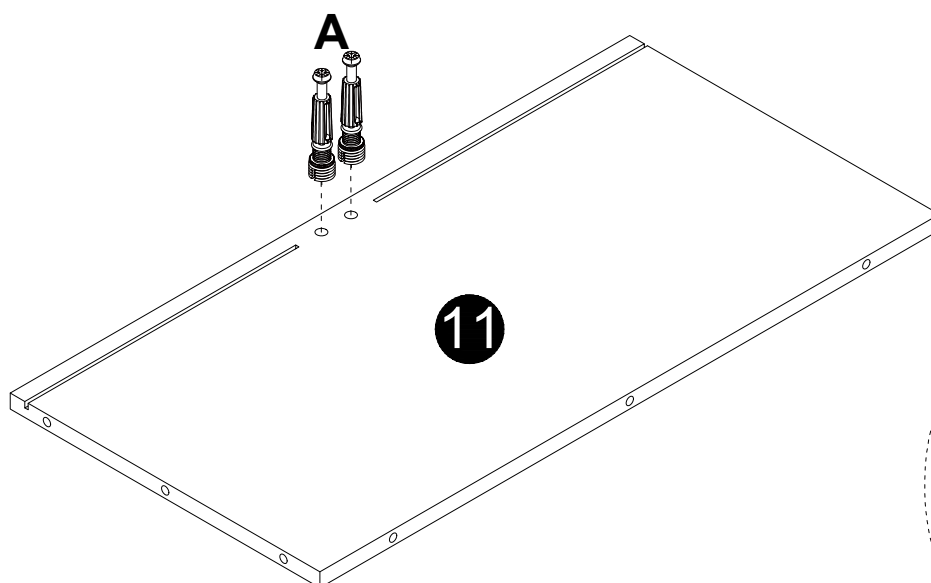



A

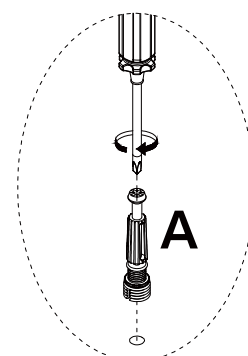M6x35mm
2 pcs



15

B

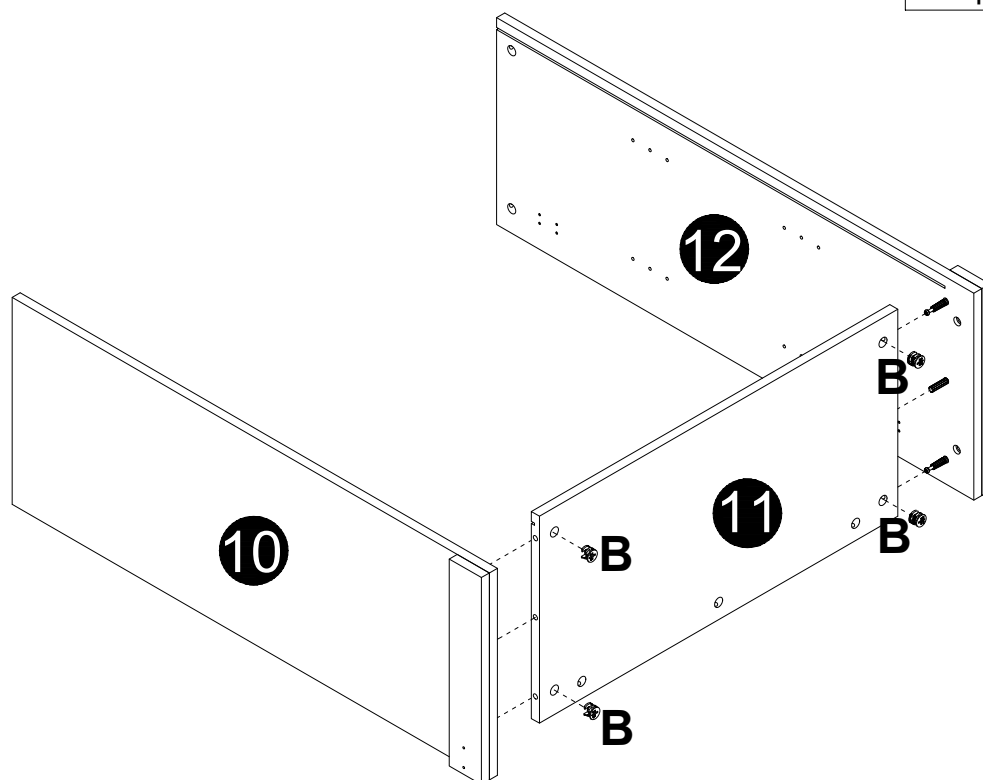
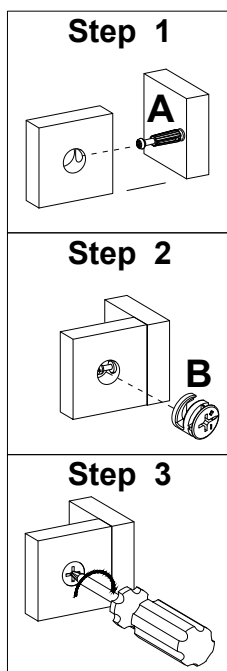
Ø15x12mm
4 pcs





16

B

Ø15x12mm
2 pcs

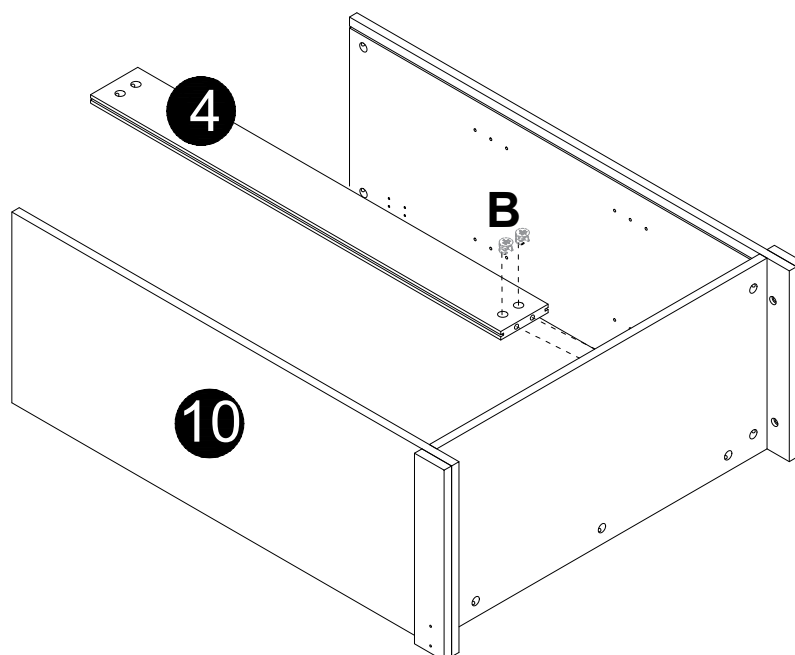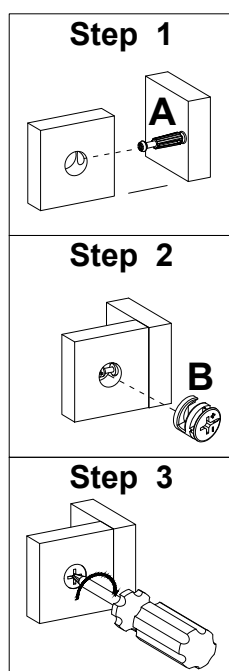


17

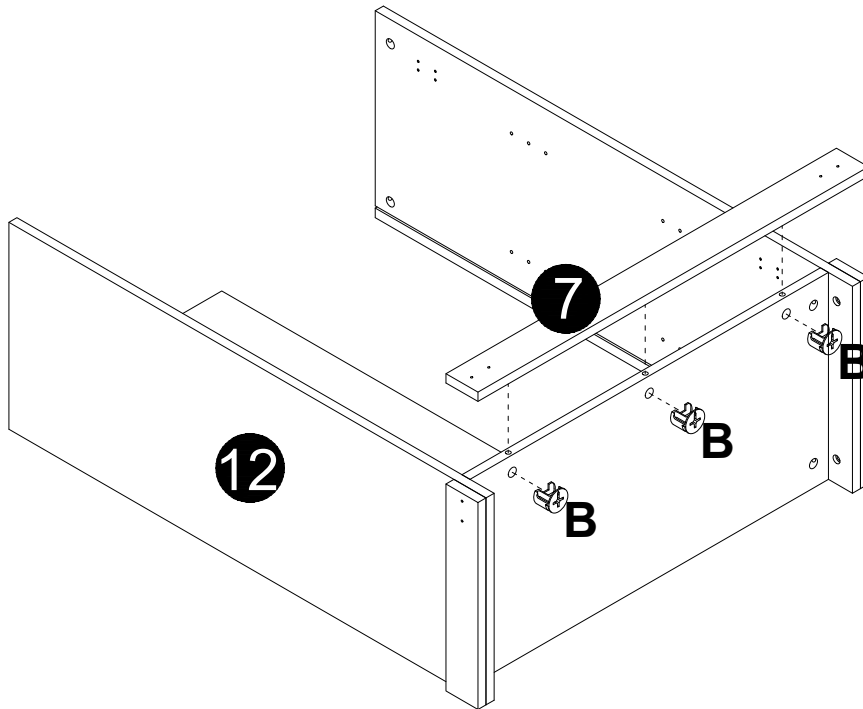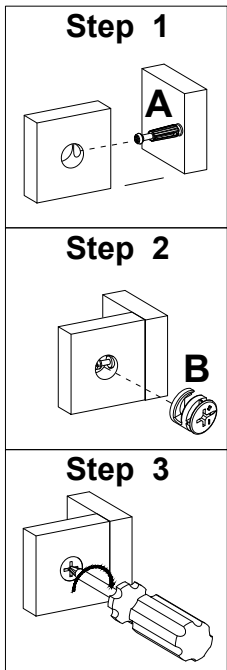

B

Ø15x12mm
3 pcs


18

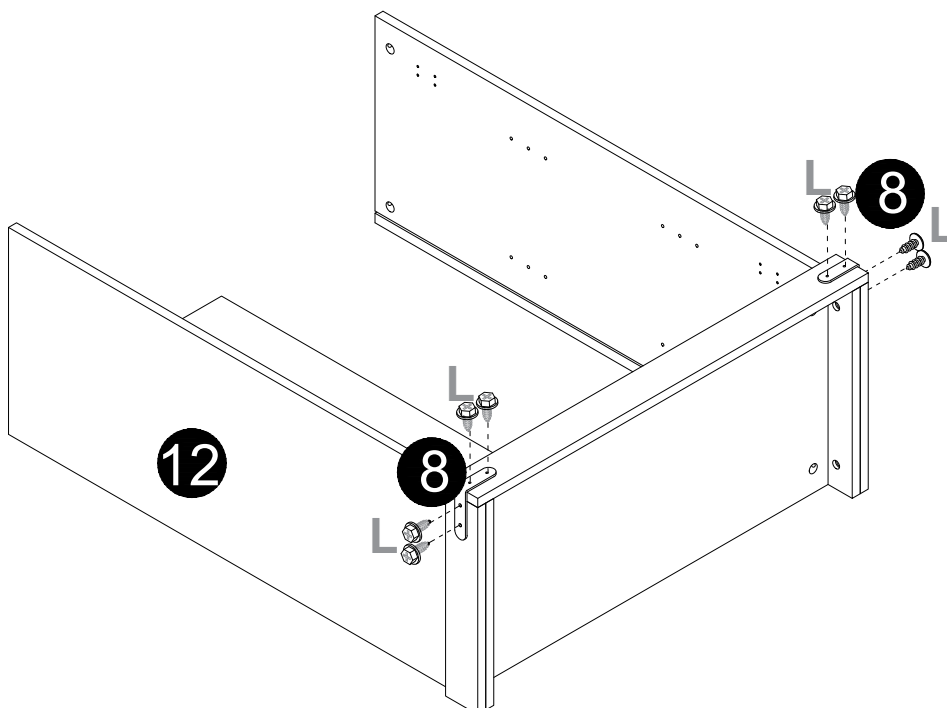



L

Ø9x14mm
8 pcs

19

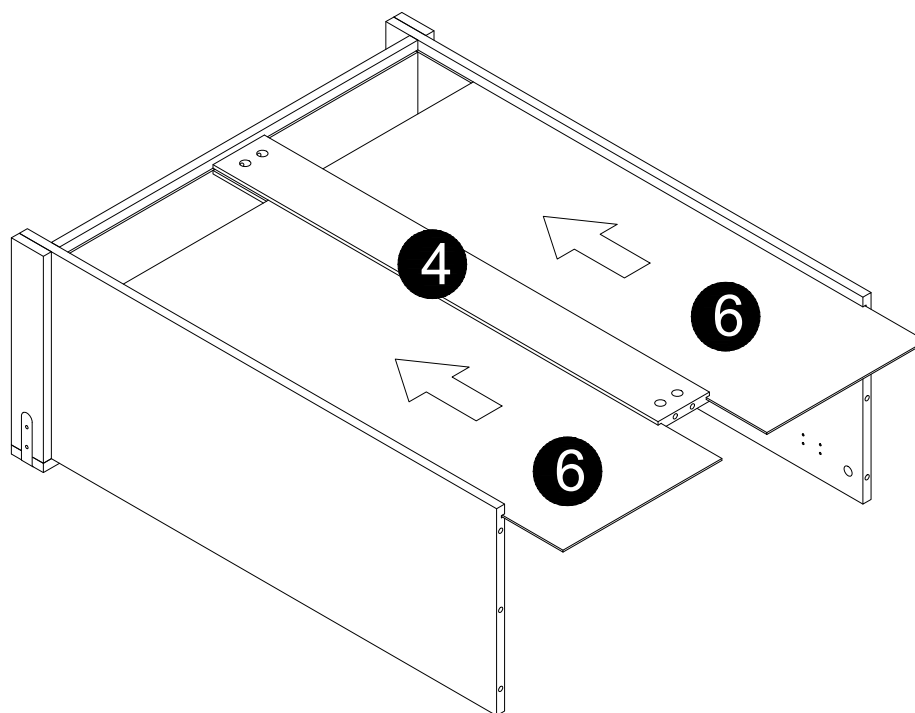


20

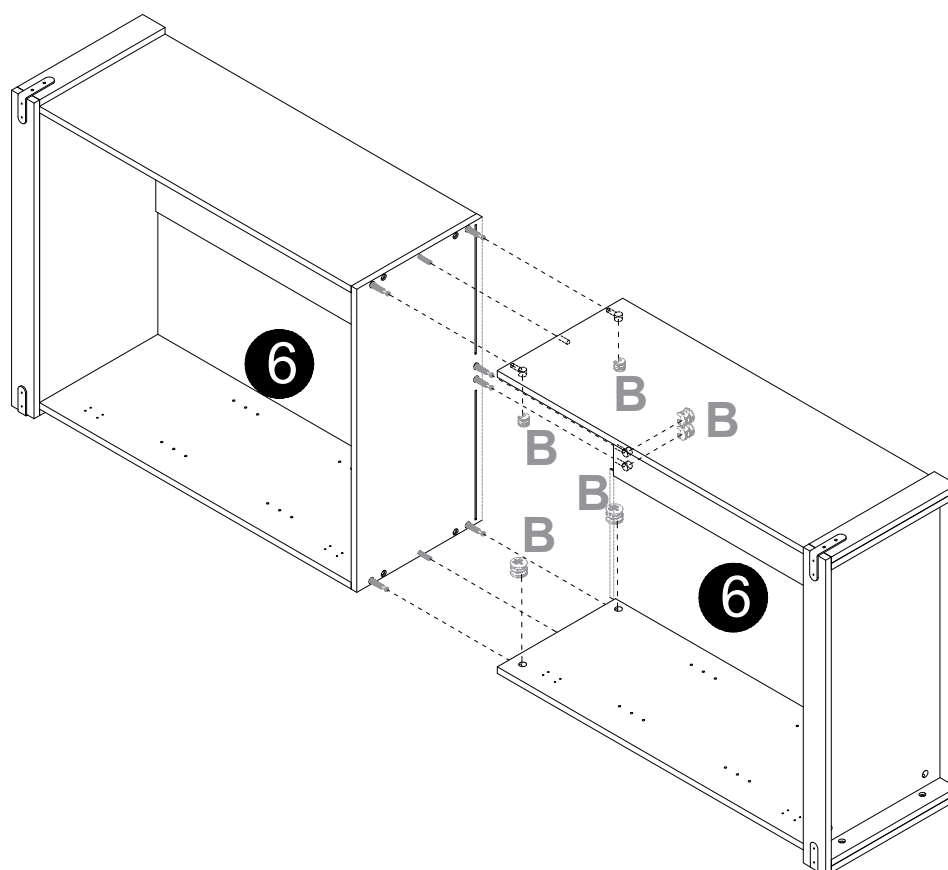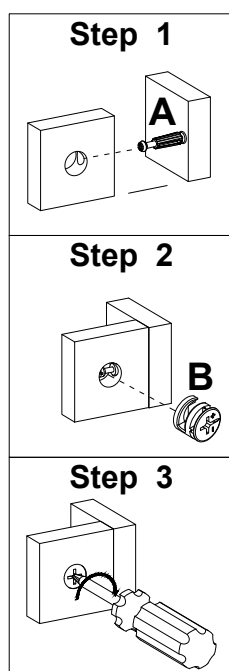

B
Ø15x12mm
6 pcs


21

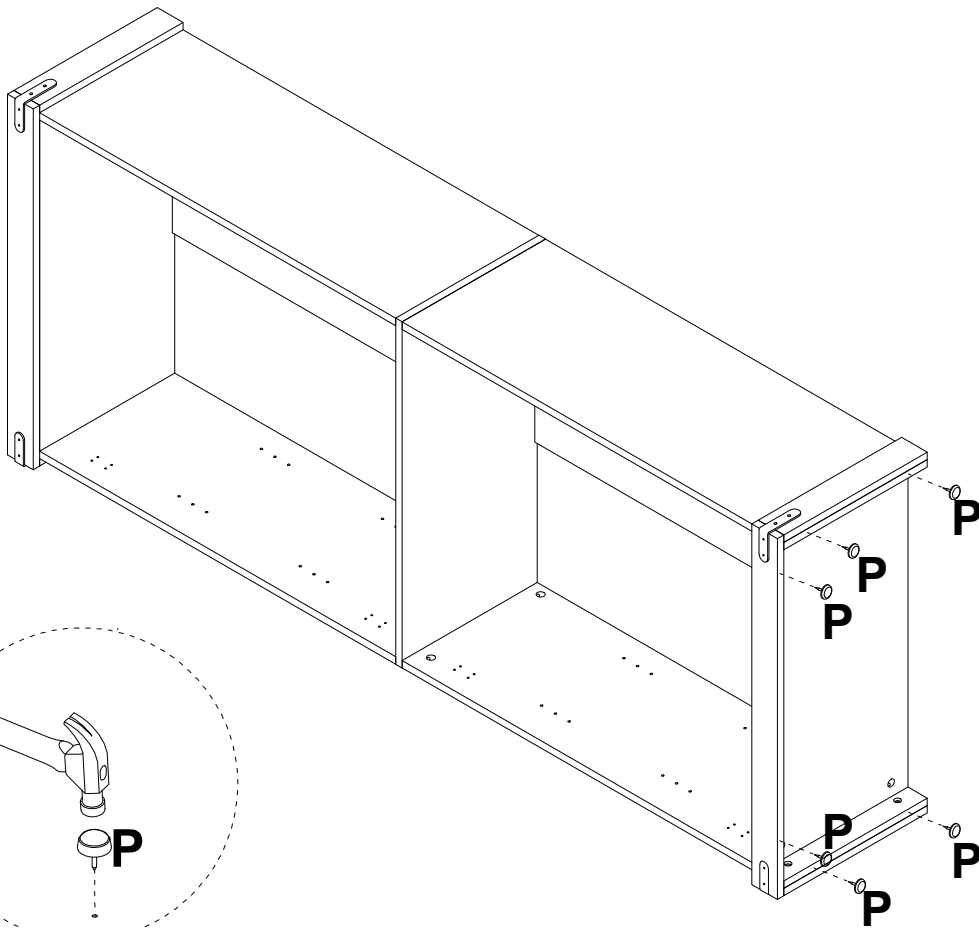


P
6 pcs

⚠ Caution! Tap lightly


22

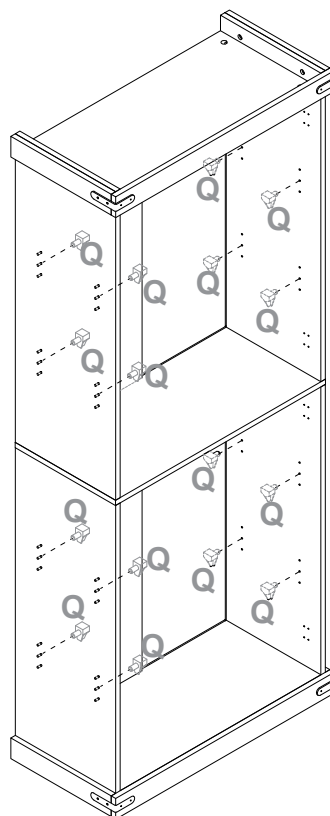


Q
16 pcs

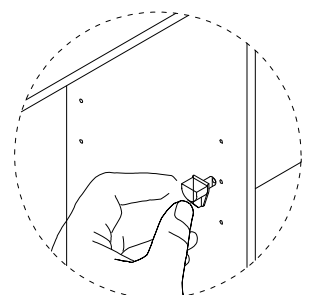

23

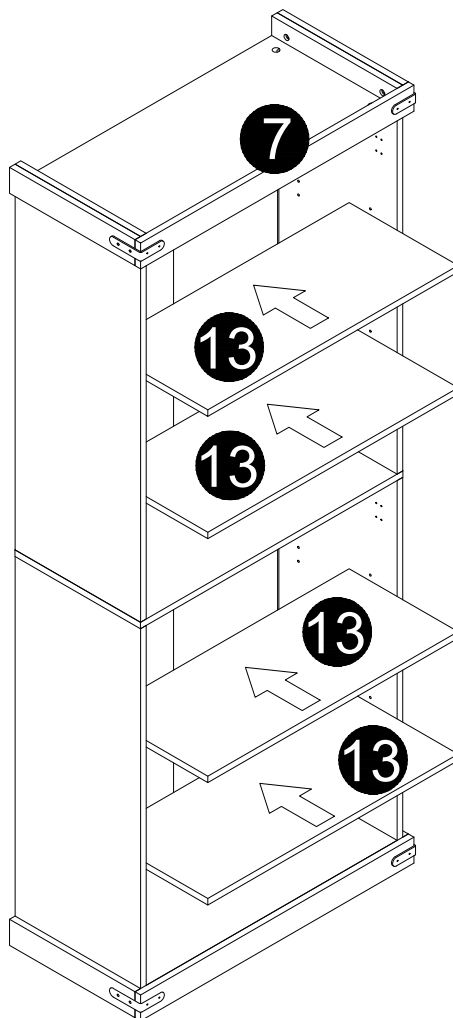


24

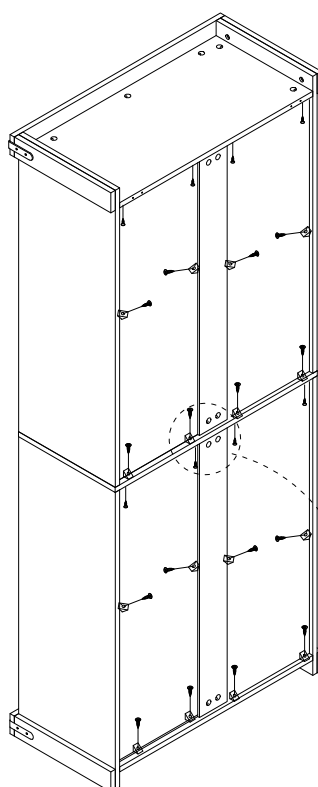


H	K
24 pcs	24 pcs


Step 1

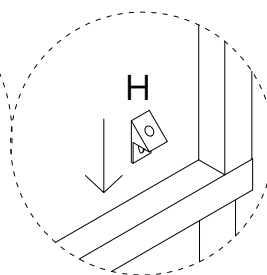


Step 2

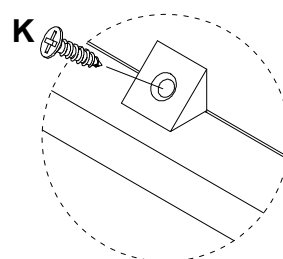


25

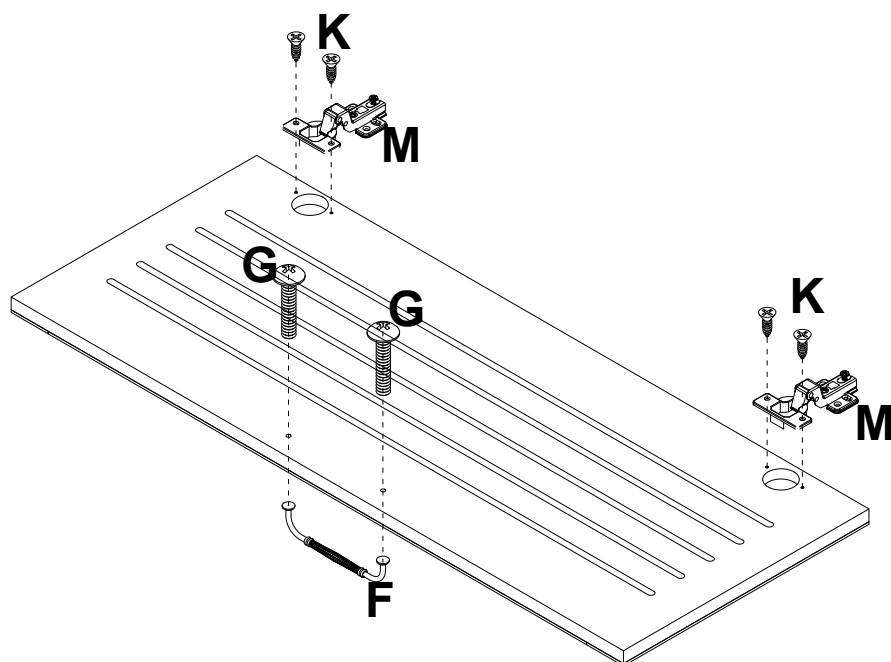

K	F
	
Ø3.5x14mm	128mm
16 pcs	4 pcs
G	M
	
M4x18mm	
8 pcs	8 pcs


x4

26

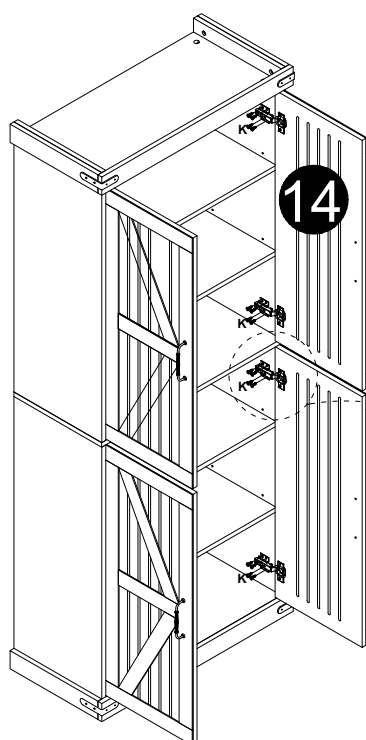

K

Ø3.5x14mm
32 pcs

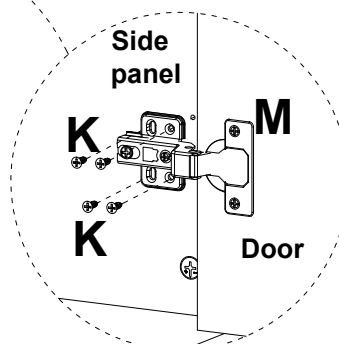


To prevent the door hinge from falling off, please install 4 screws

P-20

Step 1


Open the door.

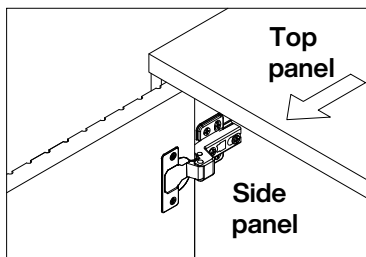

TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



Step 2

Adjust the door panel to be flush with side panel and top panel edge.

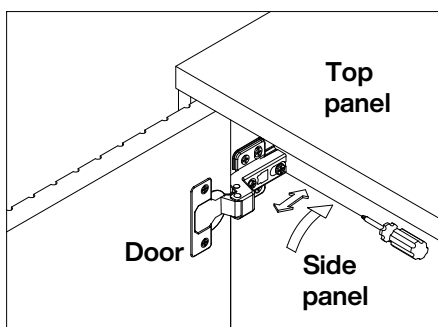



Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

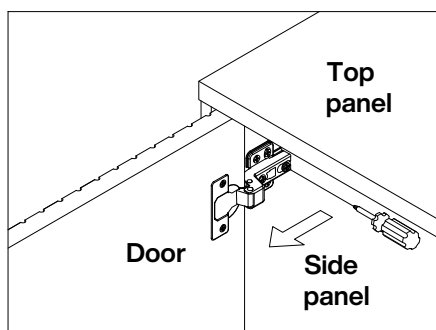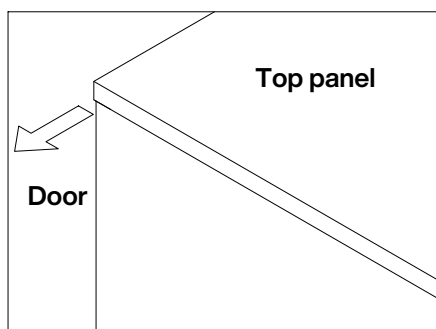

Pull the hinge forward a little.


Step 2b MOVE DOOR INSIDE

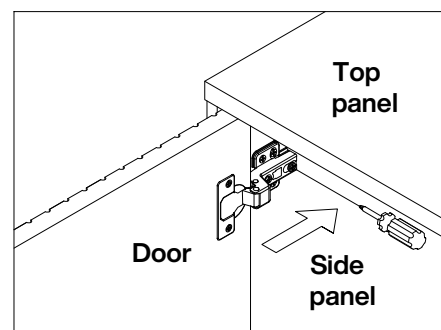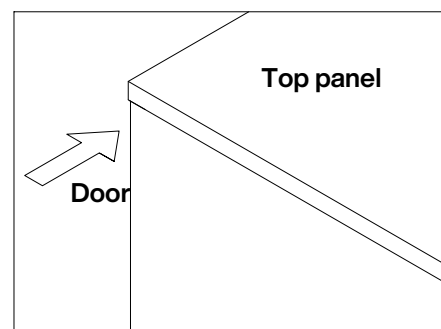

Pull the hinge back a little.



Step 3

Adjust the gap between door panel and side panel.

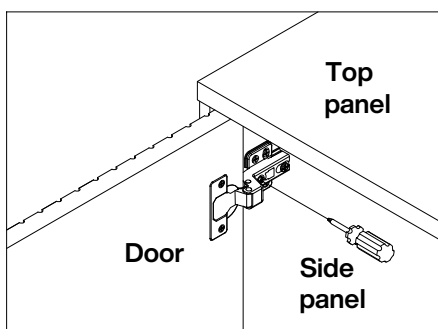



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

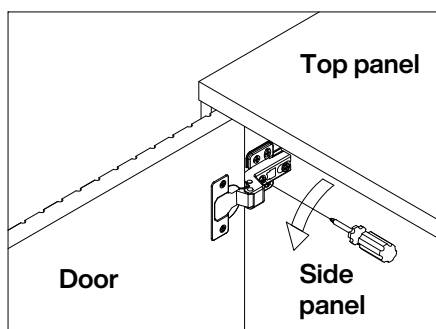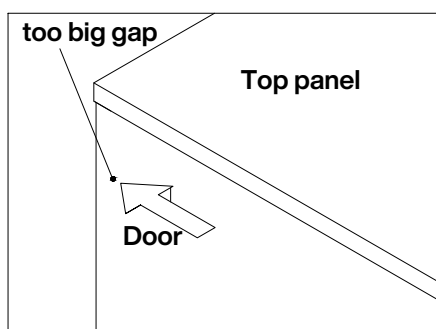

Turn the screw clockwise a little as shown to make the gap small.


Step 3b MOVE DOOR RIGHT

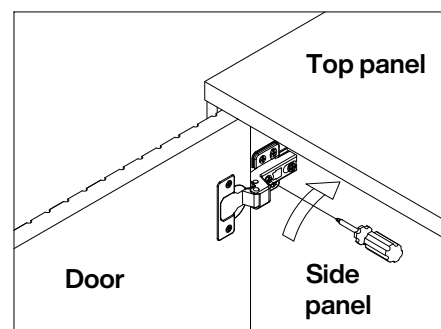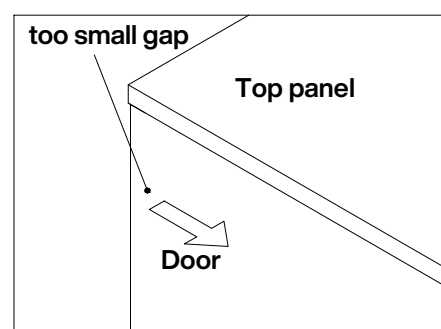


Turn the screw counterclockwise a little as shown to make the gap big.

0


2 pcs

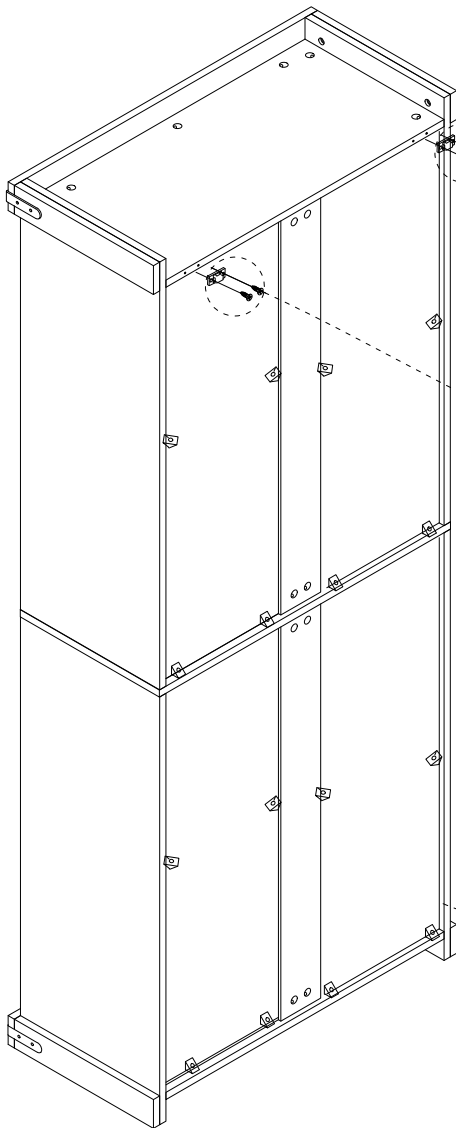



Step1 **Wall**



Step2

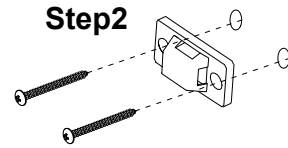

Step3

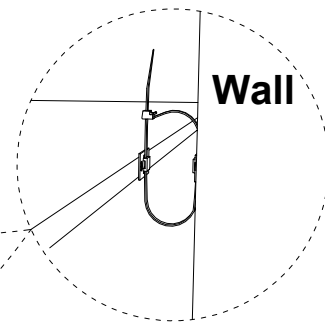

Thank you for your support!

