




DESIGNED FOR LIFE

Assembly Instructions

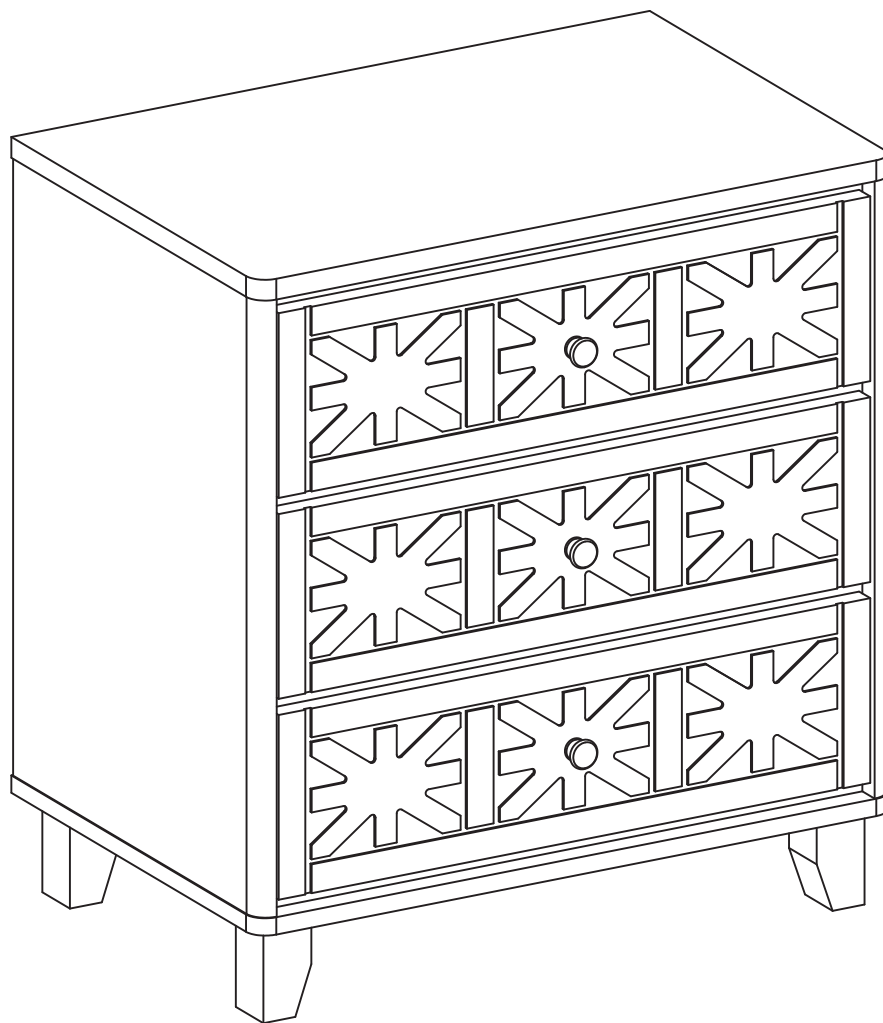

**Three Drawer
Bedside Table**

Model No.
HOGA-SL0049



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.



Installation Video




Step2

Search with the Model No.
(on the bottom left corner of the title page)

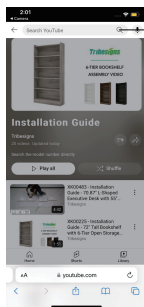


HOGA-SL0049

Note: If you can't find the assembly video, please contact us.

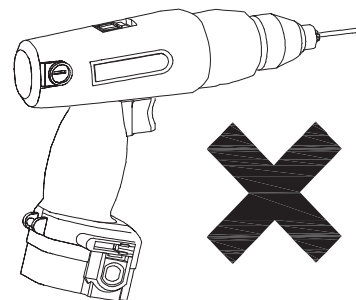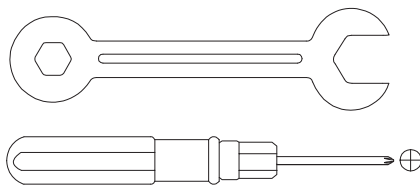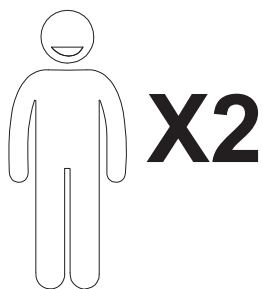



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

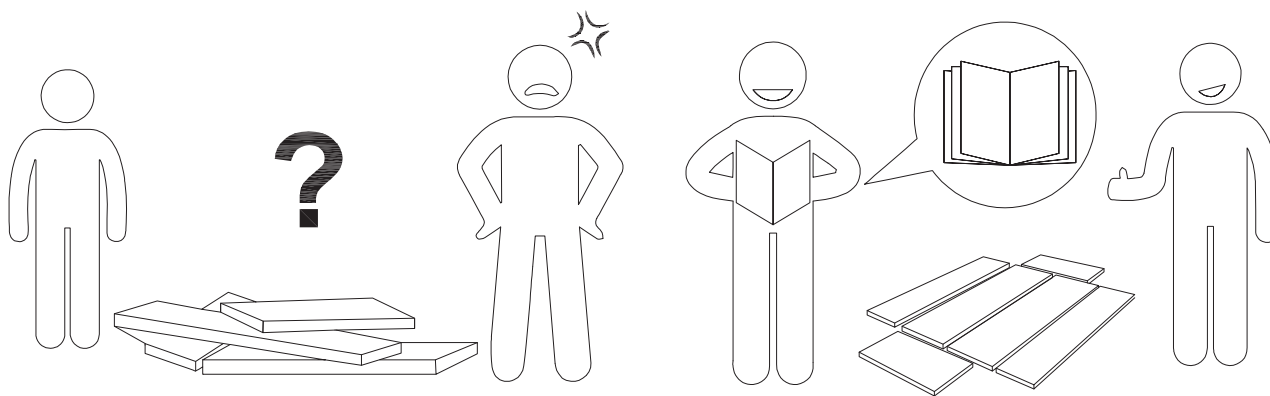

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

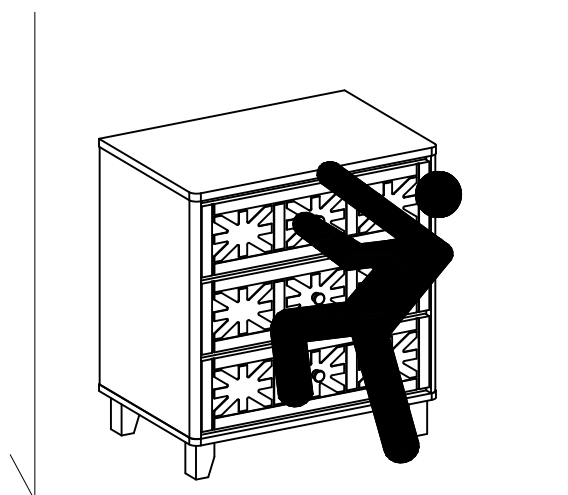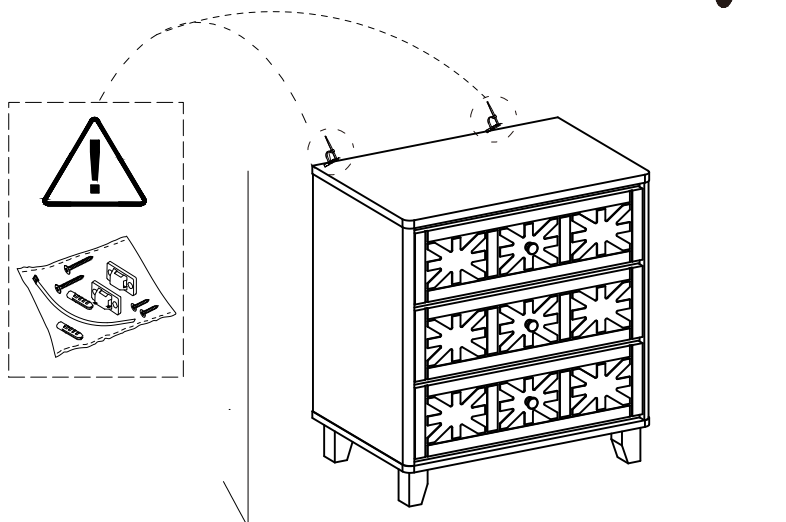

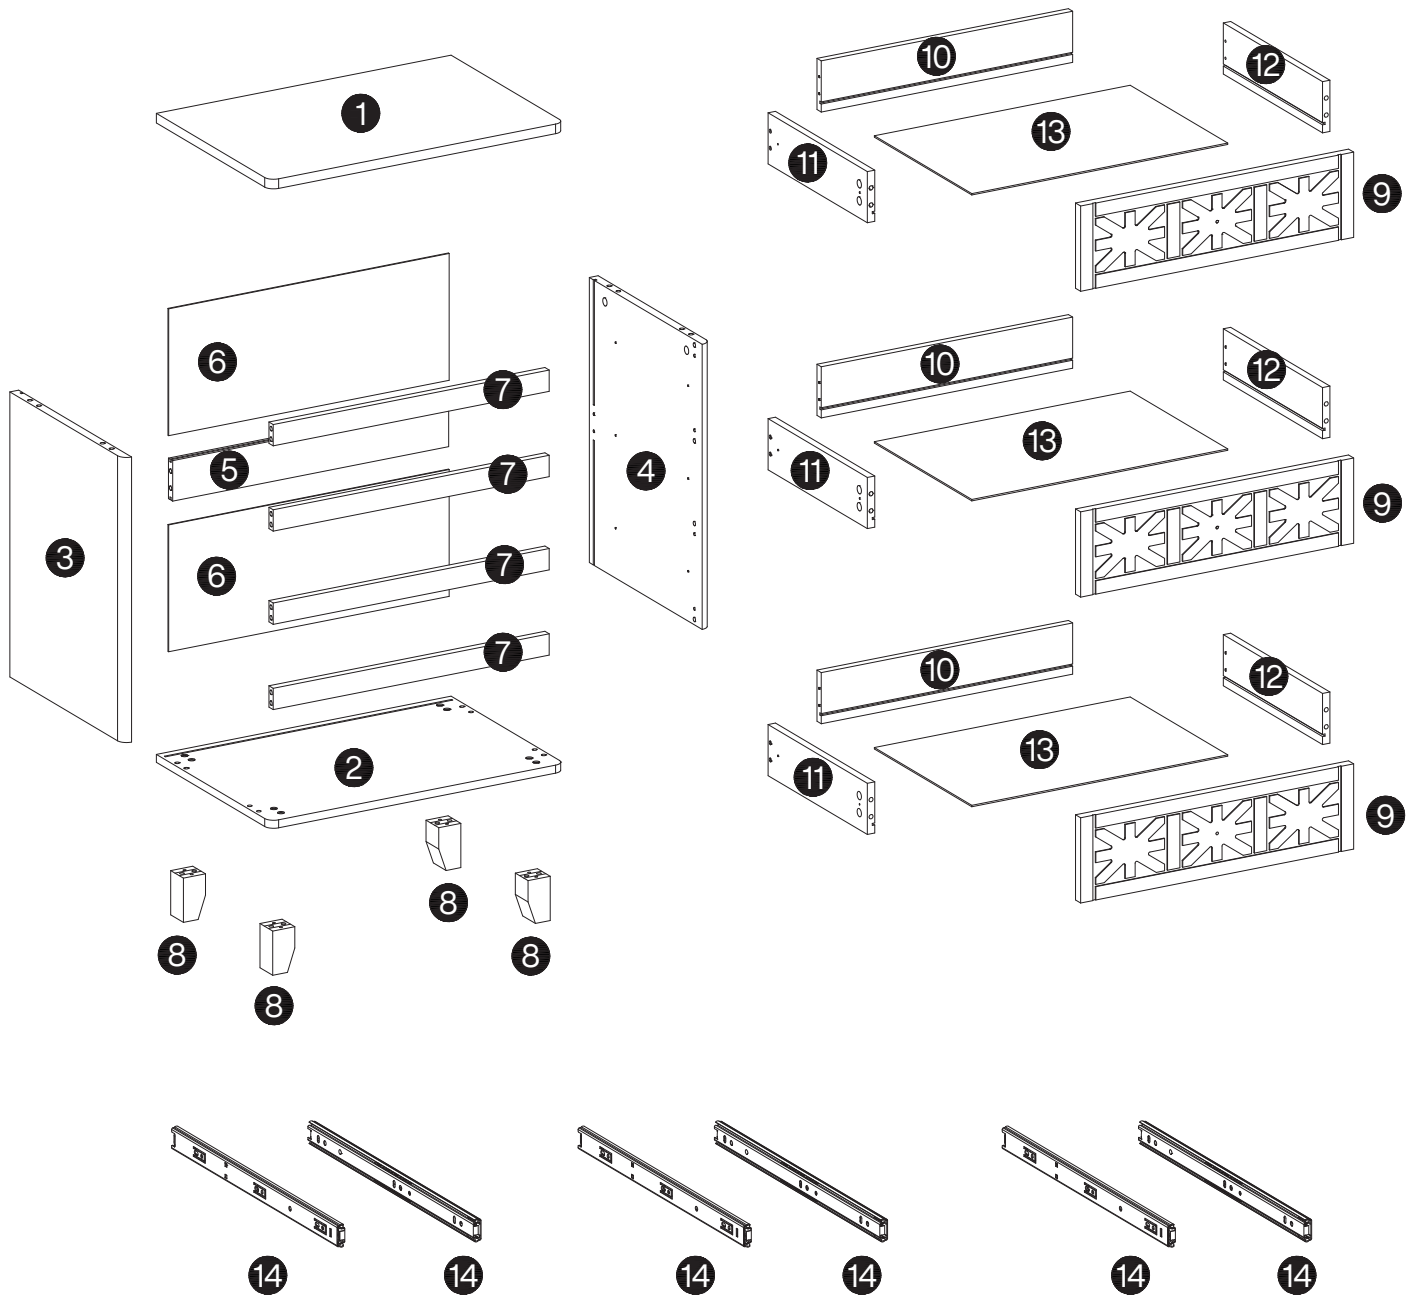




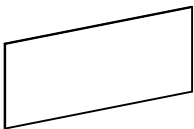







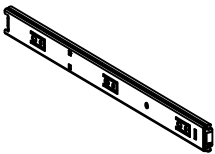


⚠ Caution








Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.













Parts List

 1 1pc	 2 1pc	 3 1pc	 4 1pc	 5 1pc
 6 2 pcs	 7 4 pcs	 8 4 pcs	 9 3 pcs	 10 3 pcs
 11 3 pcs	 12 3 pcs	 13 3 pcs	 14 6 pcs	

Hardware List

A	B	C	D	E	F	G
 M6×35mm	 Ø15×11mm	 Ø8×30mm	 M7×38mm	 M3×14mm	 M4×35mm	 M4×18mm
28 pcs	28 pcs	24 pcs	12 pcs	24 pcs	12 pcs	3 pcs



H	I	J	K	L	M	N
 S4	 S4	 S4	 S4	 M3.5×14mm	 S4	 M4×35mm
3 pcs	1 pc	4 pcs	8 pcs	8 pcs	2 pcs	2 pcs

O	P	Q				
 M4×12mm	 S4	 S4				
2 pcs	4 pcs	2 pcs				




Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

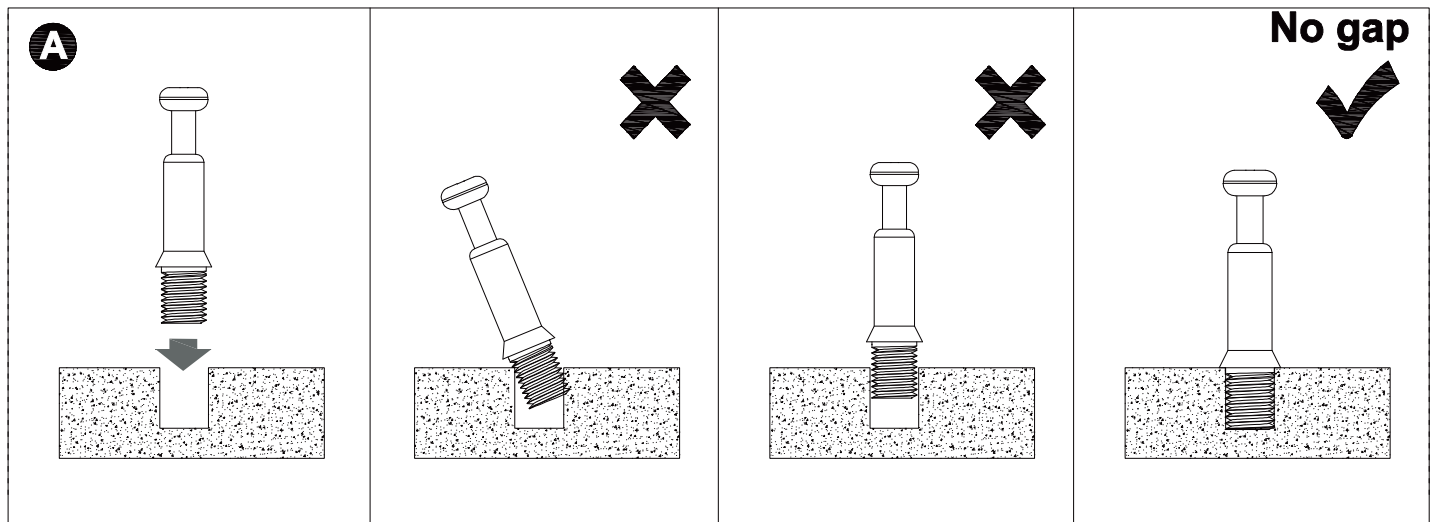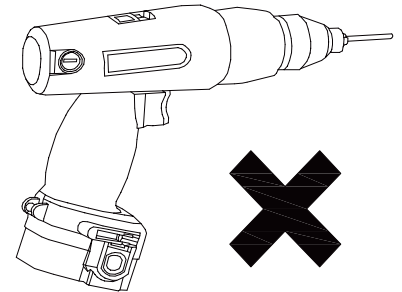

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

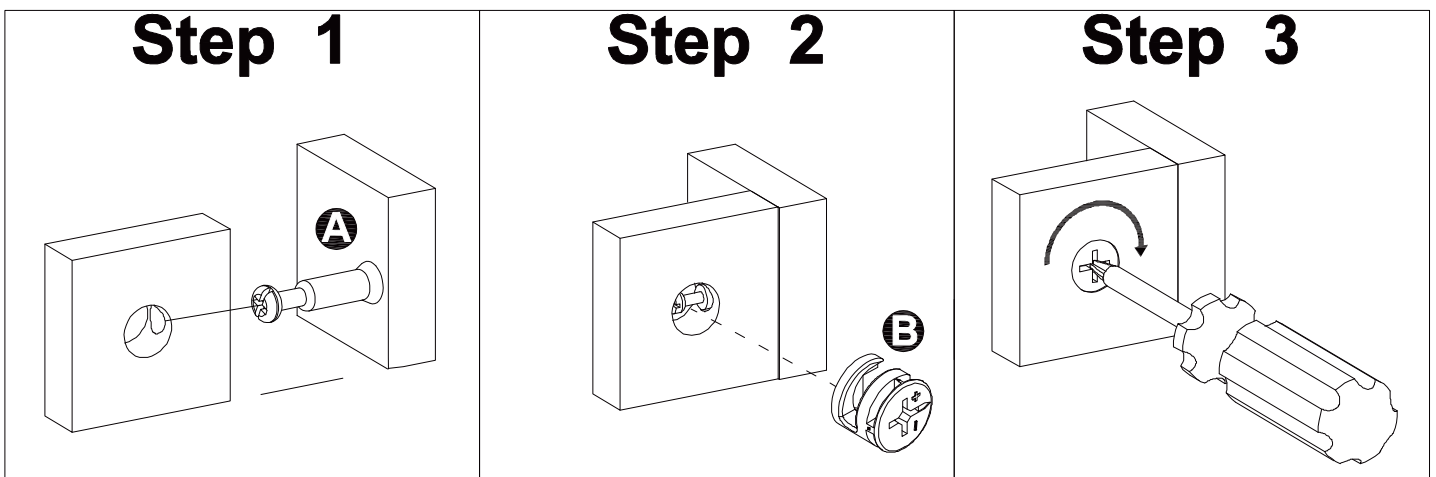





Please split component “14” into “14-1” and “14-2” before assembling the slide and then proceed to the next step of assembly

Step 1

Pull apart component "14" to each side, and then gently push up the lever of component "14-2"

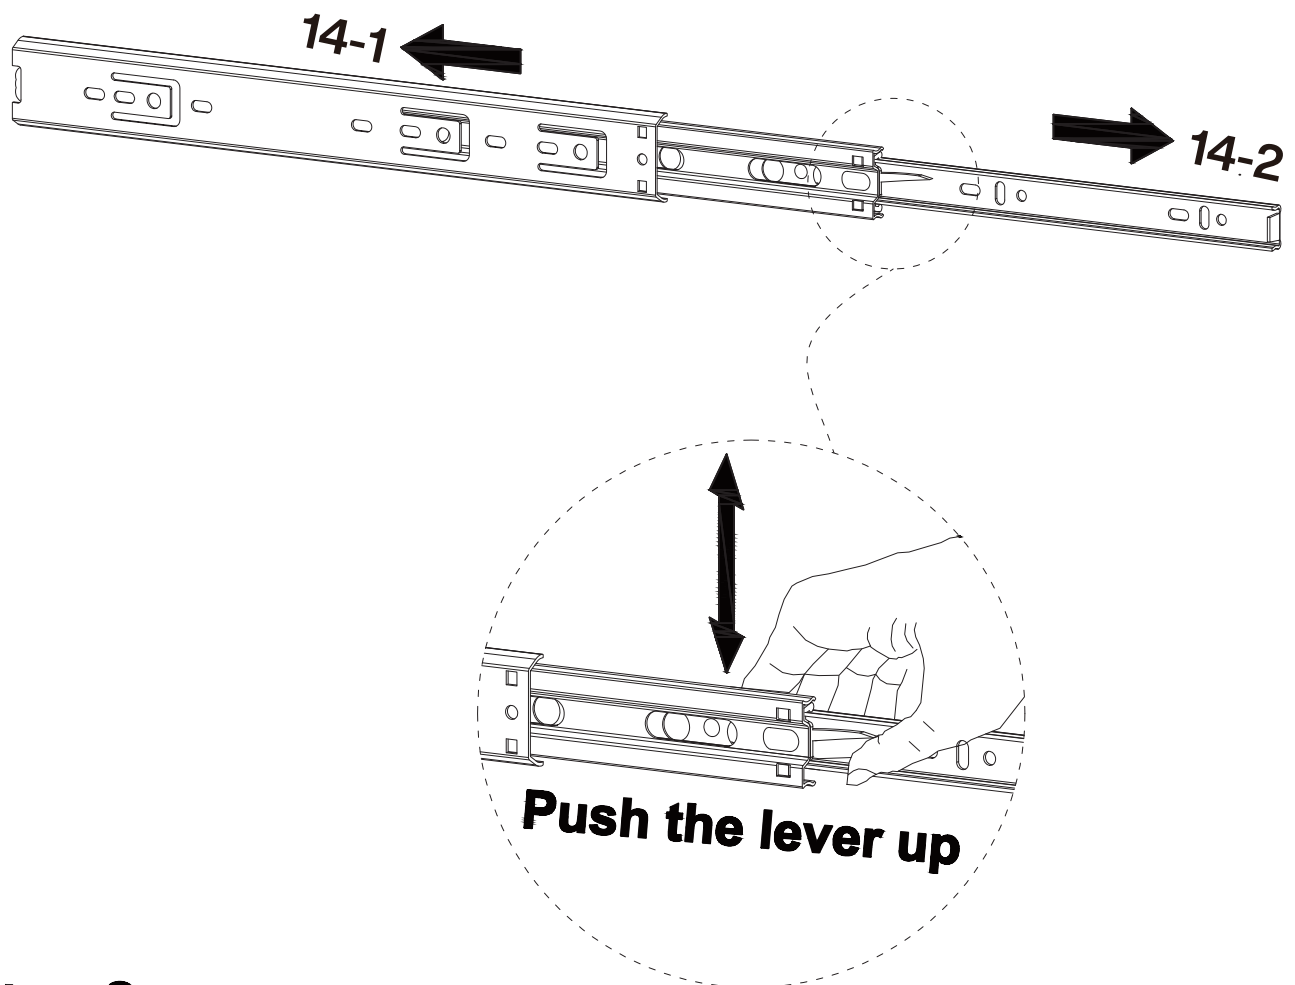


Step 2 Split component “14-1” and “14-2”

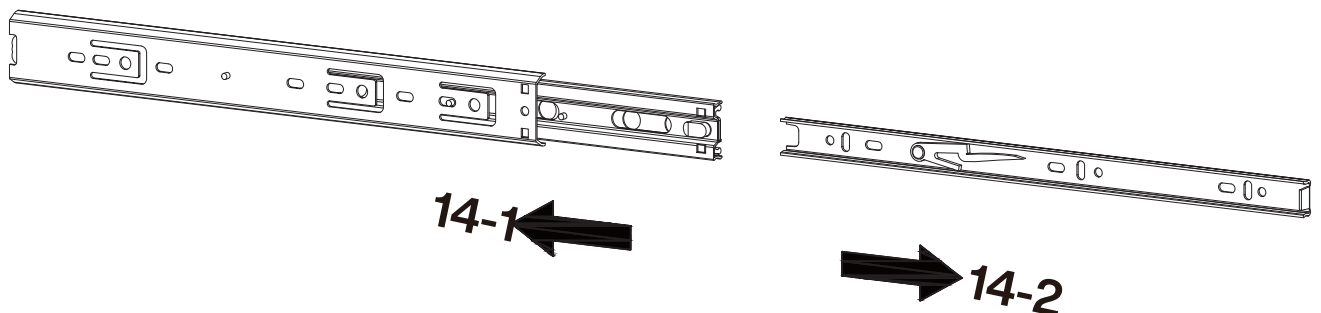




1

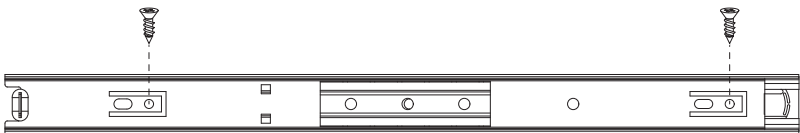


E
M3×14mm
12 pcs


14-1

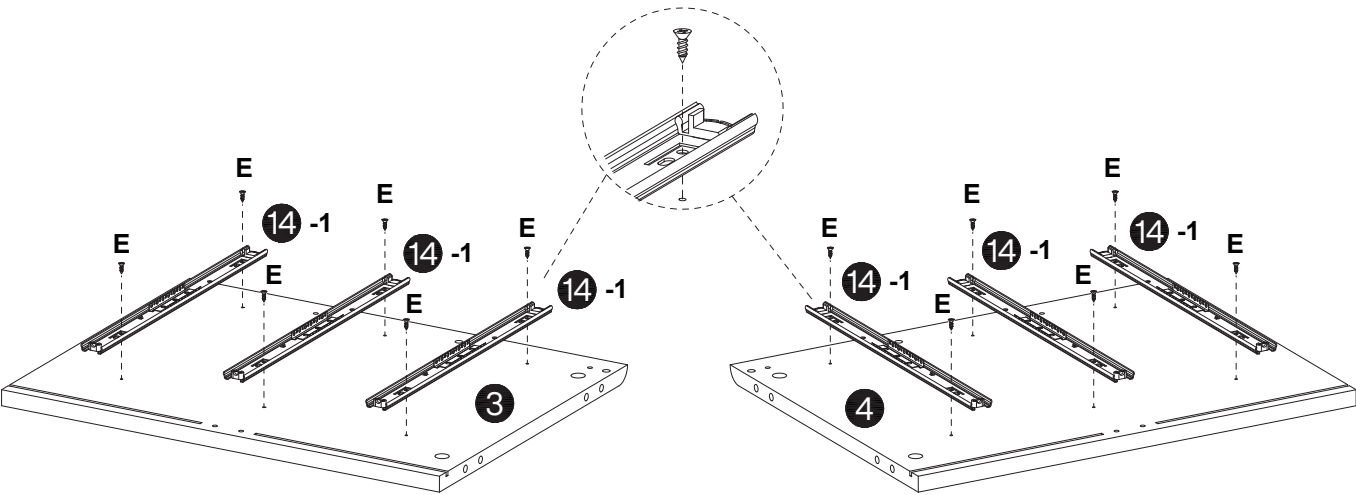

2

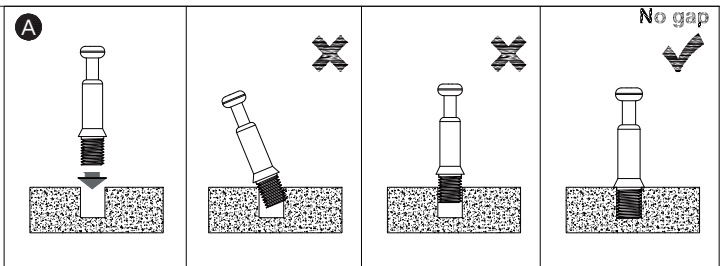



A	C
M6×35mm	Ø8×30mm
12 pcs	8 pcs

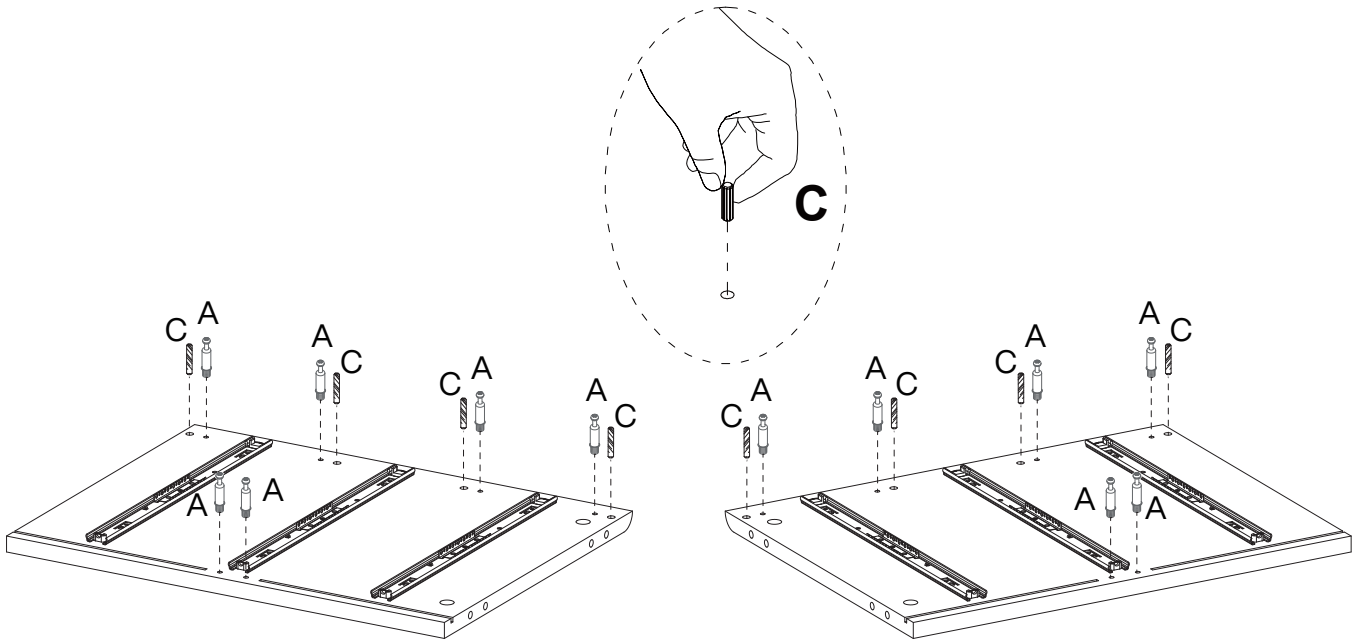





3

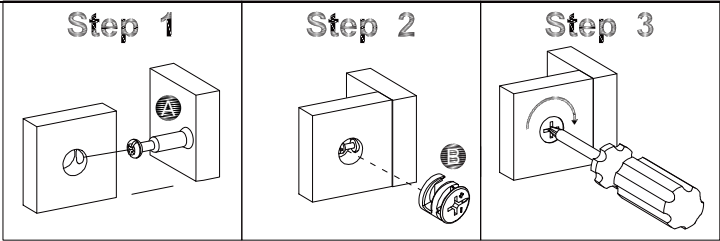

B

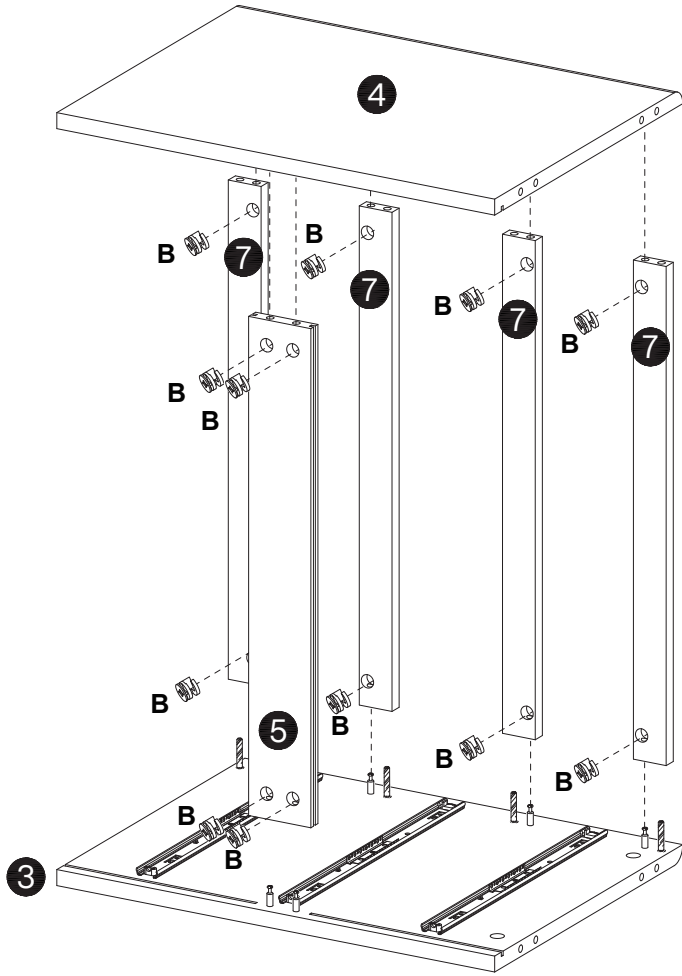Ø15×11mm
12 pcs



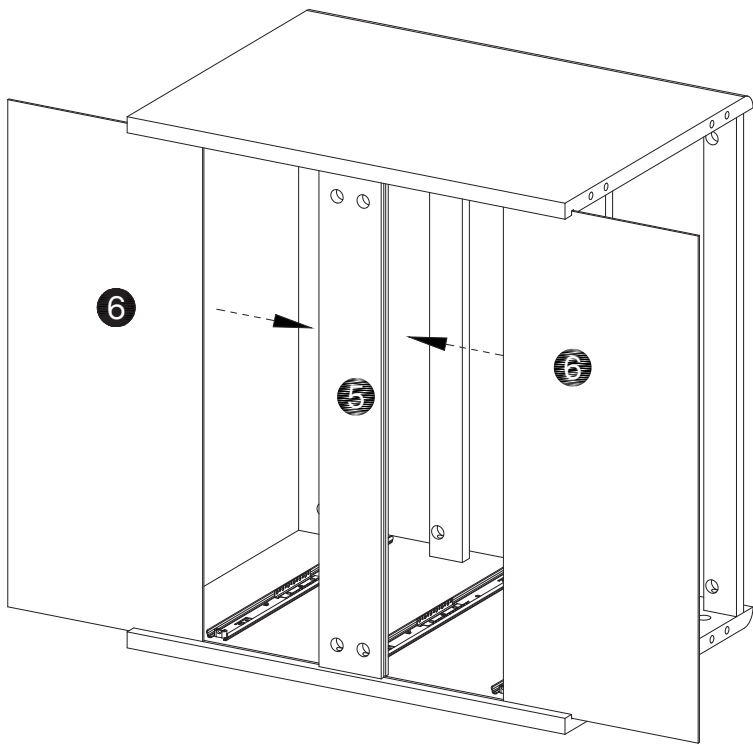



4







5


A	C
	
M6×35mm 4 pcs	Ø8×30mm 4 pcs

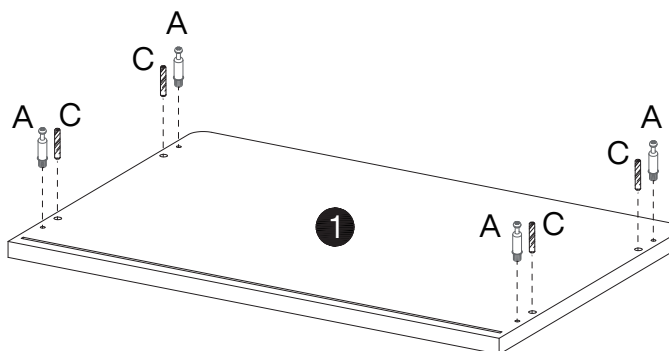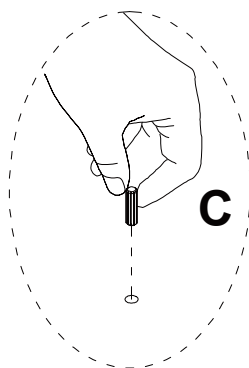

6

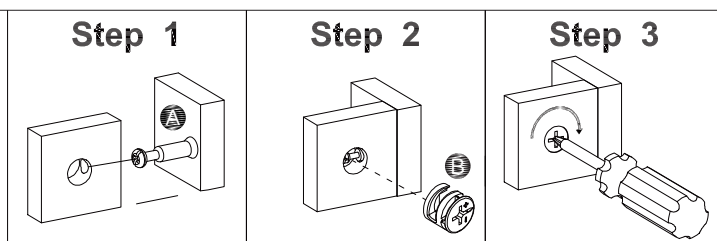


B

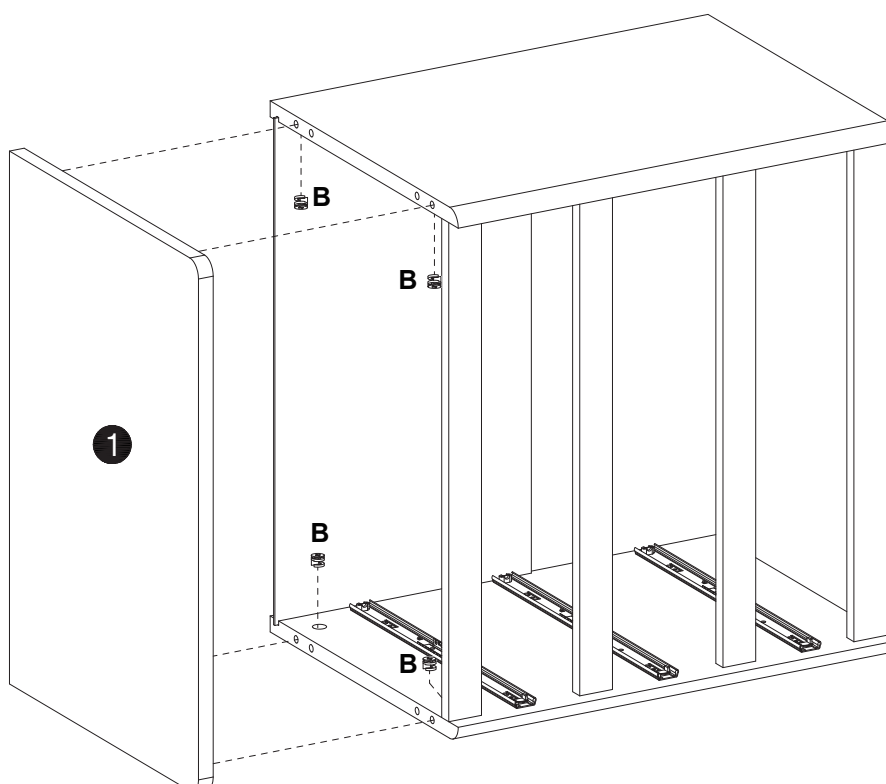Ø15×11mm 4 pcs





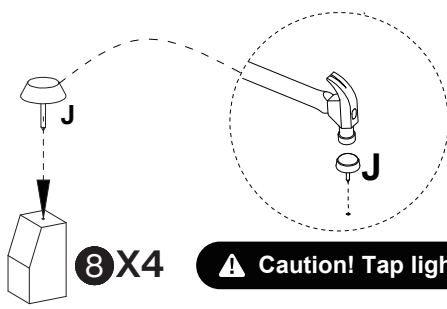


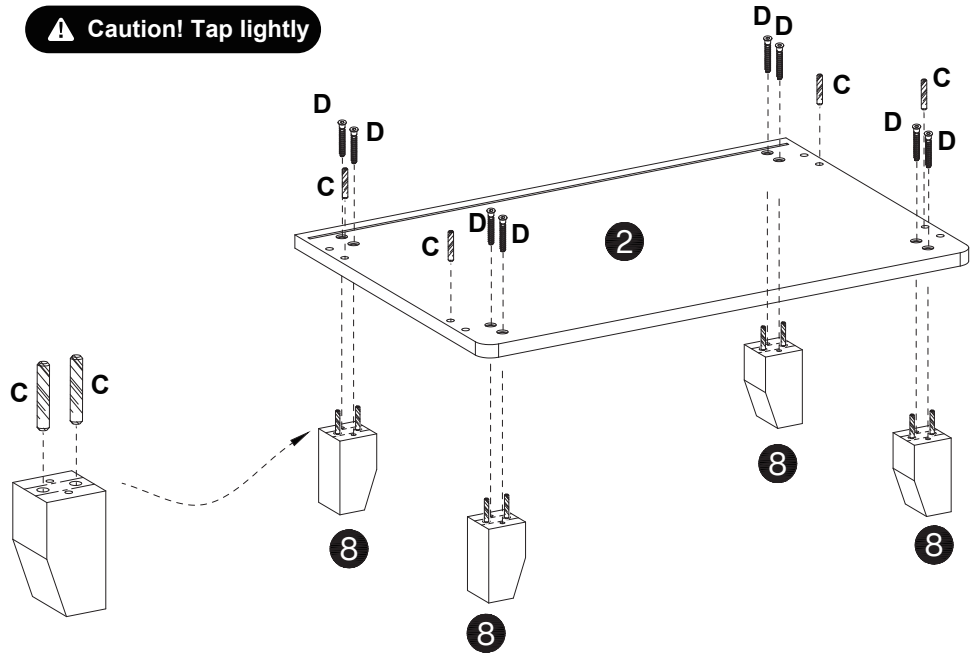
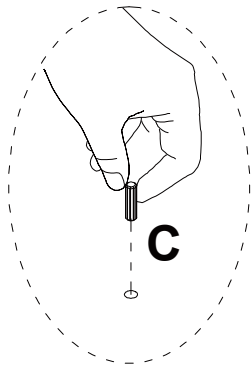
7




8 X 4


⚠ Caution! Tap lightly

C	D	J
		
Ø8×30mm	M7×38mm	
12 pcs	8 pcs	4 pcs




8

D

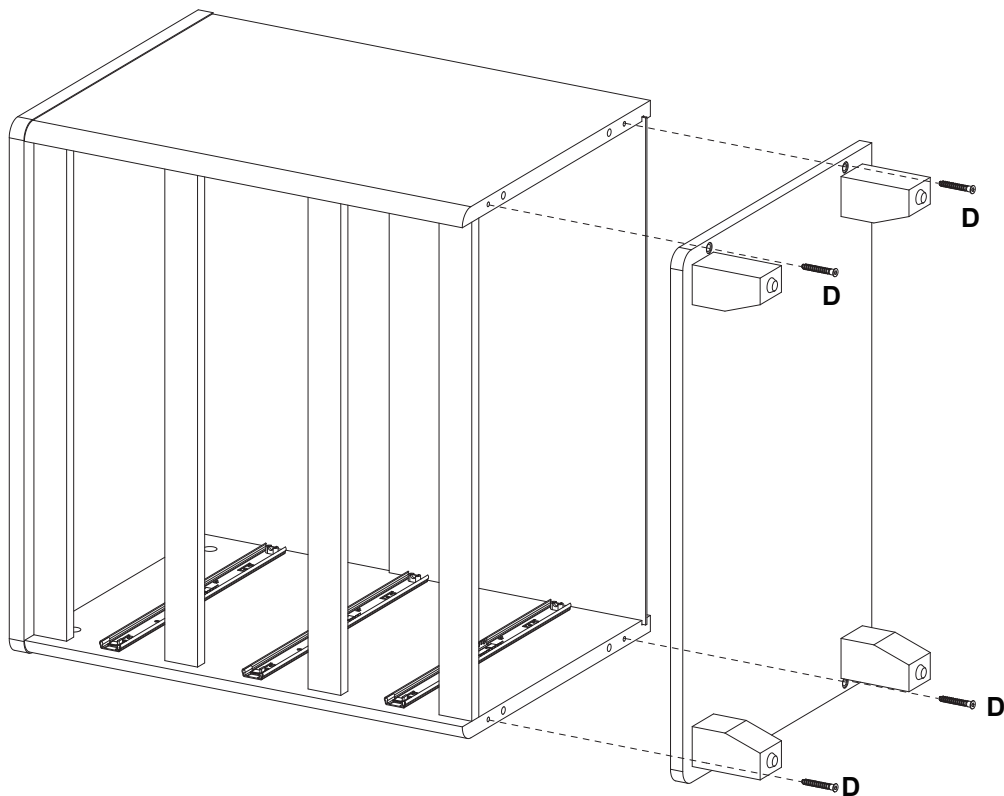M7×38mm
4 pcs







9

A

M6×35mm
12 pcs


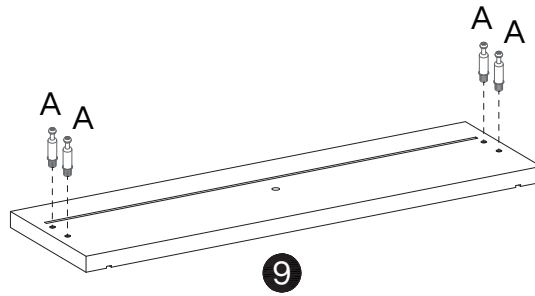
×3



10

B

Ø15×11mm
12 pcs

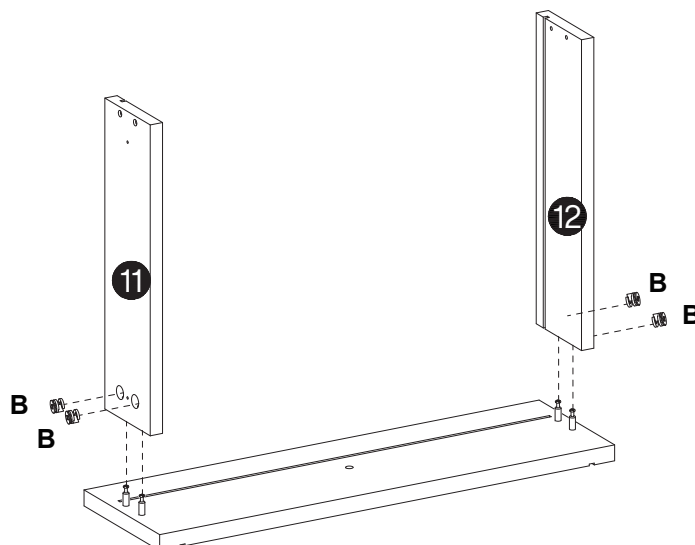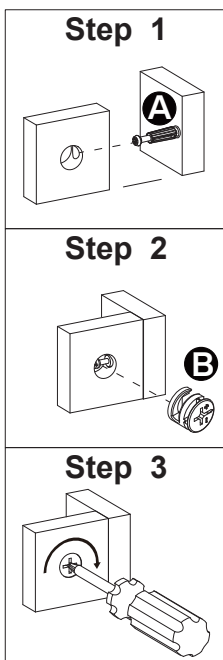
×3







11


×3



F

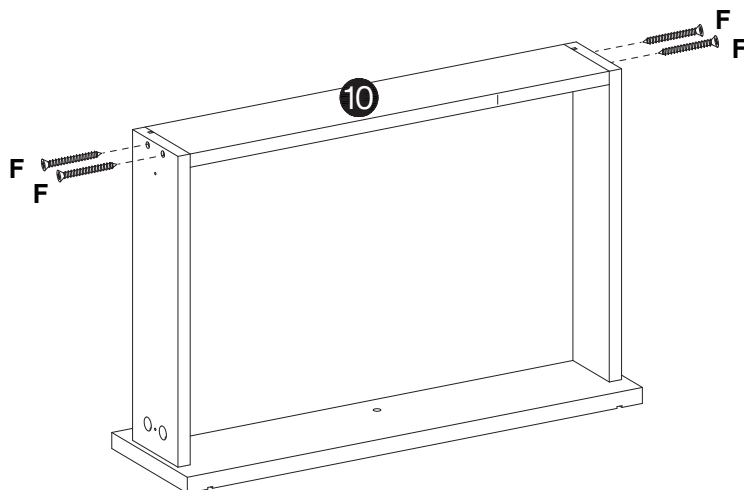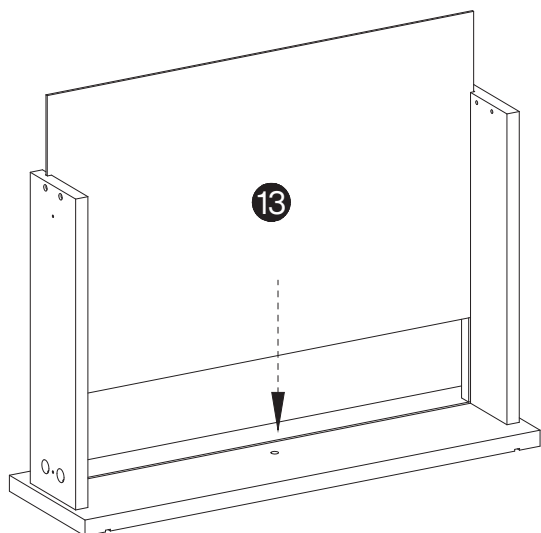M4×35mm
12 pcs



12

×3

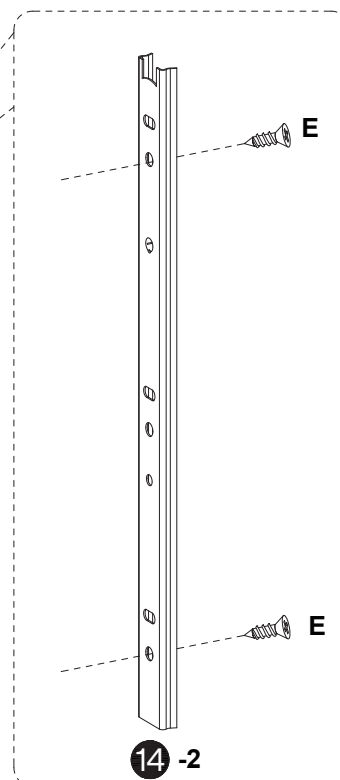
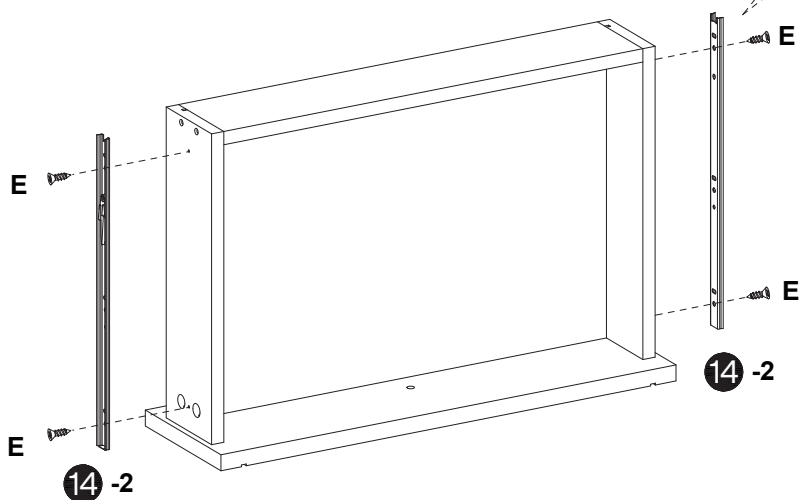
E

M3×14mm
12 pcs







13

×3


G	H
	
M4×18mm	
3 pcs	3 pcs

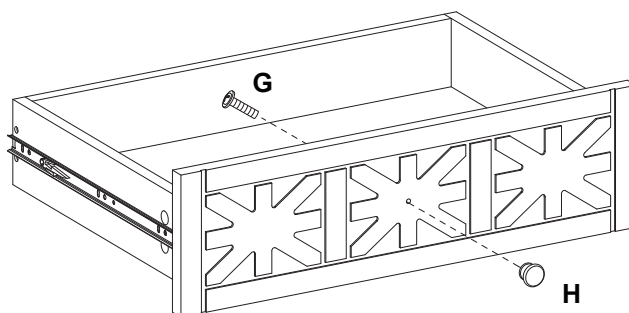


14

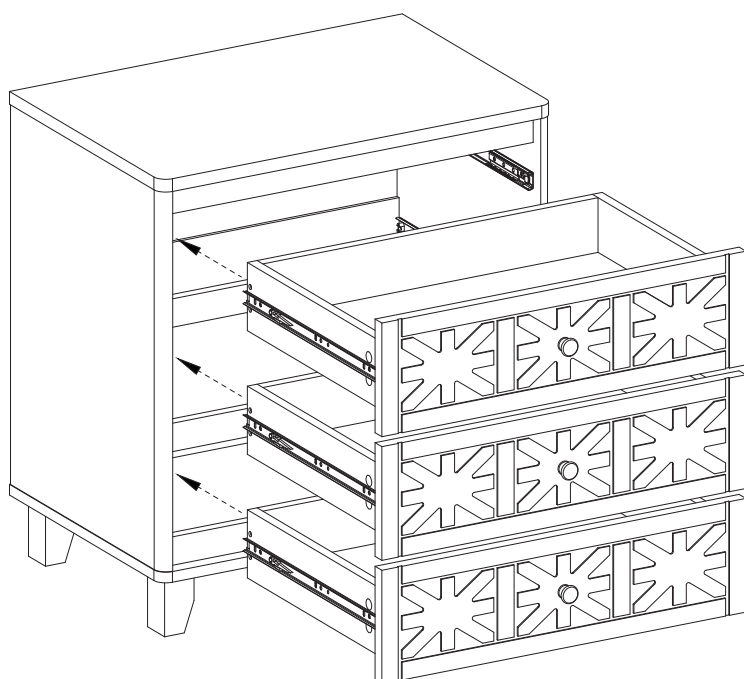


Step 1

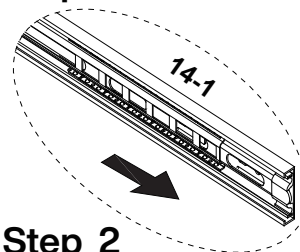

Step 2

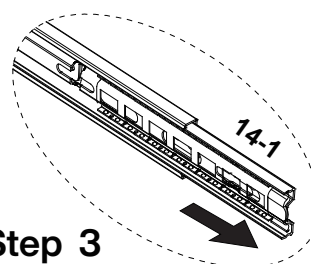

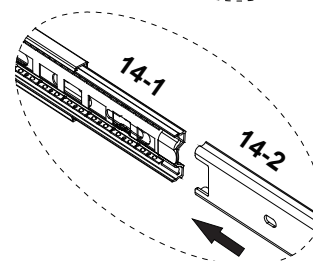

Step 3




Before installation, slide the inner iron pieces of #14-1 to the outermost side. Then align it with #14-2 and gently push it inward to complete the slide installation.





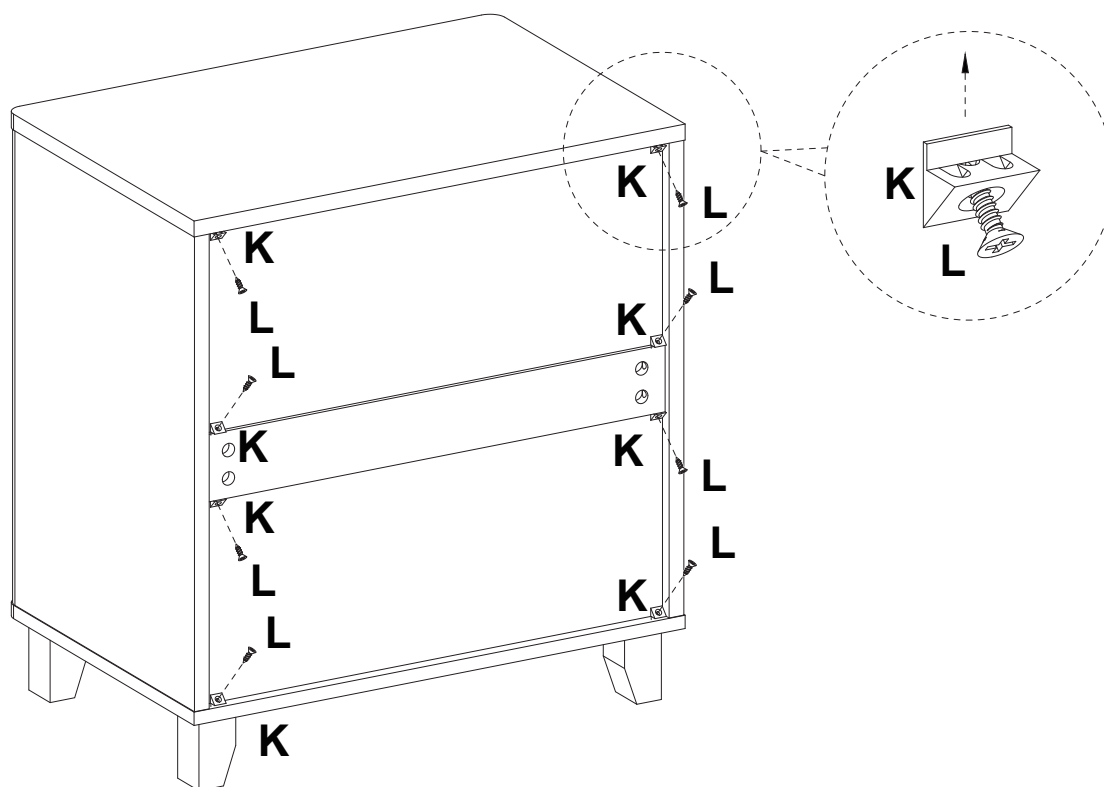


15


K	L
	 M3.5×14mm
8 pcs	8 pcs






16

M	N	O	P	Q
	 M4×35mm	 M4×12mm		
2 pcs	2 pcs	2 pcs	4 pcs	2 pcs

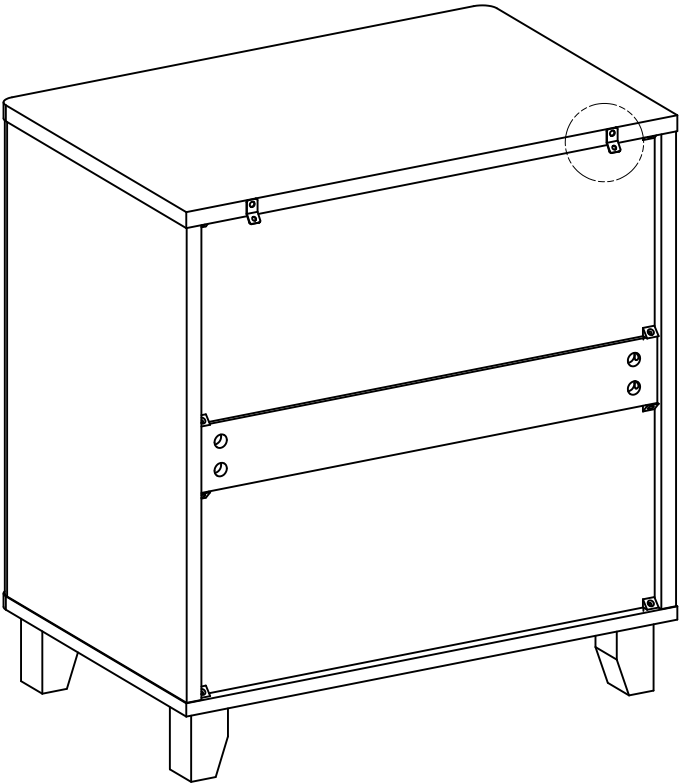



Step1



Wall

M 

Step2

N   P


Step3

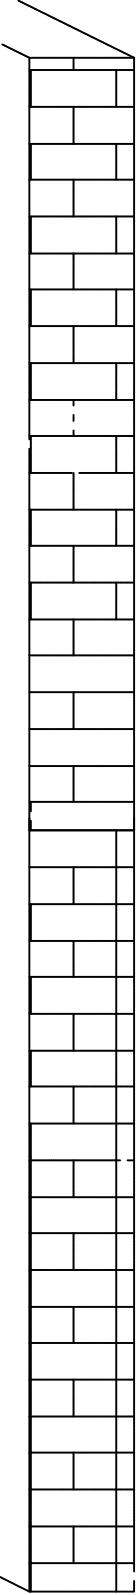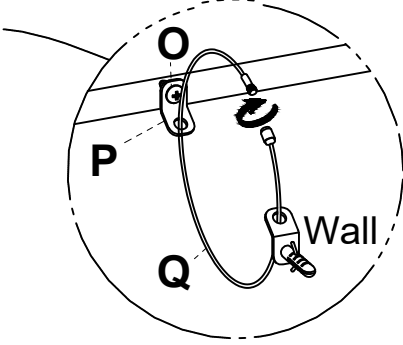



DESIGNED FOR LIFE

Thank you for your support!

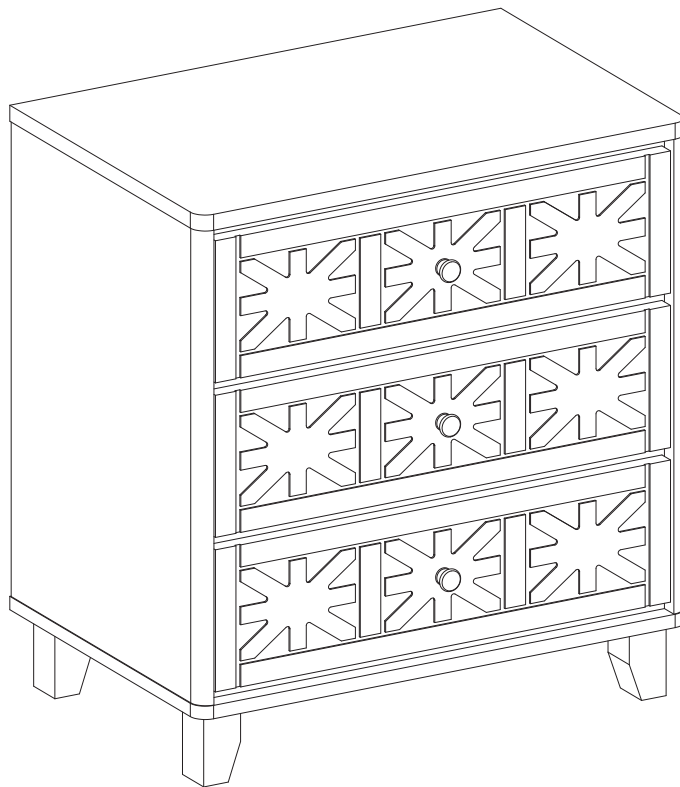

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp