


# **Assembly Instructions**

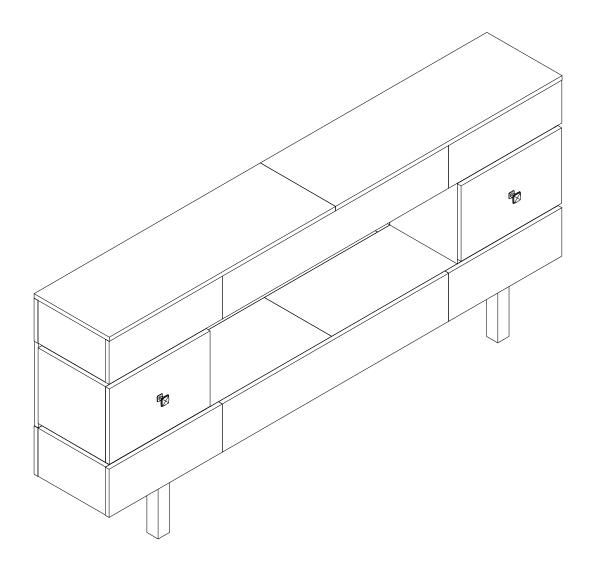



# Contact Us We're here to help you.




Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


#### **Warm Tips**

- 1. Carefully read these instructions and keep them for future reference.
- 2. Check the parts list and confirm everything's there before starting assembly.
- 3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
- 4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

#### How to Get the Assembly Video

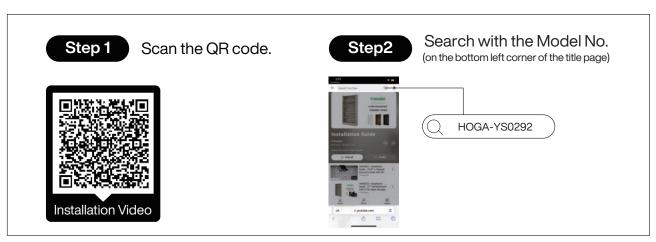


Note: If you can't find the assembly video, please contact us.

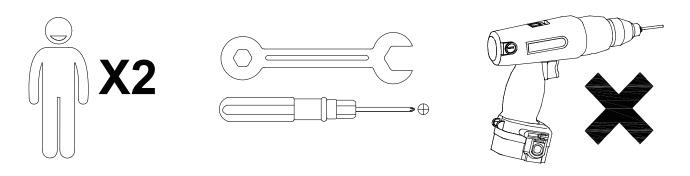


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

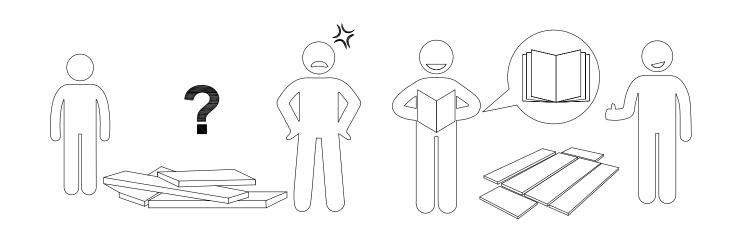


## **Install the Anti-Tip Straps**

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

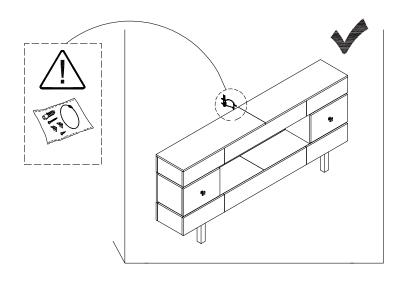

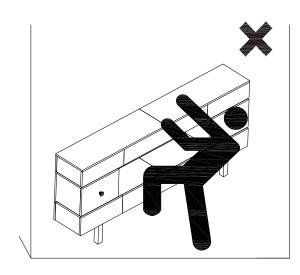


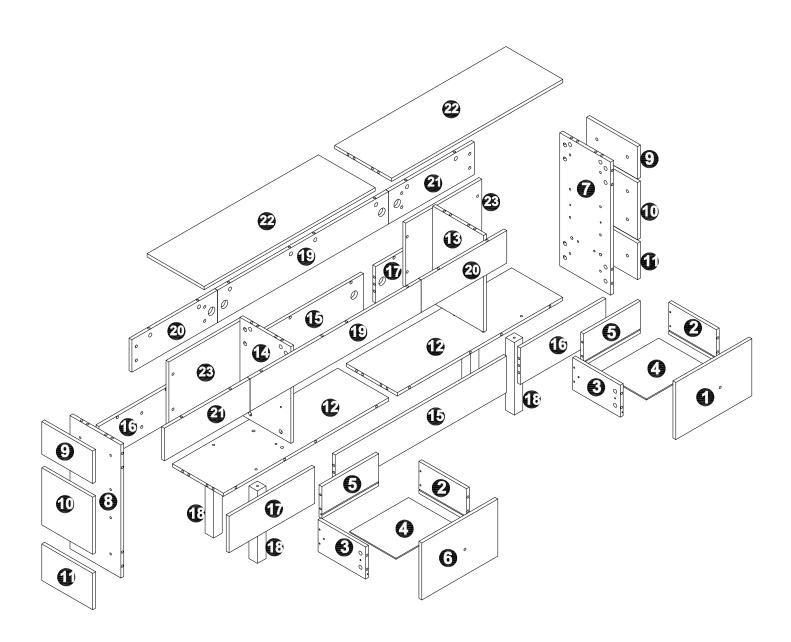

# **▲** Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

### **Parts List**

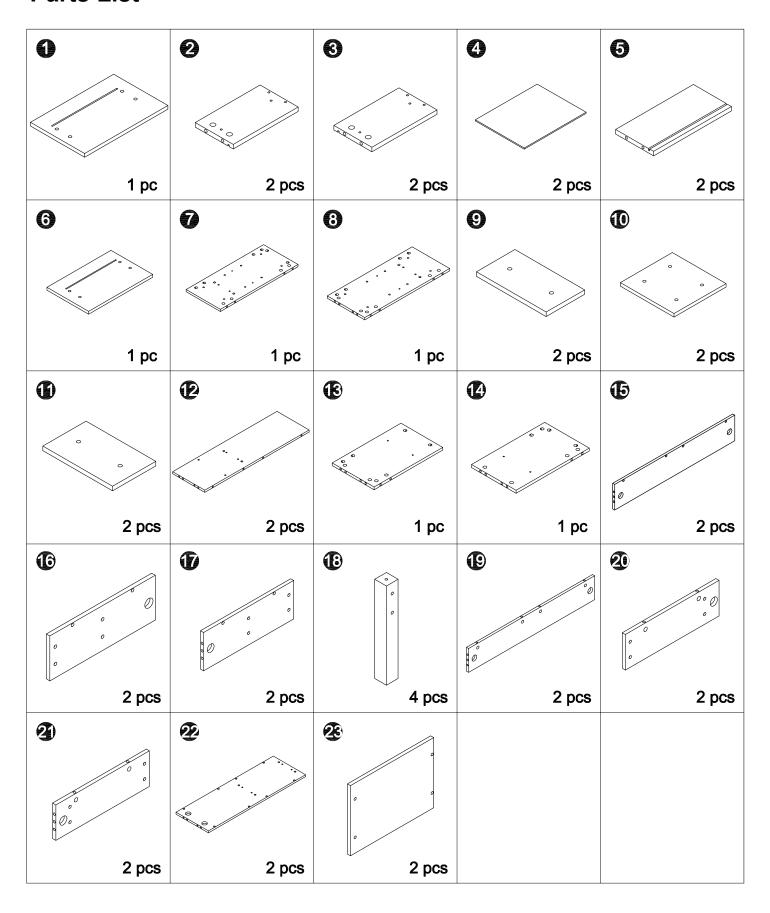


### **Hardware List**


iaiuwaie List							
Α	В	С	D	E	F		
	SHE						
M6x35mm	Ø12x10mm	Ø8x30mm	250mm	Ø3.5x14mm			
80+2 pcs	80+2 pcs	36+1 pcs	2 sets	16+2 pcs	2 pcs		
•		•		I/			
G	Н	l	J	K	L		
				8 managaman na sa			
Ø4x18mm	Ø6x80mm	М6	М6	Ø3.5x35mm	M6x25mm		
2 pcs	12+1 pcs	24+2 pcs	24+2 pcs	8+1 pcs	20+1 pcs		
M	N	0	Р	Q	R		
141	•	•	•	•	11		
		C and a so			Wrench		
M6x55mm	M6x14mm		M7x38mm	M4	М6		
8 pcs	4 pcs	1 pc	8 pcs	1 pc	2 pcs		
e							
S							
Screwdriver							
1 pc							

#### **Installation of Cams and Pins**

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

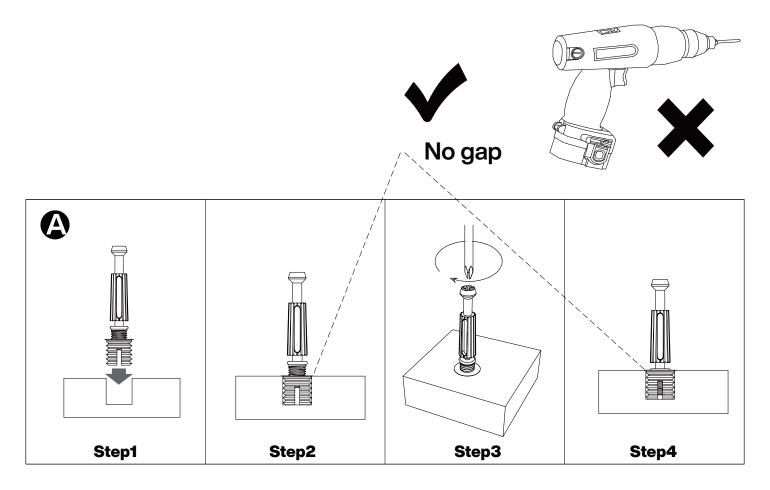


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

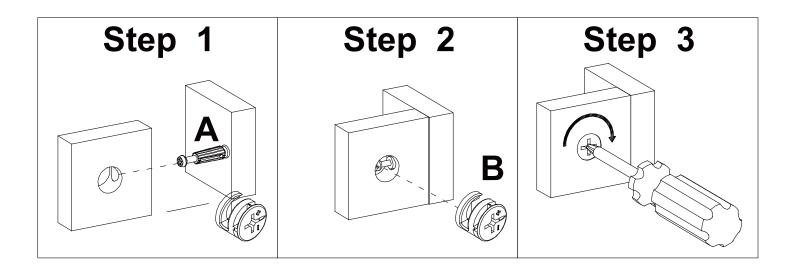


Please split component "D"into "D-1" and "D-2" before assembling the slide and then proceed to the next step of assembly


## Step 1


Pull apart component "D" to each side, and then gently push up the lever of component "D-2"

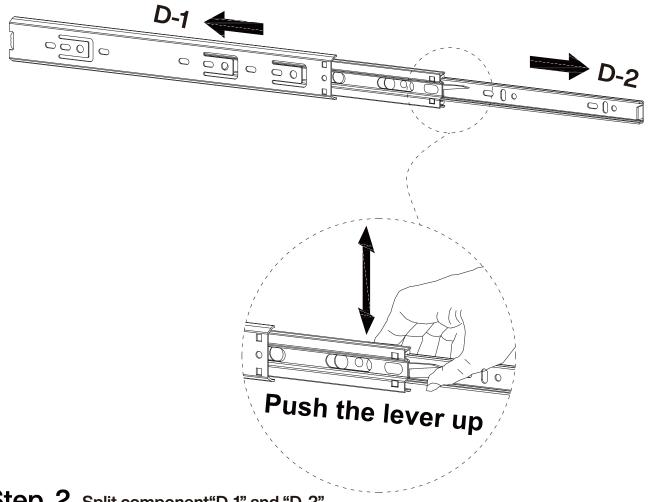



Step 2 Split component "D-1" and "D-2"

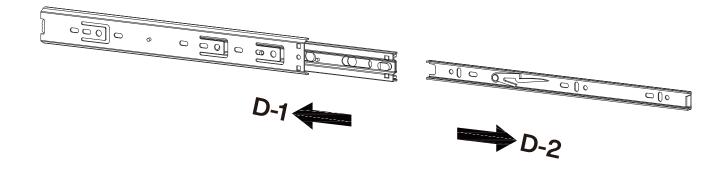


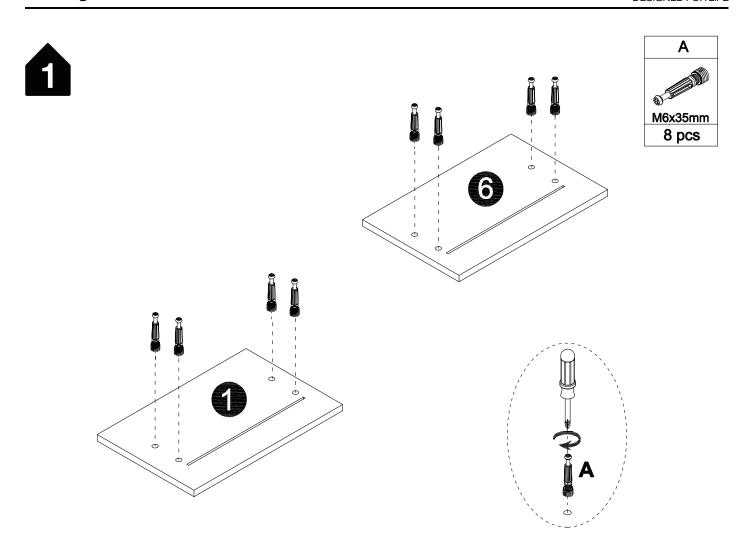


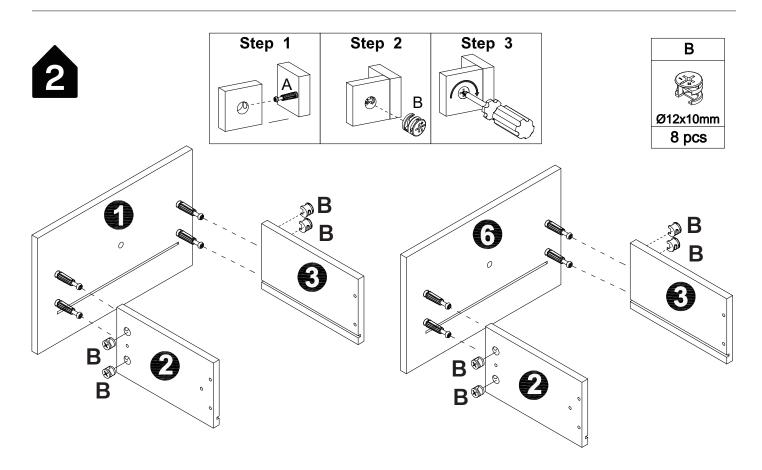


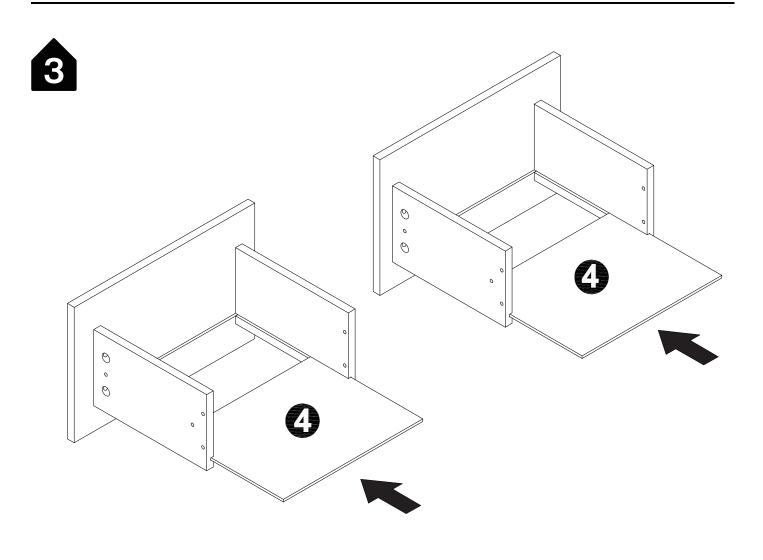

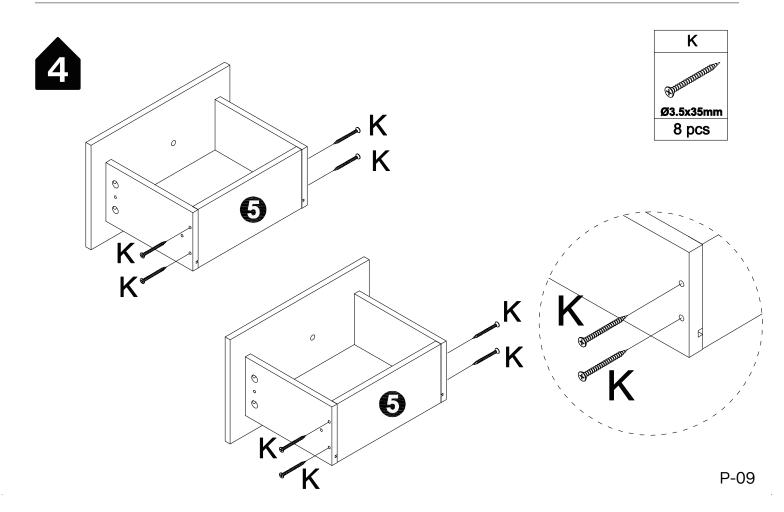


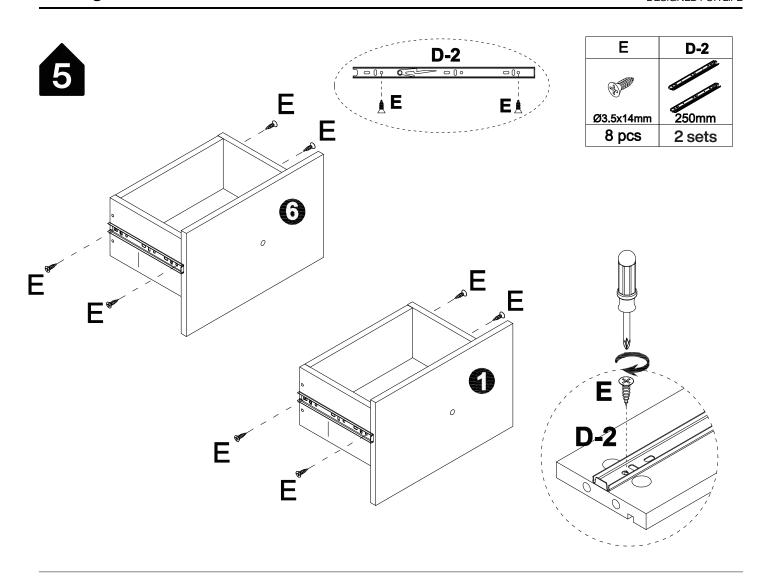


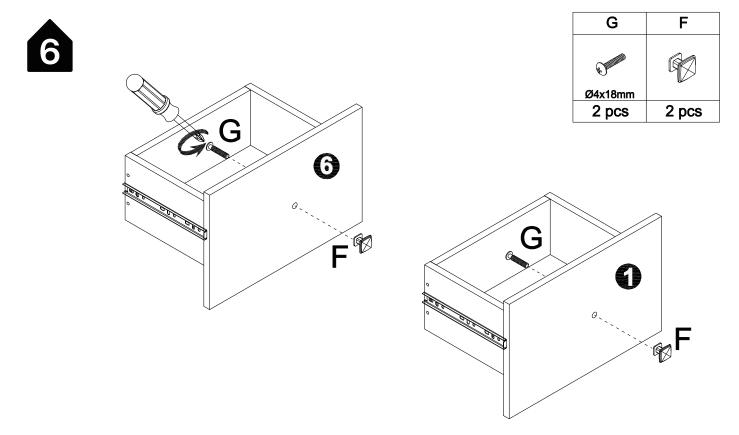


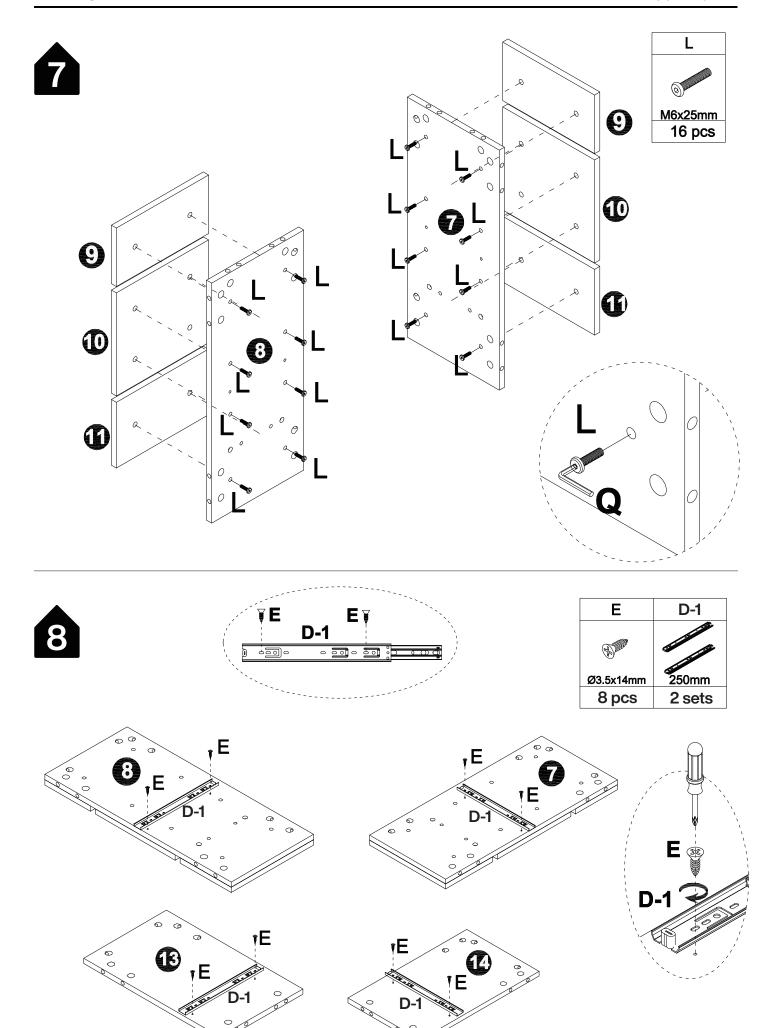


P-11

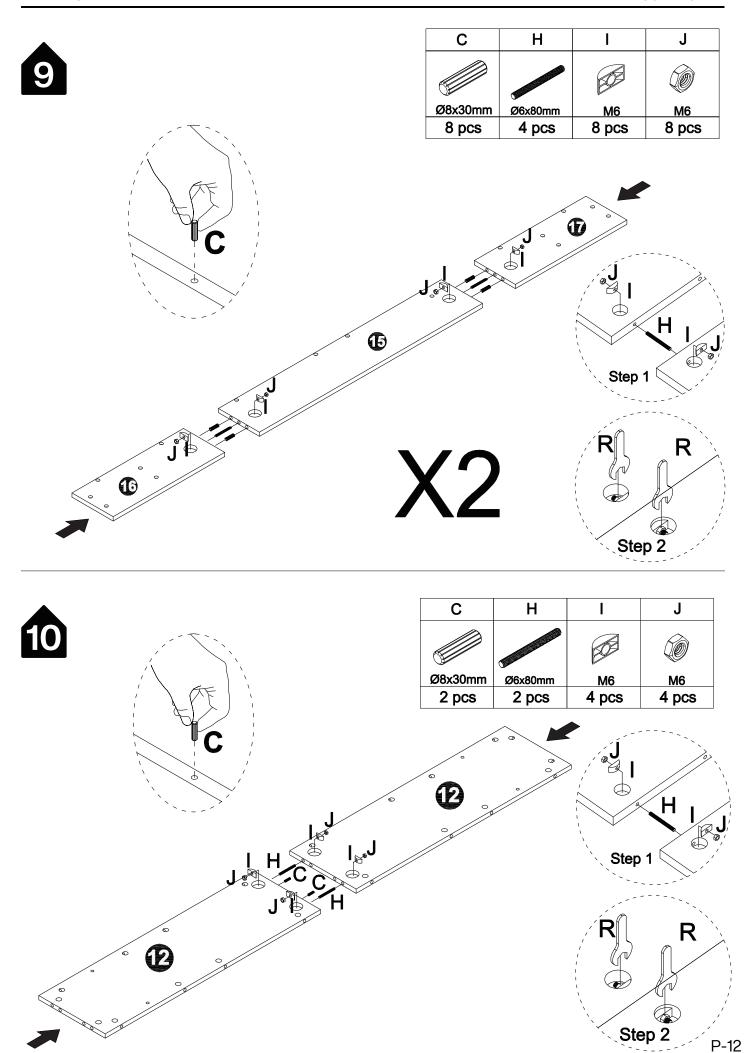


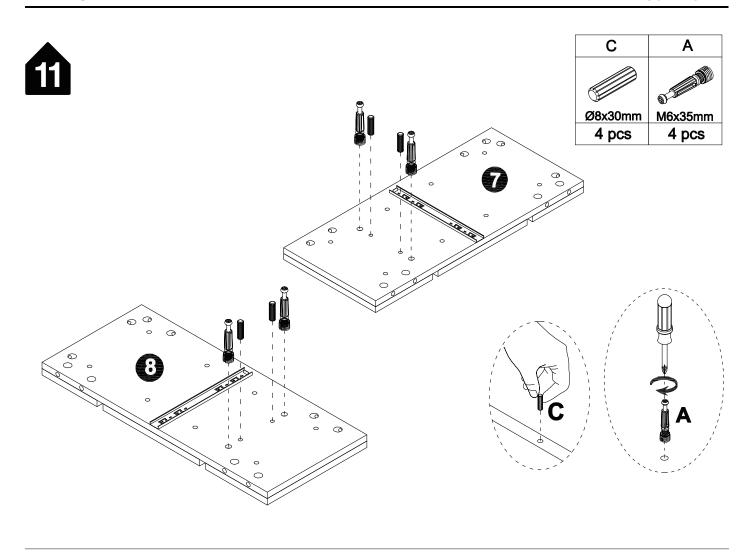


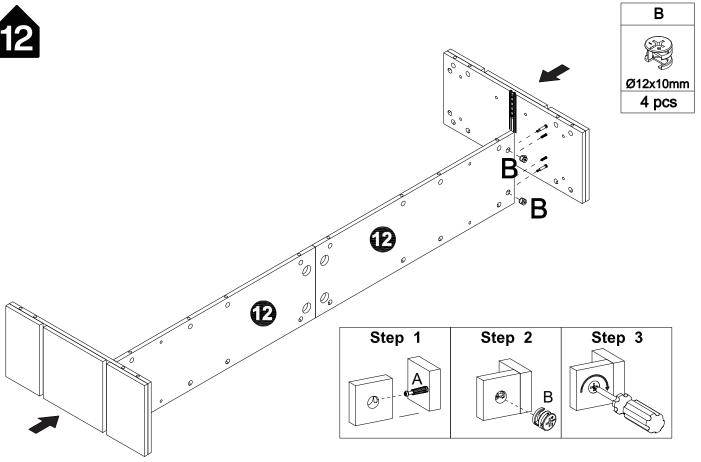


Ti ibesígns

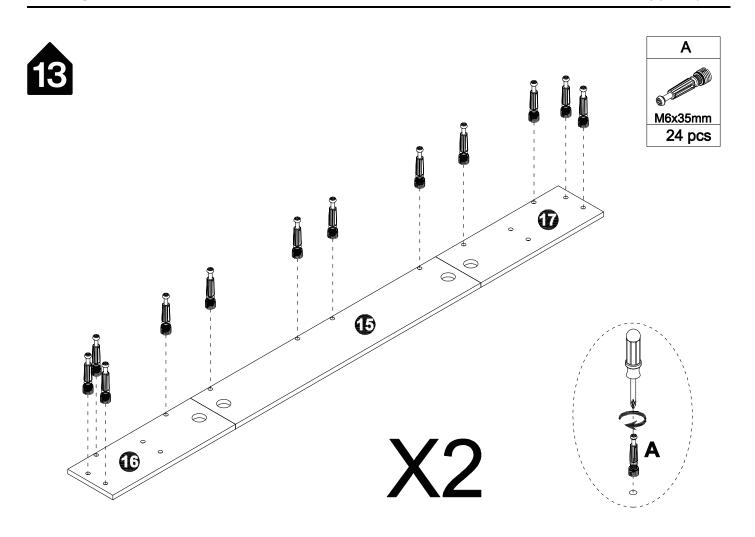

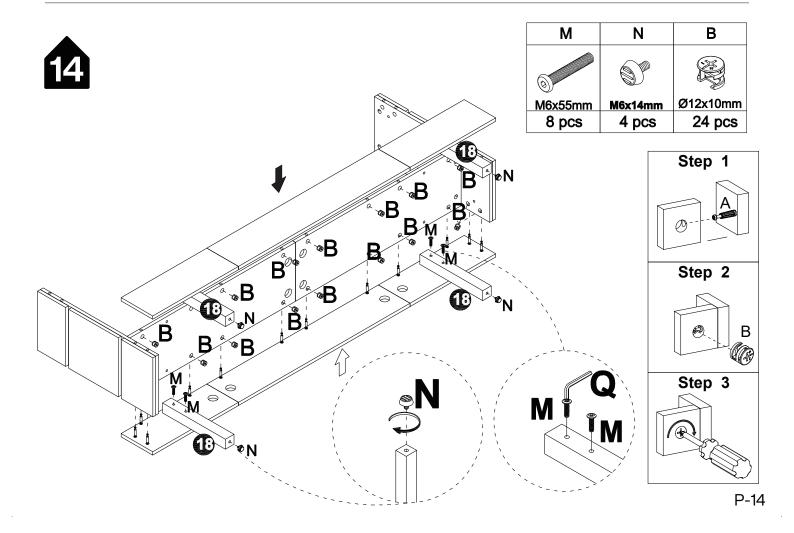


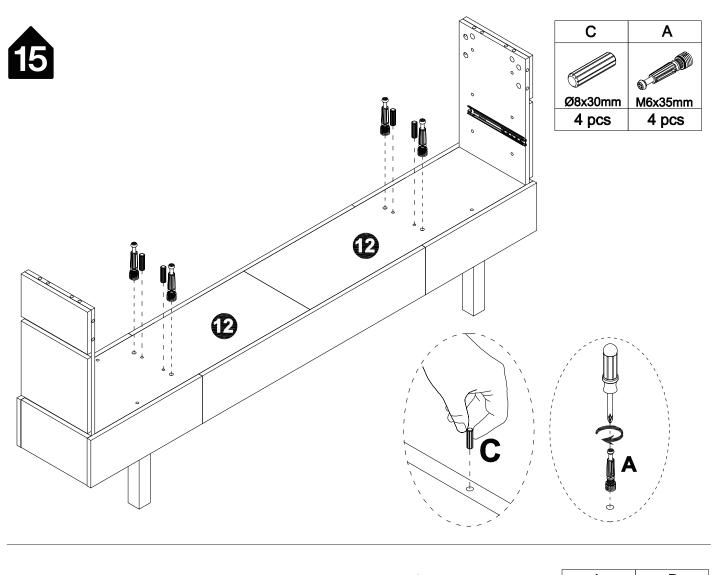


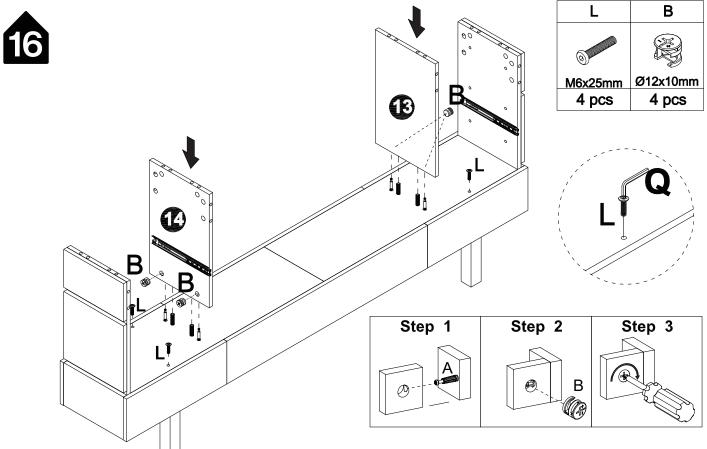






С	Н	I	J
Ø8x30mm	Ø6x80mm	M6	M6
8 pcs	4 pcs	8 pcs	8 pcs

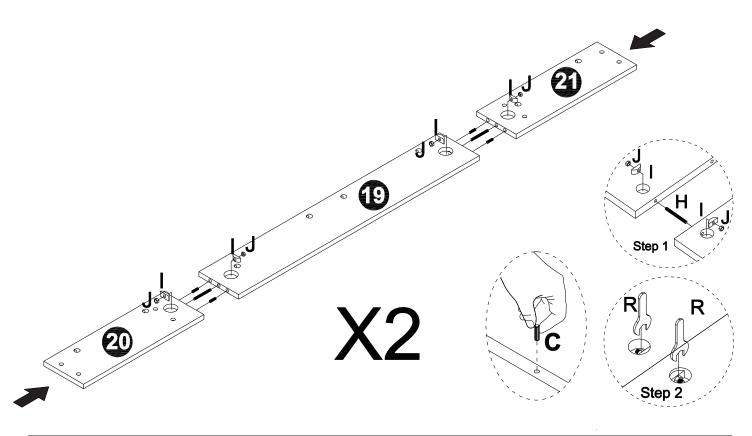


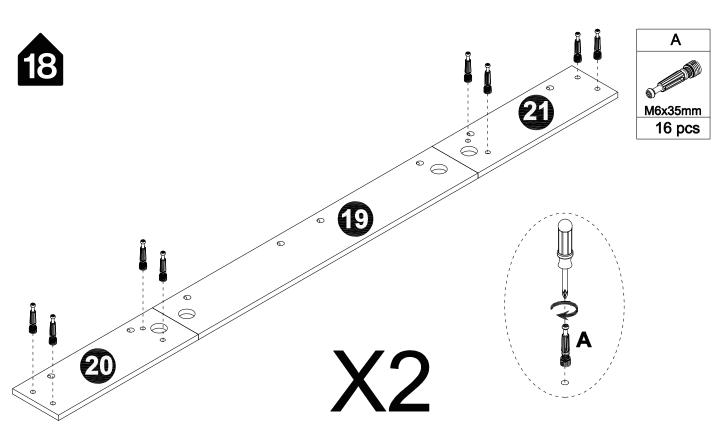


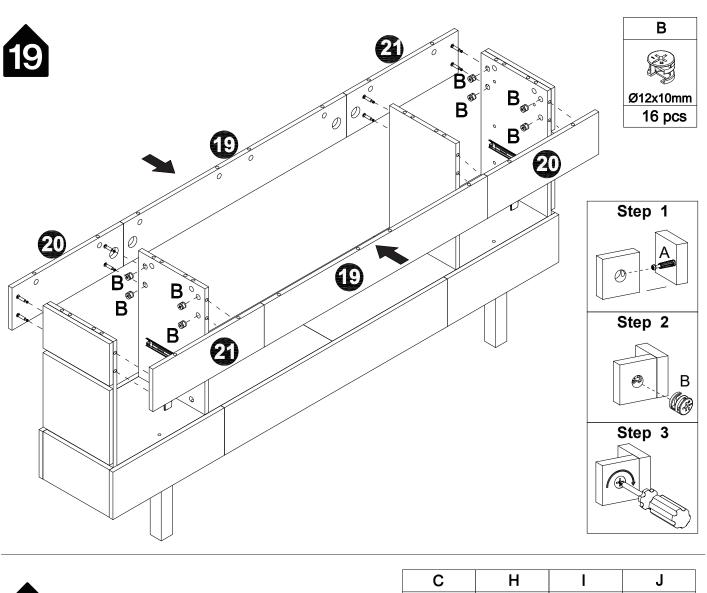

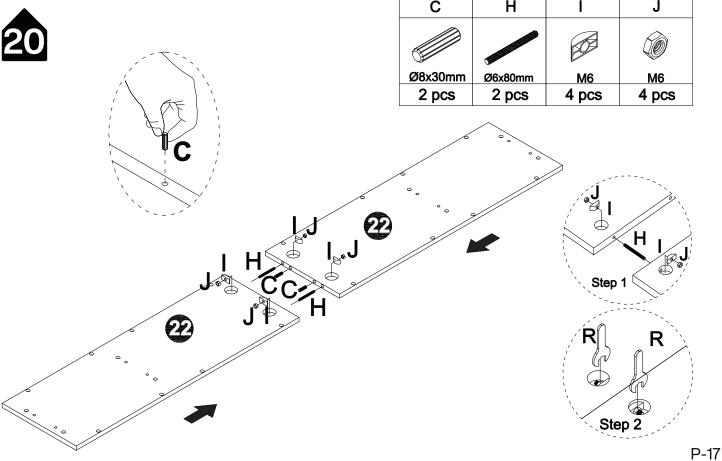

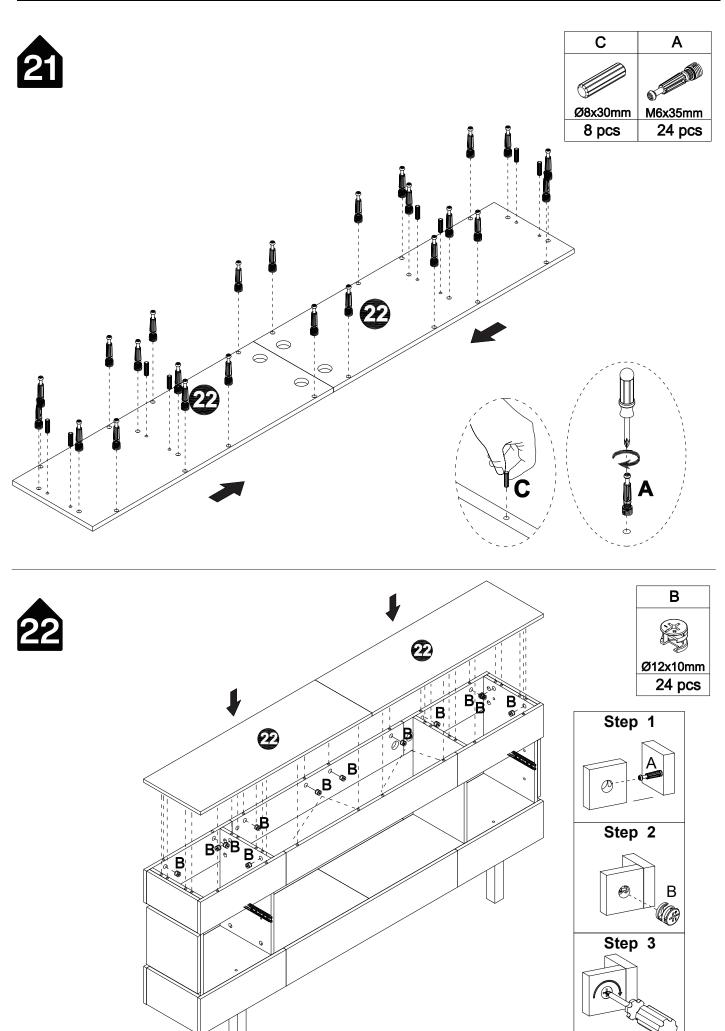


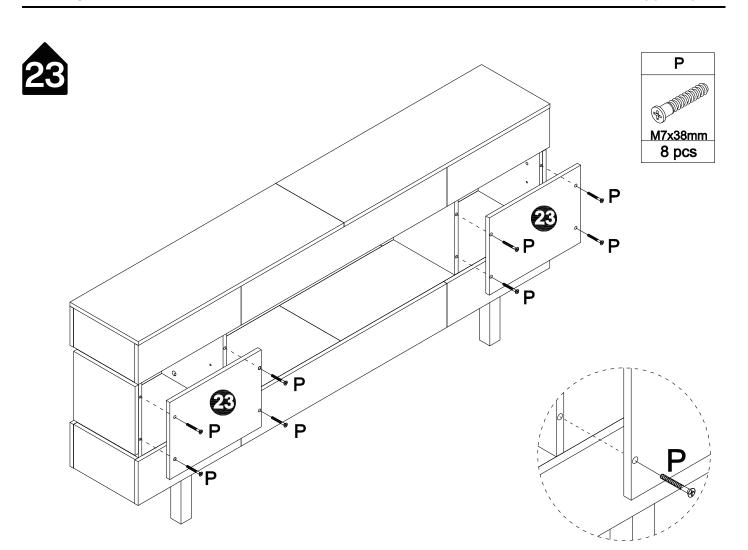

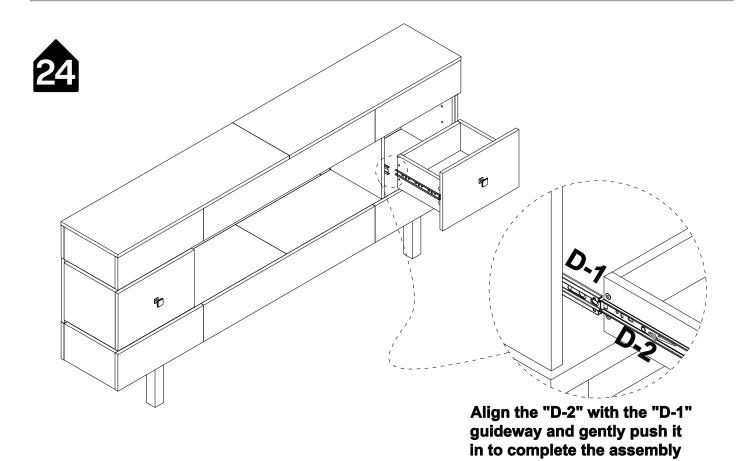






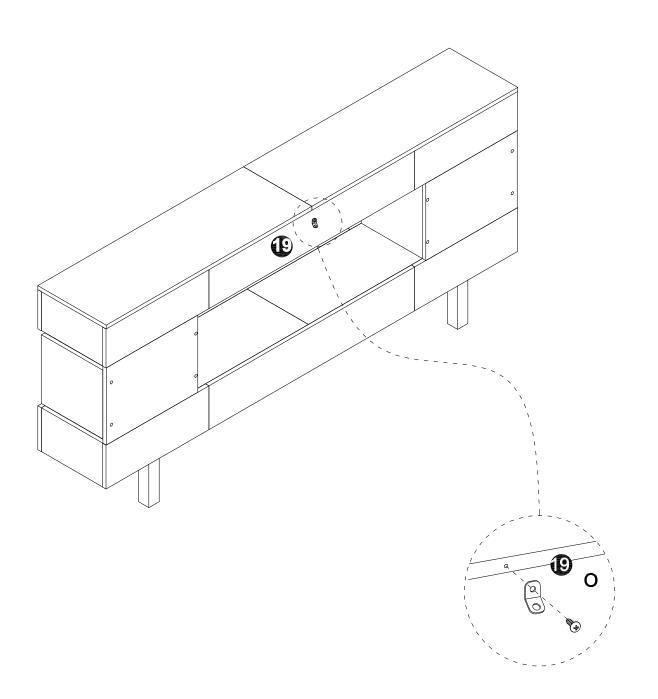




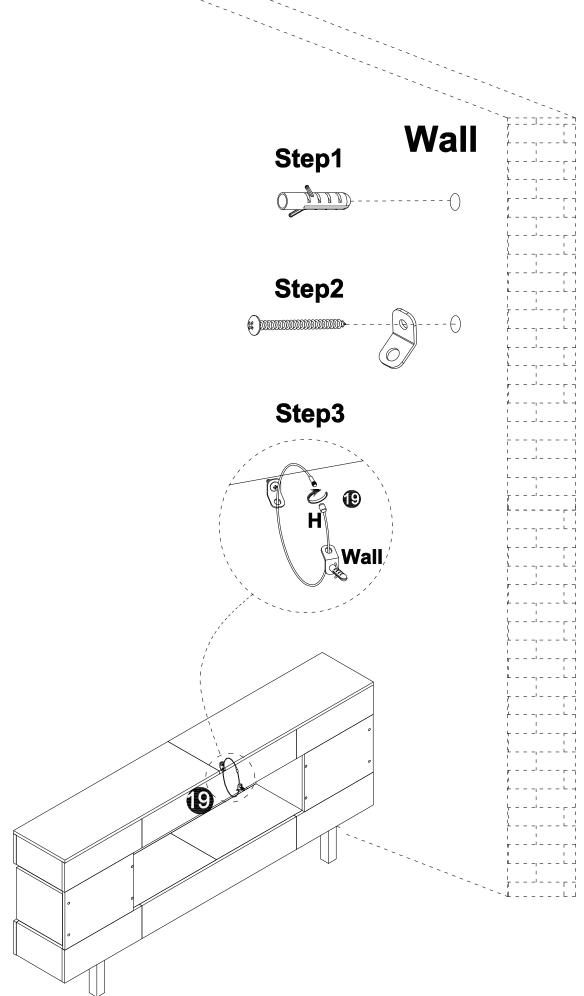



**DESIGNED FOR LIFE** 

# Thank you for your support!

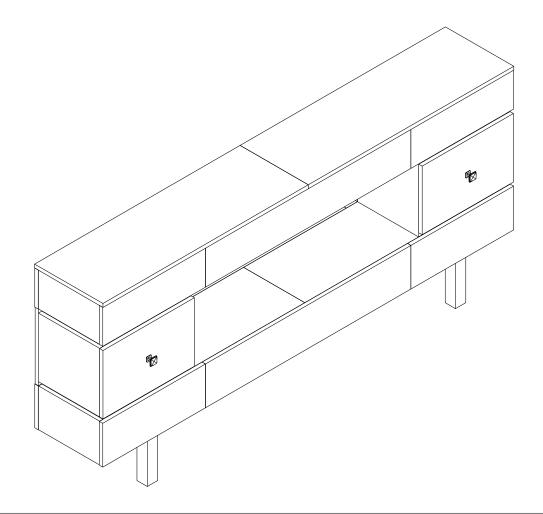

#### Contact our customer service team



support@tribesigns.com www.tribesigns.com



1-424-220-6888 Contact us anytime except

### **Follow Tribesigns**







Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp