



LOFT DESK




Placement and Maintenance

Your Loft Desk is designed for indoor use on level floors. Furniture with hard lacquer, wax polish or painted surface should be dusted with a dry cloth. Spillages should be wiped up as soon as possible. Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires.


Step 1

Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, visit the customer support page on our website www.mossdesign.us


Tool Required:



Screwdriver



Slotted Screwdriver




Mallet or Hammer

Tool Provided:



T1 M4 Hex wrench x 1



H1 Wooden Dowel (8x35mm) x 11



H2 Steel Dowel (52mm) x 11



H3 Set screw x 11



H4 Barrel Housing x 11





H5 Allen Head Bolt (M6x40mm) x 6



H6 Allen Head Bolt (M6x60mm) x 4


C2 Shelf x 1

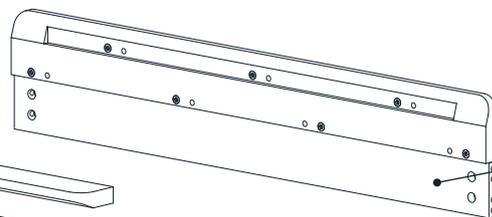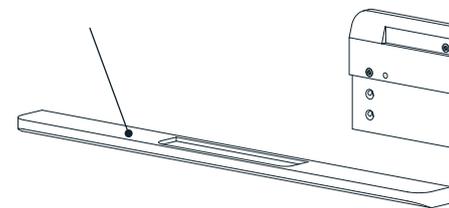


C1 Modesty Panel x 1

C3 Desk Top x 1

C4 Left Leg x 1

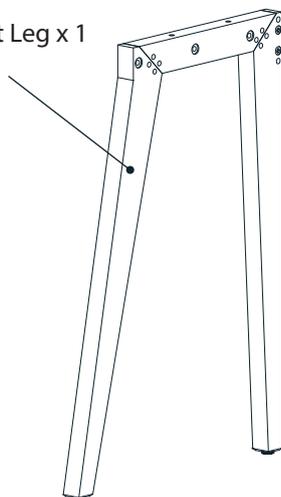


C5 Right Leg x 1

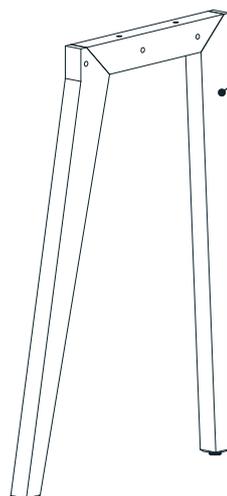

Step 2 - Combine barrel housings and set screw.


Using a slotted screwdriver, partially thread **11 set screws H3** into the **11 barrel housings H4**.

DO NOT thread more than a few clockwise turns!

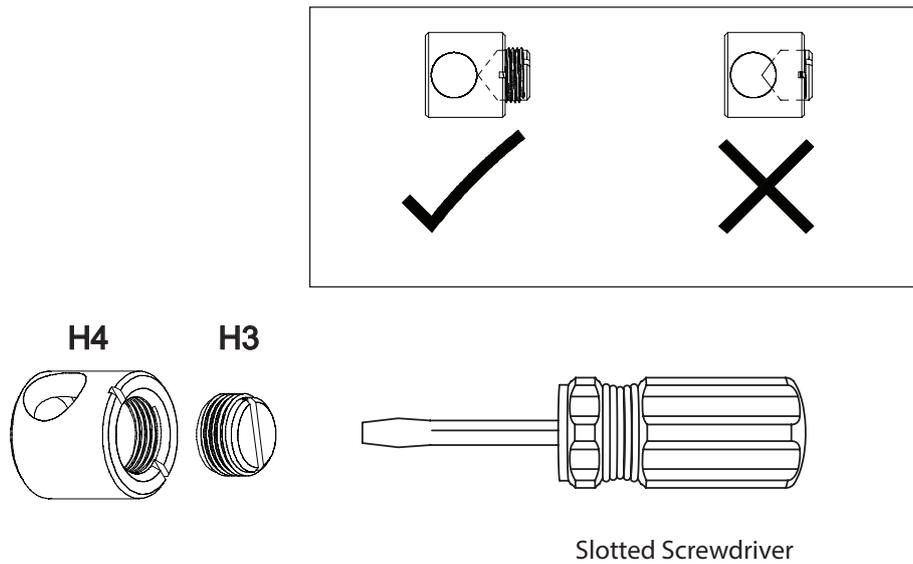


Step 3 - Attach dowels to desk top, modesty panel and Shelf.

Fix **11 x wooden dowels H1** to **modesty panel C1**, **shelf C2** and **desk top C3** by using a **mallet**.

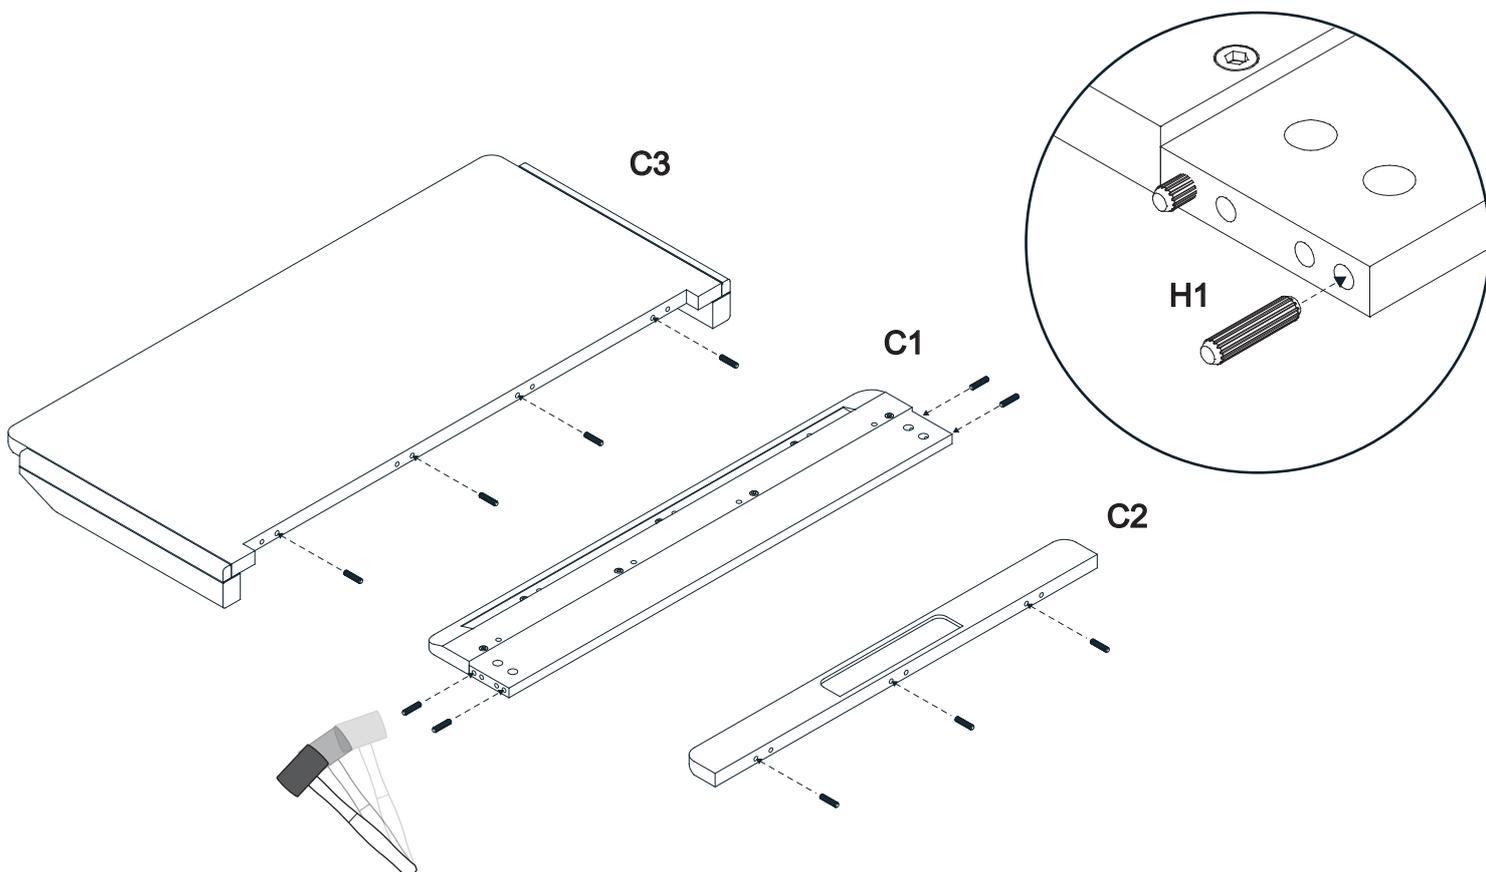


Step 4 - Attach hardware to legs.

Using either a slotted or **screwdriver**, thread **4 steel dowels H2** into the threaded inserts on the **left leg C4** and **right leg C5** frames as shown.

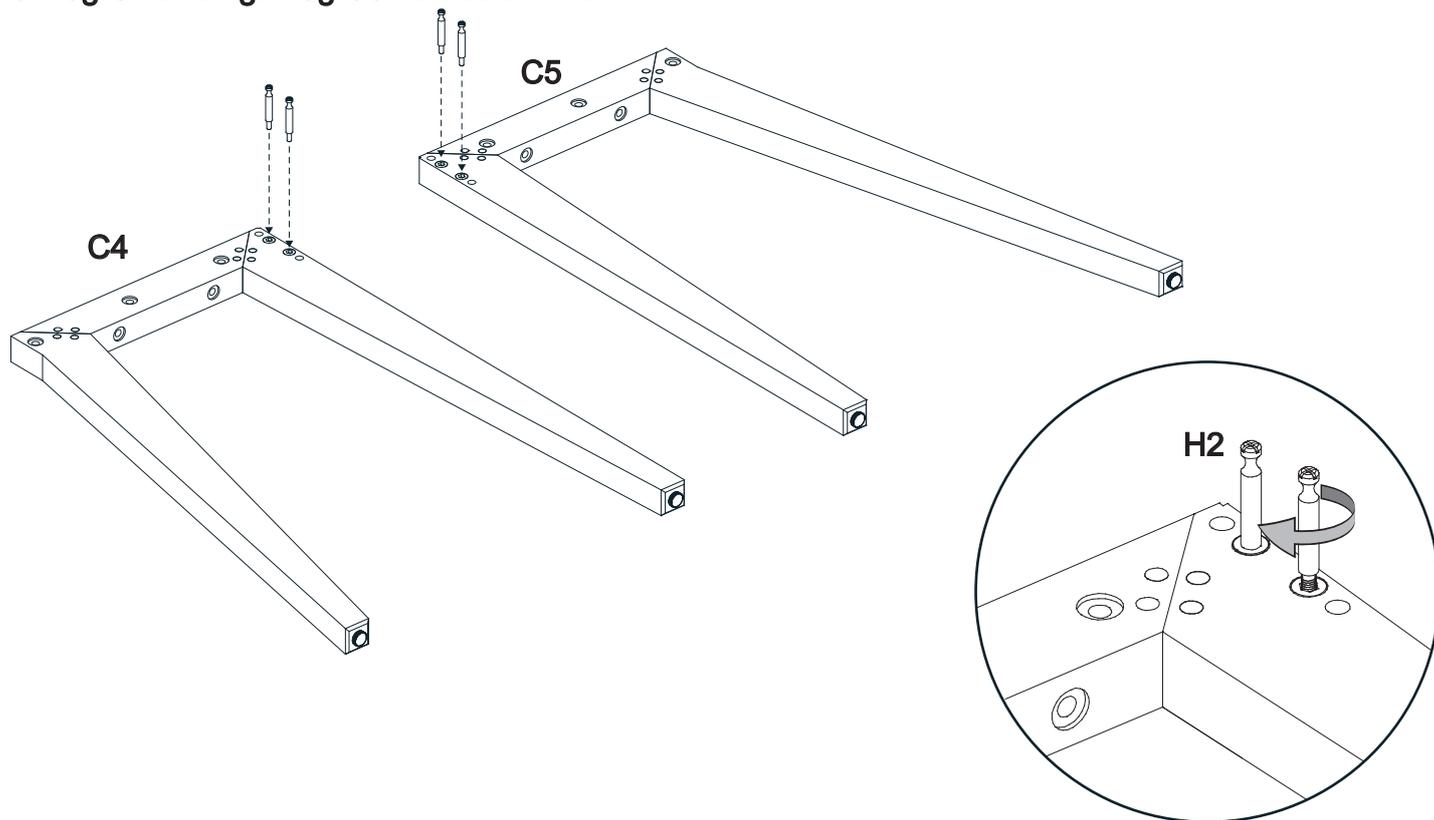



Step 5 - Attach left leg and right leg to modesty panel.

Place the **4 barrel housings** in the **modesty panel C1**. Bring the **left leg C4** and **right leg C5** to the **modesty panel C1** and then tighten the set screws by using a **screwdriver** as shown below.

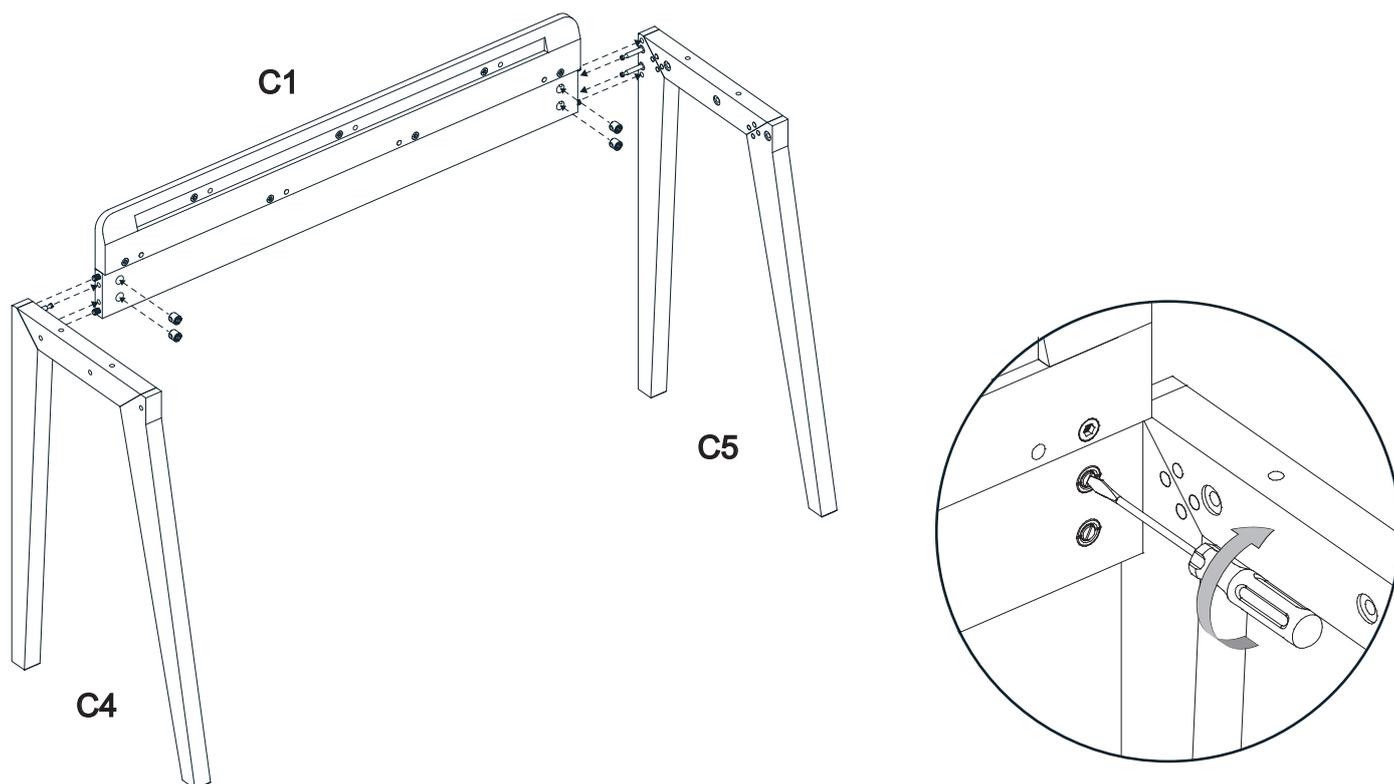



Step 6 - Prepare the modesty panel for shelf assembly.

Fix the **7 steel dowels H2** to the **modesty panel** as shown below.

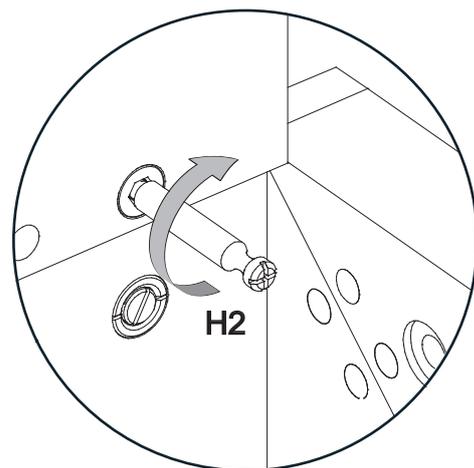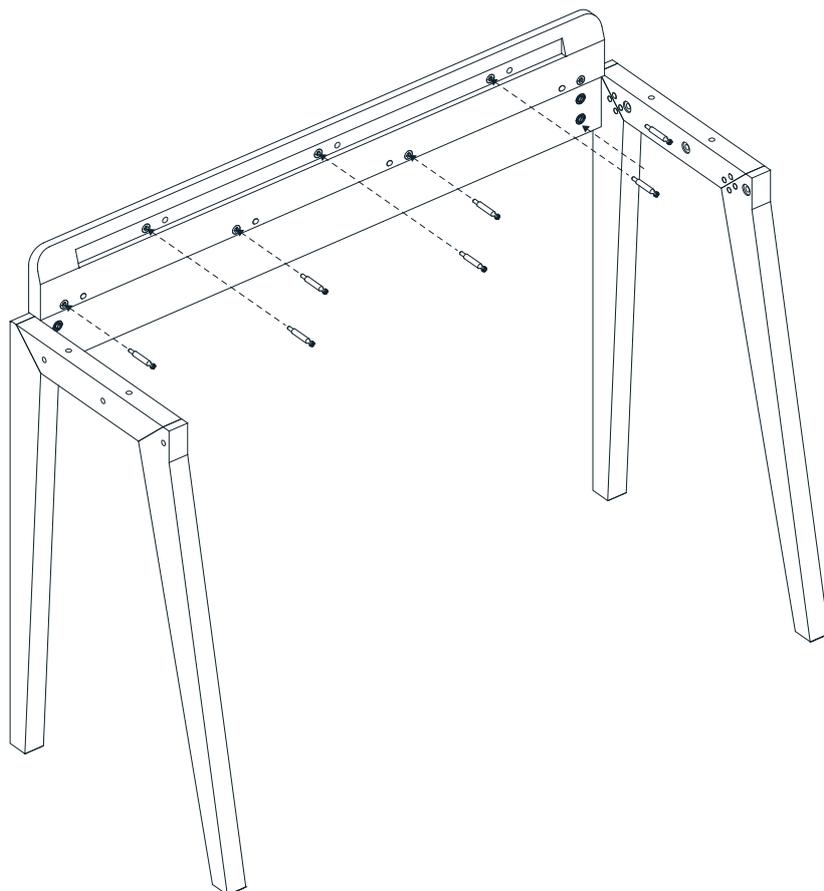



Step 7 - Attach the shelf.

Place the **3 barrel housings** in their places on the **shelf C2**, then place the shelf as shown below and tighten it with a **screwdriver**.

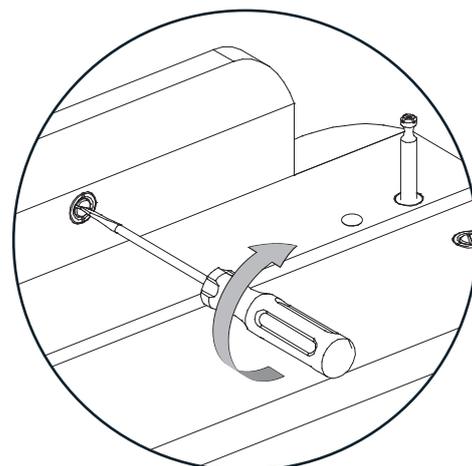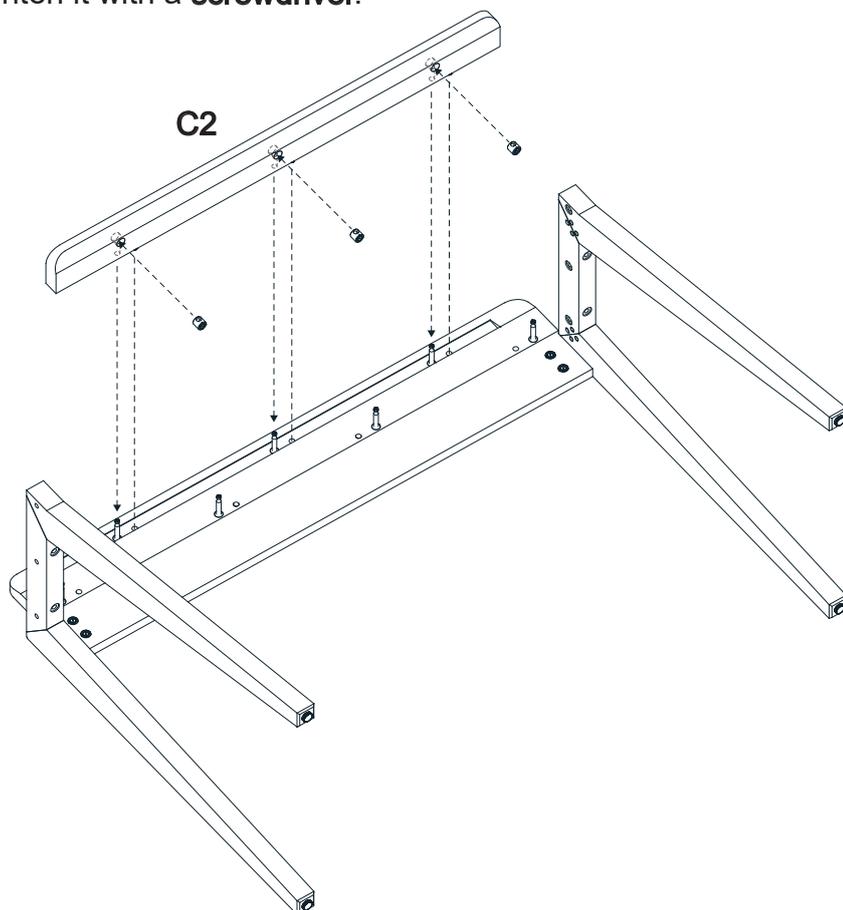




Step 8 - Attach the desk top.

Place the 3 barrel housings on the desk top C3 then put the desk top C3 on the leg frames as shown below. Tighten using a screwdriver.

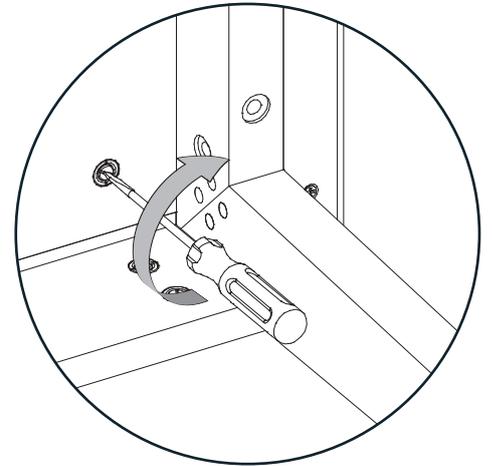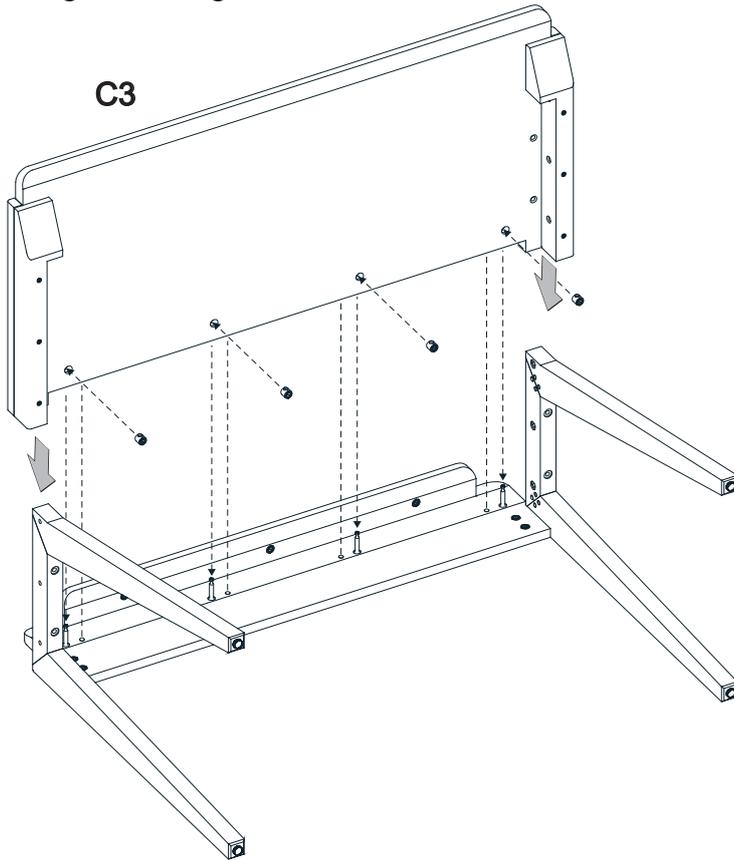

Step 9 - Fix the bottom frame under the desk top.

Tighten 6 allen head bolts H5 and 4 allen head bolts H6 by using a hex wrench as shown below.

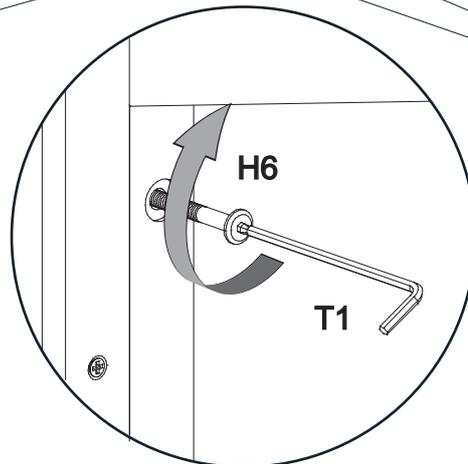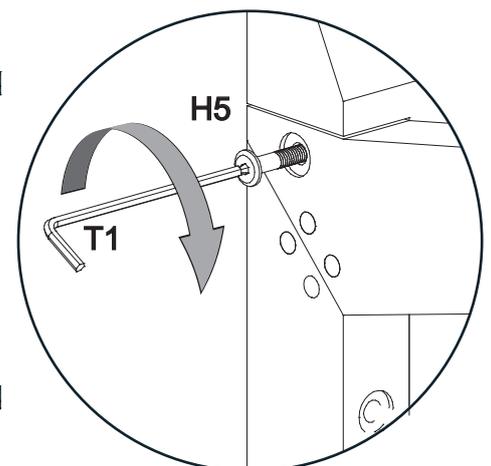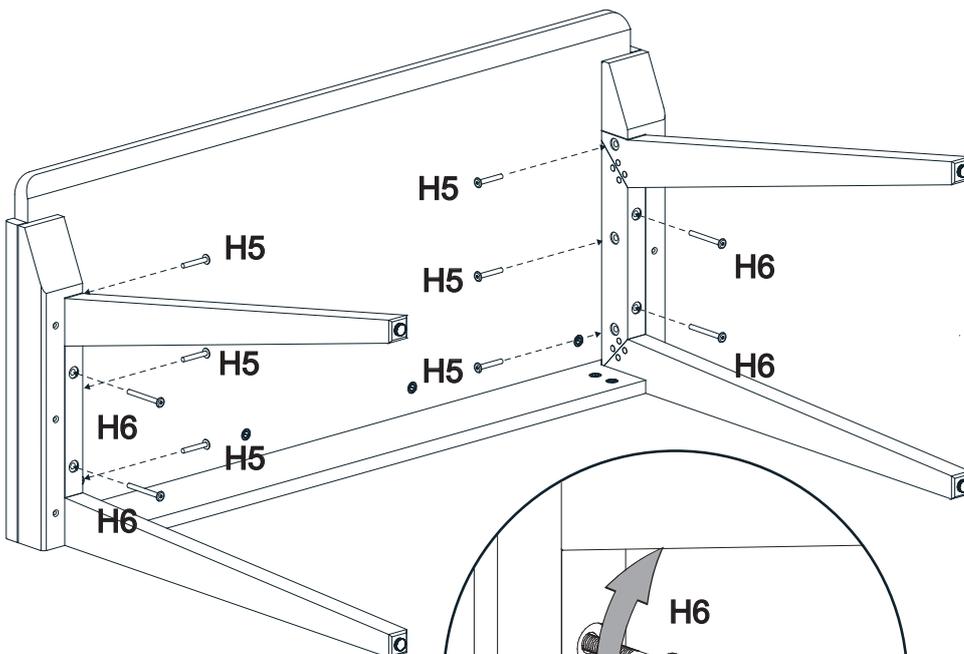

Step 11 - End of the assembly.

Lift the unit to standing position carefully.

