




Tool Provided:

Placement and Maintenance

Your Perle Table is designed for indoor use on level floors. Furniture with hard lacquer, wax polish or painted surface should be dusted with a dry cloth. Spillages should be wiped up as soon as possible. Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires.



T2 M6 Allen Key x 1


H1 Headless Bolt (8x110mm) x 4



Unpack and identify all the parts listed here. It is necessary to have **two people to carry and assemble** units weighing over 50 lbs. The assembly workspace should be a **non-marring surface, such as a carpet**. For missing hardware pieces, visit our website www.mossdesign.us




H2 Bolt (8x90mm) x 4










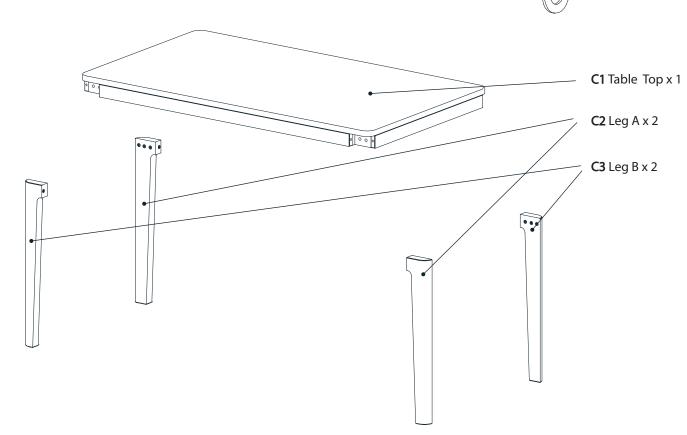


Step 2 - Fix the headless bolt to legs.

Fix 4 headless bolts H1 to the legs C2, C3 by hand.

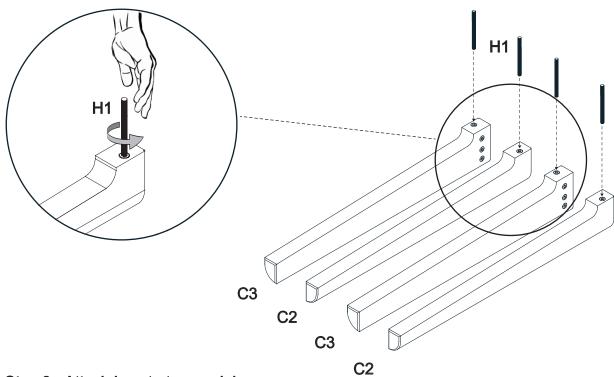


Step 3 - Attach legs to top module

Place **4 fixing heads H4** into the slots on the bottom rails. Attach the **legs C2, C3** to the **top module C1** as shown below. Then fix the **4 hex nuts H5** by using the **wrench T1**.

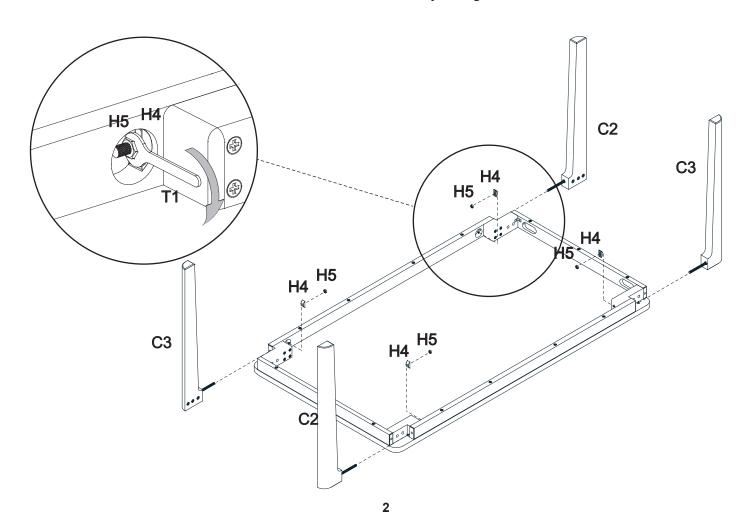


Step 4 - Fix additional bolts.

Use 4 bolts H2 and 4 fixing heads H4 for additional support.

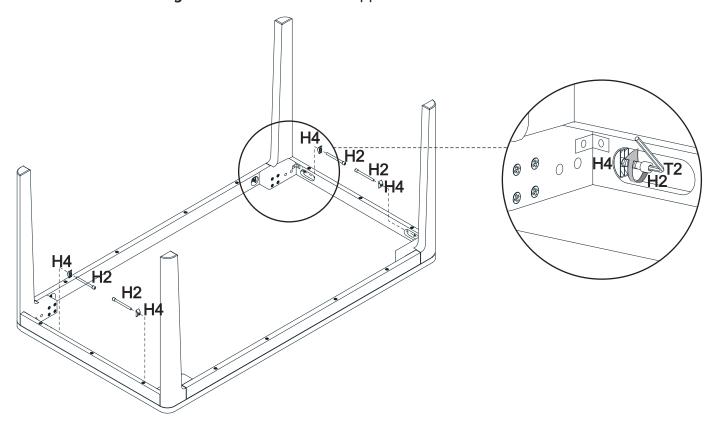

Step 5 - Fix the legs by using bolts.

Use **8 bolts H3** and **8 washers H6** to fix the legs onto the table top.

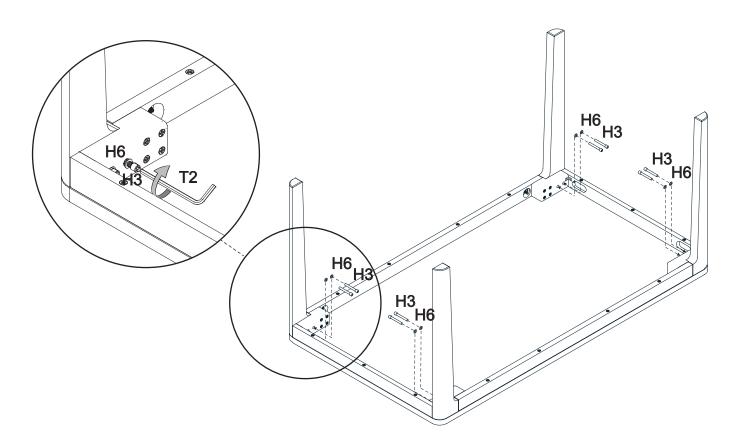

Step 6 - End of the assembly.

Lift the unit to standing position carefully.

