

TIME

WASH ROUTINE (EXTERIOR ONLY)

RULES



3-4 minutes



Make wheel (BRUTE) and paint (FOAM) buckets

Fill wheel bucket with 3-4 squirts of BRUTE and brushes Fill paint bucket with 3-4 squirts of FOAM and 2-5 MF towels

ENGINE

Degrease (TITAN12)

BRUTE + Wheel brushes

Light rinse

Towel or compressed air

- Park car out of sun.
- Clean out buckets and tools to get best results from soaps.
- Add BOOST if driving in salty conditions.
- Slightly warm engine is better than cold or very hot
- Use FROTHE if working on older engine or exposed sensitive areas.



PRE-WASH

TITAN12 on front bumper + behind wheel wells TITAN12 on door jambs Allow to dwell out of direct sunlight Skip pre-wash, unless excessively dirty, bug-covered, or driving on salty roads.



10-12 minutes

WHEELS

TITAN12 in plastic wheel wells
Pre-rinse + PLUM on wheel and rubber
Backside of rim and caliper (Wheel Woolie)
Front of rim with brush and mitt
Scrub Tires / rubber seals if needed
Scrub wheel well with Woolie or scrub brush
Rinse and repeat

- If you choose to remove wheels, start with suspension, calipers and wheel wells first.
- Wait for wheels and brakes to cool before applying PLUM.



DOOR JAMBS

Clean with wheel brush or wheel mitt

- Stay away from purposeful door grease
- Focus agitation on lower rubber seals



2 minutes

PRE-RINSE

Pressure washer or hose to knock off loose dirt

 Focus on seams, door gaps, and hood, trunk and door jambs



5-7 minutes

PAINT

Lubricating soap in foam cannon or Aerator based on condition Agitate with blue ultra-thick MF towels Interior brush on emblems

- Use FOAM for neutral pH cleaning and basic maintenance.
- Use BOOST for low pH, stronger cleaning.



RINSE



3 minutes

REFLEX PRO TOP COAT

Spray on wet paint and door jambs Allow two minutes dwell time Spray 1-2 squirts per panel, including hood, trunk, and door jambs



1-2 minutes

RINSE (GENTLE)

 Light rinse to spread the coating into seams and jambs



TIME

WASH ROUTINE (EXTERIOR ONLY)

RULES



DRY

Soak MF towel, wring out (damp) Fold into fours, spray HYDRATE onto towel Wring out when full


• MF towels will not remove all the water. Goal is lubrication during the drying process. Many need a follow-up wipe.

5-7 minutes

Use compressed air or Master Blaster

Use Scrub Pad to lift dirt and oils

• For stubborn interior windshield streaks, use 50/50 mix of water and Isopropyl Alcohol to cut through grease. Cover dash in towels to soak up drips.



GLASS Spray 2-3 sprays of OBEY

> Scoop up dirty with MF towel Spray mist of OBEY Squeegee Final buff with Waffle Weave MF Glass Towel

> > • Wear gloves - your hands will get oily.



RUBBER AND TRIM

Apply MUD to foam applicator Moisturize rubber in up/down and side/side motions for even coverage

Apply on wheel wells and trim is applicable

Use REVEAL to quickly show any missed

dirt or wax residue.



FINAL WIPE AND INSPECTION

Open all doors to flush out water and inspect work Use SPIT with an MF towel for touch ups



PROTECTION AND BEAUTY

Add SKIN (protection) or REFLEX PRO FINISHING WAX (additional shine) Buff clean with 2 MF towels

 SKIN and REFLEX PRO FINISHING WAX are quick and easy maintenance applications that add 6+ months of protection.



TIME

INTERIOR CLEANING ROUTINE

3-4 minutes

EMPTY OUT CAR

Start on driver side and remove garbage and floor mats Work from #1 clockwise around the car Bring garbage can with you if needed



COMPRESSED AIR

Blow out under the seats, between seats, cup holders, dash, doors, etc.



HEADLINER

Mist SHAG on stains and blot with MF towel If stain persists, repeat with interior brush agitation, then blot dry



PLASTIC, LEATHER, VINYL

Spray LATHER directly on surface Agitate with interior brush or scrub pad Immediately scoop up LATHER before it dries



5-7 minutes

VACUUM

Start with seat, seat seams, then floors in 1-5 workflow



15-25 minutes

SEATS

Spray SHAG on seats (if fabric), tamp in, then scrub with interior scrubber

Blot dry

Repeat on floor carpets



10-15 minutes

5-7 minutes

SHAMPOO

Steam-Vac both seats and carpets

Use garage wet-vac after heavy scrubbing if you do not have a shampoo or steam vac

Repeat in working pattern




CONDITIONER

Apply MOUSSE to a MF applicator and massage into leather (if applicable)

Buff to a matte finish after 3 or 4 minutes of dwell time

RULES

Working pattern front-back

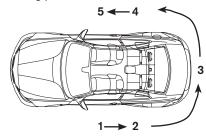

 If you don't have compressed air, use a Master Blaster

- Skip if clean do not touch unless
- Do not over soak or use all-purpose cleaners
- Only use scrub pad if stain persists. Do not over-rub to avoid removing dye
- If you have a steamer, you can use it with LATHER instead of interior brush. The heat/steam will increase cleaning effectiveness.
- If using compressed air in step 2, then moving seats back and forth should not be necessary. Use your best judgment.
- Avoid using super stiff brushes on soft fabrics
- Always double check fabric seat cleaning, as stains can return once dry.
- Use heavy hot water extraction if excessively dirty
- Wet-vacs are a cheaper alternative.
- Can be used on plastics and vinyl for UV protection.
- Always buff dry for a matte finish.



INTERIOR TIPS

- 1. Only use TITAN 12 for carpet oil stains or door handle hand grease marks. Avoid degreaser on headliners.
- 2. Use the least amount of water/moisture needed to do the job correctly. The more water used, the longer the dry time without professional vacuums and fans.
- 3. Never spray cleaners directly onto radios or gauge clusters to avoid leaking behind.