BEDROOM

PRODUCT HANDOUTS
ASSEMBLY GUIDES

INDEX

Α

Andes Handout 3

Andes Assembly 4

Atlyn Handout 5

Aventine Handout 6 - 7

Aventine Assembly 8 - 15

Aventine Parts 16

В

Beck Handout 17

Beck Assembly 18

Beck Parts 20

Bohdi Handout 21 - 25

Bohdi Assembly 26 - 60

Bohdi Parts 61

Brock Handout 62 - 67

Brock Assembly 68 - 81

Brock Parts 82

С

Calista Handout 83 - 86

Calista Assembly 87 - 96

Celeste Handout 97

Celeste Parts 98

Chambers Handout 99

Coburn Handout 100

Coburn Assembly 101 - 102

D

Devereaux Handout 103

Devereaux Assembly 104

Devereaux Assembly Video

Devereaux Parts 105

Ε

Edie Handout 106

Ella Handout 107

Evelyn Handout 108 - 109

Evelyn Assembly 110 - 124

Evelyn Parts 125

F

Felix Handout 126

Felix Assembly 127 - 131

Felix Parts 132

н

Hayworth Handout 133

Hayworth Assembly 134

Henley Handout 135 - 136

Henley Parts 137

J

Jetson Handout 138

K

Kinnan Handout 139

L

Lago Handout 140

Lawson Handout 141

Lawson Parts 142

Lennon Handout 143

Lenox Handout 144 - 145

Lenox Assembly 146 - 150

Lenox Parts 151

Lincoln Handout 152

Lincoln Assembly 153 - 154

Lincoln Parts 155

Loren Handout 156 - 157

Loren Assembly 158 - 165

Loren Parts 166

М

Madaline Handout (DISC) 167

Malone Handout 168 - 171

Malone Assembly 172 - 188

Malone Parts 189

Mandara Handout 190

Mandara Bed Assembly 191 - 192

Mandara Parts 193

Mariah Handout 194 - 195

Mariah Assembly 196

Mariah Parts 197

Maude Handout 198

Maude Assembly 199

Maude Parts 200

Maya Handout 201

Maya Bed Assembly 202 - 206

Maya Parts 207

Miller Handout 208 - 209

Miller Parts 210

N

Nolan Handout 211 - 212

Nolan Assembly 213

Nolan Parts 214

0

Omani Handout 215

Ρ

Palmer Handout 216 - 217

Palmer Assembly 218 - 234

Palmer Storage Bed Assembly Video

Palmer Parts 235

Pearson Handout 236 - 242

Pearson Assembly 243 - 477

Pearson Gallery Storage Bed Assembly Video

Pearson Parts 278

Percy Handout 279

Percy Parts 280

R

Reese Handout 281

Reese Assembly 281 - 291

Reese Parts 292

Rigby Handout 293

Rigby Assembly 294 - 295

Rigby Parts 296

S

St. Lucia Handout 297

St. Lucia Assembly 298 - 300

St. Lucia Parts 301

St. Martin Handout 302 - 305

Sullivan Handout 306 - 308

Sullivan Assembly 309

т

Tremont Handout 310 - 311

Tremont Assembly 312 - 313

Tremont Parts 314

w

Wyller Handout 315 - 216

Wyller Parts 317

MATRESSES 316 - 352

UNIVERSAL BEDROOM PARTS 353

your home

andes



King Bed 86" w x 94" d x 52" h Variety Moss 45ANDESKG Logan Whiskey XA8LKB3*

Fabric:



Variety Moss

Leather:



Logan Whiskey

Finish:



your style your way

Variety Moss

Craft a custom design that tells your style story. This collection is available in special-order Fabrics, Leathers, Finishes, and more. Ask in store or call 866.427.4287

45ANDESQN

*available by special order

clean and modern

this bedroom collection infuses your space with sophistication. Its simple, silhouette is softened by subtle detailing and plush upholstery. A soft and pillowy headboard is painstakingly upholstered by hand, swathed in sumptuously soft fabric, adding a dramatic focal point that heightens the style of any welldressed space. Thick layers of padding enfold all surfaces including the footboard and side rails, allowing this piece to float beautifully anywhere in your room.

product details


- ▶ Craftsman-built frames are constructed using solid, reinforced, laminate hardwood for lasting strength and superior stability.
- ▶ Solid hardwood panels rest on solid wood braces attached to the frame's side rails for reliable mattress support.
- Made in America—this collection was handcrafted by upholstery artisans in
- Arhaus upholstery is made using wood certified by the Sustainable Forestry Initiative.
- Lightly tapered solid wood feet enhance this collection's modern styling.
- Frames are padded in dense, eco-friendly foam and poly-fiber wrapped in casings that maintain the padding's shape.
- Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked into frame.
- We recommend using with our Retreat 4" Platforms.
- King beds feature a frame cavity of 78.75" w x 82.75" d x 4" h.
- Queen beds feature a frame cavity of 62.75" w x 82.75" d x 4" h.
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.








Dimensions may vary slightly. Please ensure furnishings fit through interior structures and into desired space before purchase.

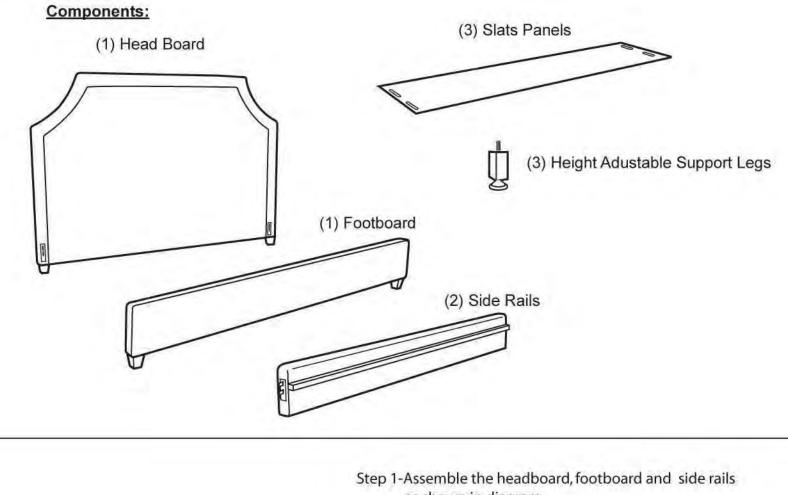

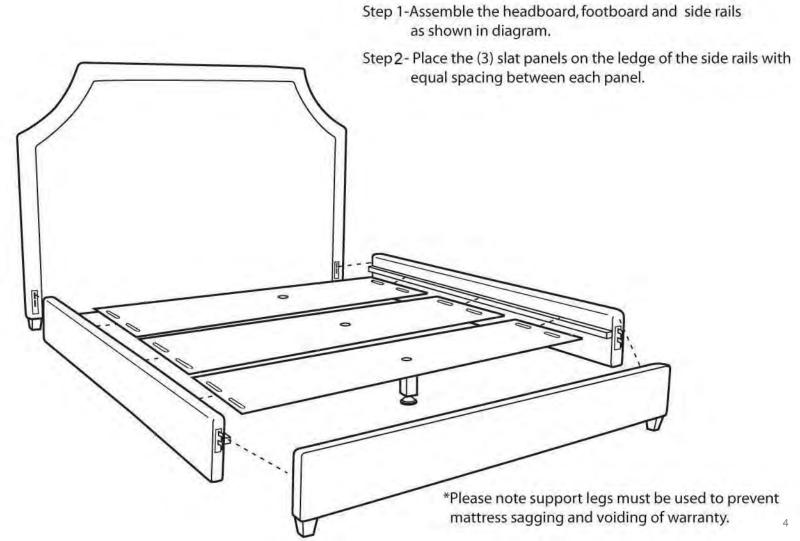

your home

ATLYN

BEDROOM COLLECTION | MADE IN AMERICA



QUEEN BED

67" w x 91" d x 55" h X1DFQBE* KING BED 83" w x 91" d x 55" h X1DFKBE*

CALIFORNIA KING

79" w x 95" d x 55" h X1DFCKE*



FABRIC: Tolliver Cream

YOUR STYLE YOUR WAY

Craft a custom design that tells your story. This collection is available in special-order Fabrics, Leathers, Finishes, and more. Ask in store or call 866.427.4287.

*Available by special order.

CRAFTED BY AMERICAN ARTISANS IN THE APPALACHIAN FOOTHILLS OF NORTH CAROLINA

Our Atlyn Bedroom Collection is built from solid, sustainably sourced hardwood. Expertly upholstered surfaces are hand-sewn and padded for a plush feel. Complementary performance fabrics are durable yet incredibly soft, designed to withstand everyday use while remaining warm and comfortable for years of restful relaxation.







PRODUCT DETAILS

- Our Performance Fabrics are extremely durable and resist stains and fading but remain beautiful and soft to the touch.
- Craftsman-built frames are constructed using solid, reinforced hardwood for lasting strength and superior stability.
- Made in America—this collection was handcrafted by upholstery artisans in North Carolina.
- Arhaus upholstery is made using wood certified by the Sustainable Forestry Initiative.
- Expertly hand-sewn fabrics are generously padded with poly-fiber, creating a plush, relaxing feel.
- + Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked into frame.
- + Bed frames are compatible with our Elite Motion Bases.
- Keep your furniture looking its best. Visit arhaus.com or speak to any
 Arhaus Design Consultant for care recommendations.

$ARHAUS^{\circ}$

aventine



King Bed 79.75" w x 85" d x 56" h 45AVENKG

California King Bed 75.75" w x 87" d x 56" h 45AVENCK

Queen Bed 63.75" w X 84.875" d X 56" h 45AVENQN

contemporary old world aesthetics

Inspired by chevron patterns found in the floors of wealthy Spanish homes and throughout Western Europe from the 16th to 18th centuries—our Aventine collection mimics the charm of old world parquetry and the dark, rich textures of floor boards that have aged and built character over years of history. Craftsman-built from solid oak surfaced with quarter oak veneers, this stunning collection is finished by artisan hands with a lush, dark tone accented by subtly weathered brass hardware. Finished pieces are carefully sealed and coated with clear lacquer for added protection and a subtle sheen—evoking a cleaner, more contemporary feel.

product details

- Our Aventine collections is crafted by Vietnamese artisans from solid oak surfaced with quarter oak veneers for a smooth and elegant finish.
- Dark-toned finishes are applied by hand, sealed, and coated with clear lacquer for added protection and a subtle sheen that evokes a clean and contemporary aesthetic.
- ► Old world Western European designs are accented by subtly weathered brass hardware that enhances rich finishes without drawing too much attention.
- Drawers built with French dovetail joinery at the front and English dovetails at the back are mounted on full-extension, soft-close glides.
- ▶ Queen bed frame cavity measures 61" w x 80.5" d
- ► King bed frame cavity measures 77" w x 80.5" d
- ► California King bed frame cavity measures 73" w x 84.5" d
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.







Dimensions may vary slightly. Please ensure furnishings fit through interior structures and into desired space before purchase.

ARHAUS° your home



Tall Dresser 44" w x 20" d x 52" h 45AVENTD



Wide Dresser 66" w x 20" d x 34.5" h 45AVENWD



Nightstand 30" w x 20" d x 24" h 45AVENNT



Open Nightstand 26" w x 20" d x 24" h 45AVENONT

your home

AVENTINE KING/ CAL KING BED

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These bed parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the bed are not damaged during the assembly process.

PARTS INCLUDED	HARDWARE PARTS	
A. HEADBOARD	1. [8] THREADED ROD	
B. FOOTBOARD	2. [8] HEX NUTS	
C. SIDE RAILS	3. [8] LOCK WASHER	
D. SUPPORT SLAT	4. [8] CURVED SLOTTED	WASHER O
E. LEG	5. [1] WRENCH	
F. PLAT FORM PANEL	6. [4] SCREW	**************************************

ASSEMBLY INSTRUCTION

STEP 1:

Place the Headboard (A) upright in the position you wish the bed to be in when fully assembled. The headboard bed fast hardware should be facing inside, toward the mattress. Secure the Threaded Rod (1) to the fixed nut in the Headboard (A) by simply turning it manually. Raise the Side Rail (C) up and set the Rod (1) to align with the bore holes on the end of the Side Rails (C). Put the Side Rails (C) up against the Headboard (A) so the Threaded Rod (1) go through the bore hole. Insert Curved Slotted Washer (4) and Lock Washer (3), then engage Hexagonal Nuts (2) on Threaded Rod (1) and tighten the Hexagonal Nuts (2) with Open Wrench (5), as illustrated in FIGURE 01.

STEP 2:

Repeat the above procedure with the other Side Rail (C) to attach it to the Headboard (A), and then repeat to connect Side Rails (C) to the foot board (B).

NOTE: Tighten all the nuts to snug fit.

FIGURE 01 1 4 3 2 5 Page 1 of 2

your home

AVENTINE KING/ CAL KING BED

Set the Support Slats (D) on the metal brackets of both Headboard (A) and Foot Board (B) but before that, install the Leg (E) on the center cavity of Support Slats (D) as shown in FIGURE 02 (FIGURE 02-A - FIGURE 02-B). FIGURE 02 - B

STEP 4:


On inside face of both Side Rails (C) there is a cleat pre-installed designed to hold the Plat Form Panel (F).

Gently set the Plat Form Panel (F) on both sides of the Side Rails (C) as shown in FIGURE 03.

CARE INSTRUCTIONS

- Hardware may loosen over time, periodically check that all connections are tight or tighten them if necessary.
- Wipe with a soft, dry cloth, to protect the finish and avoid the use of all chemicals or any household cleaners.

FIGURE 03

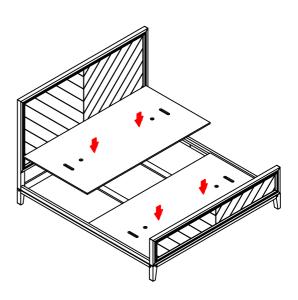

your home

AVENTINE NIGHTSTAND

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

MARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

HARDWARE LIST


- [4] BRACKET
- [2] RESTRAINT STRAP
- [4 SHORTER] PHILIPS SCREWS
- [4 LONGER] PHILIPS SCREWS
- [4] PLASTIC ANCHOR


INSTALLATION INSTRUCTIONS

- 1. Attach two of the mounting brackets near the top back edge of the furniture piece using the shorter screw.
- Determine the final position of the furniture piece and mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture piece.
- Drill a shorter hole into the dry wall stud. If wall stud is not available, drill a hole into the solid wall and insert plastic anchor. Gently tap the anchor until the flange is flush with the wall.
- 4. Attach the second set of brackets using the longer screw through the bracket hole and into the wall.
- 5. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
- Lace one end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot.
- To double lock; return the beaded end back through the keyholes as shown.
- Check to make sure the straps are securely laced and locked to the brackets.

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

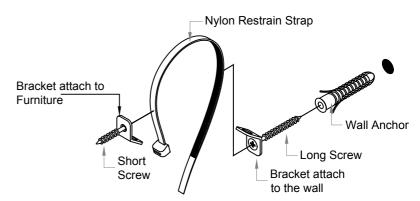

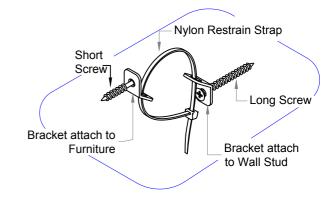



your home

AVENTINE OPEN NIGHTSTAND

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

HARDWARE LIST


- [4] BRACKET
- [2] RESTRAINT STRAP
- [4 SHORTER] PHILIPS SCREWS
- [4 LONGER] PHILIPS SCREWS
- [4] PLASTIC ANCHOR





- 1. Attach two of the mounting brackets near the top back edge of the furniture piece using the shorter screw.
- Determine the final position of the furniture piece and mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture piece.
- Drill a shorter hole into the dry wall stud. If wall stud is not available, drill a hole into the solid wall and insert plastic anchor. Gently tap the anchor until the flange is flush with the wall.
- 4. Attach the second set of brackets using the longer screw through the bracket hole and into the wall.
- 5. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
- Lace one end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot.
- 7. To double lock; return the beaded end back through the keyholes as shown.
- Check to make sure the straps are securely laced and locked to the brackets.

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

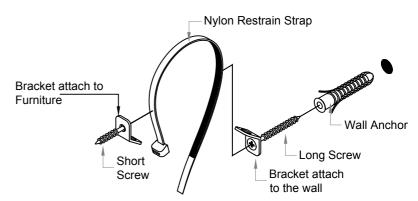

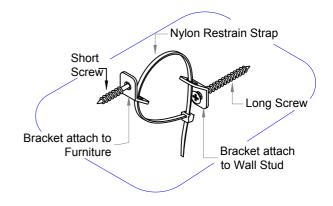

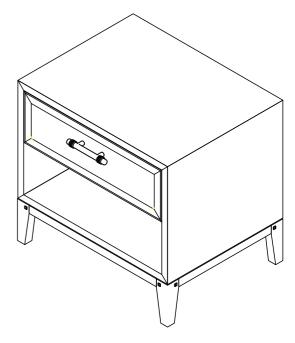

your home

AVENTINE QUEEN BED

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These bed parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the bed are not damaged during the assembly process.

PARTS INCLUDED	HARDWARE PARTS	
A. HEADBOARD	1. [8] THREADED ROD	
B. FOOTBOARD	2. [8] HEX NUTS	
C. SIDE RAILS	3. [8] LOCK WASHER	
D. SUPPORT SLAT	4. [8] CURVED SLOTTED	WASHER O
E. LEG	5. [1] WRENCH	
F. PLAT FORM PANEL	6. [2] SCREW	**************************************

ASSEMBLY INSTRUCTION

STEP 1:


Place the Headboard (A) upright in the position you wish the bed to be in when fully assembled. The headboard bed fast hardware should be facing inside, toward the mattress. Secure the Threaded Rod (1) to the fixed nut in the Headboard (A) by simply turning it manually. Raise the Side Rail (C) up and set the Rod (1) to align with the bore holes on the end of the Side Rails (C). Put the Side Rails (C) up against the Headboard (A) so the Threaded Rod (1) go through the bore hole. Insert Curved Slotted Washer (4) and Lock Washer (3), then engage Hexagonal Nuts (2) on Threaded Rod (1) and tighten the Hexagonal Nuts (2) with Open Wrench (5), as illustrated in FIGURE 01.

STEP 2:

Repeat the above procedure with the other Side Rail (C) to attach it to the Headboard (A), and then repeat to connect Side Rails (C) to the foot board (B).

NOTE: Tighten all the nuts to snug fit.

FIGURE 01

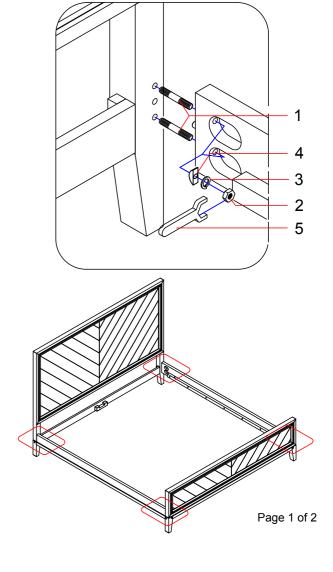

your home

AVENTINE QUEEN BED

Set the Support Slats (D) on the metal brackets of both Headboard (A) and Foot Board (B) but before that, install the Leg (E) on the center cavity of Support Slats (D) as shown in FIGURE 02 (FIGURE 02-A - FIGURE 02-B). FIGURE 02 FIGURE 02 - A

STEP 4:


On inside face of both Side Rails (C) there is a cleat pre-installed designed to hold the Plat Form Panel (F).

Gently set the Plat Form Panel (F) on both sides of the Side Rails (C) as shown in FIGURE 03.

CARE INSTRUCTIONS

- Hardware may loosen over time, periodically check that all connections are tight or tighten them if necessary.
- Wipe with a soft, dry cloth, to protect the finish and avoid the use of all chemicals or any household cleaners.

FIGURE 03

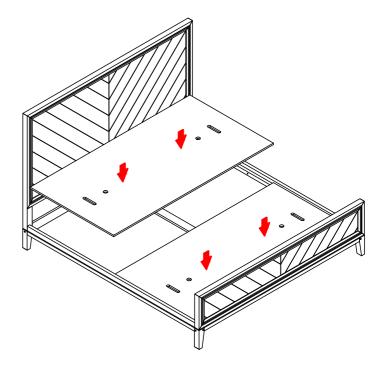

your home

AVENTINE TALL DRESSER

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

HARDWARE LIST


- [4] BRACKET
- [2] RESTRAINT STRAP
- [4 SHORTER] PHILIPS SCREWS
- [4 LONGER] PHILIPS SCREWS
- [4] PLASTIC ANCHOR




- 1. Attach two of the mounting brackets near the top back edge of the furniture piece using the shorter screw.
- Determine the final position of the furniture piece and mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture piece.
- Drill a shorter hole into the dry wall stud. If wall stud is not available, drill a hole into the solid wall and insert plastic anchor. Gently tap the anchor until the flange is flush with the wall.
- 4. Attach the second set of brackets using the longer screw through the bracket hole and into the wall.
- 5. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
- Lace one end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot.
- 7. To double lock; return the beaded end back through the keyholes as shown.
- Check to make sure the straps are securely laced and locked to the brackets.

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

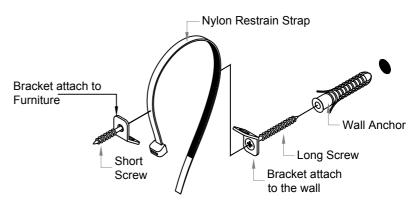

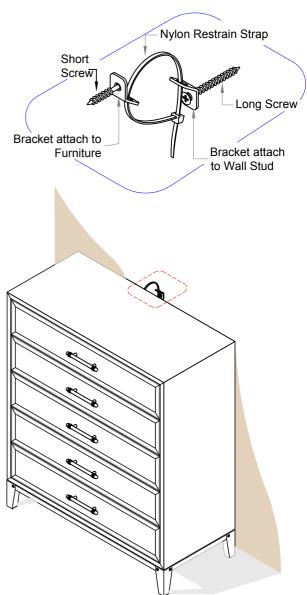

your home

AVENTINE WIDE DRAWER DRESSER

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

HARDWARE LIST

- [4] BRACKET
- [2] RESTRAINT STRAP
- [4 SHORTER] PHILIPS SCREWS
- [4 LONGER] PHILIPS SCREWS
- [4] PLASTIC ANCHOR

INSTALLATION INSTRUCTIONS

- Tilt of gently laid the chest of drawers on its back and install the leg in the middle as shown in FIGURE 01.
- 2. From the desired location, pre-set the unit 16" to 20" from the wall, examine the alignment of the doors and drawers, if leveling is necessary. If needed, slightly tilt the base and turn the head of the levelers clockwise to raise the furniture and counter clockwise to lower it. Adjust all levelers until the correct level or flatness is achieved. Repeat adjustment procedures if necessary, after the furniture settles on rugs or on carpeted surface. Please see FIGURE 02

ANTI TIP KIT INSTALLATION

- Attach two of the mounting brackets near the top back edge of the furniture piece using the shorter screw.
- Determine the final position of the furniture piece and mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture piece.
- Drill a shorter hole into the dry wall stud. If wall stud is not available, drill a hole into the solid wall and insert plastic anchor. Gently tap the anchor until the flange is flush with the wall
- 6. Attach the second set of brackets using the longer screw through the bracket hole and into the wall.
- Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
- Lace one end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot.
- To double lock; return the beaded end back through the keyholes as shown.
- Check to make sure the straps are securely laced and locked to the brackets. Please see FIGURE 03.

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

FIGURE 01




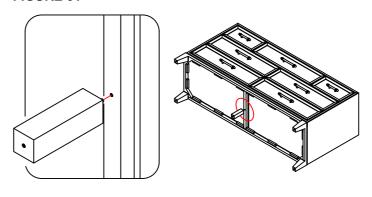


FIGURE 02

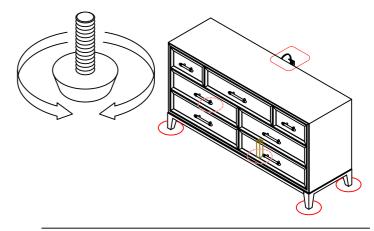

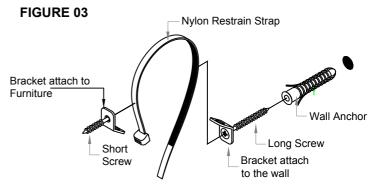

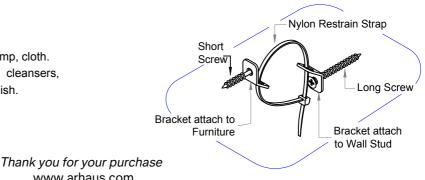

BEDROOM PARTS SKUS

Super Category	Product ID Description		Collection	Route
BEDROOM	91AVENCKSLAT AVENTINE CALI KING BED SLATS		PT-AVENTIN	
BEDROOM	91AVENCKASHW	AVENTINE CK BED ASSEMBLY HW	PT-AVENTIN	
BEDROOM	91AVENCKCTSP	AVENTINE CK BED CENTR SUPPORT	PT-AVENTIN	
BEDROOM	91AVENKGASHW	AVENTINE KING BED ASSEMBLY HW	PT-AVENTIN	
BEDROOM	91AVENKGSLAT	AVENTINE KING BED SLATS	PT-AVENTIN	
BEDROOM	91AVENKGCTSP	AVENTINE KING CENTER SUPPORT	PT-AVENTIN	
BEDROOM	91AVENNTPULL	AVENTINE NT DRAWER 8" PULL 1 PIECE	PT-AVENTIN	
BEDROOM	91AVENNTSLID AVENTINE NT DRAWER SLIDES 1 = PAIR OF SLIDES		PT-AVENTIN	
BEDROOM	91AVENONTPLL	AVENTINE OPEN NT DRAWR 8" PULL 1 PIECE	PT-AVENTIN	
BEDROOM	91AVENONTSLD	AVENTINE OPEN NT DRAWR SLIDES 1 = PAIR OF SLIDES	PT-AVENTIN	
BEDROOM	91AVENQNASHW	AVENTINE QUEEN BED ASSEMBLY HW	PT-AVENTIN	
BEDROOM	91AVENQNSLAT	AVENTINE QUEEN BED SLATS PT-AVI		
BEDROOM	91AVENQNCTSP	AVENTINE QUEEN CENTER SUPPORT PT-AVENTIN		
BEDROOM	91AVENTDPULL	AVENTINE TD DRAWER 8" PULL 1 PIECE	PT-AVENTIN	
BEDROOM	91AVENTDSLID AVENTINE TD DRAWER SLIDES 1 = PAIR OF SLIDES		PT-AVENTIN	
BEDROOM	91AVENWDCTSP	AVENTINE WD CENTER SUPPORT LEG 1 PIECE	PT-AVENTIN	
BEDROOM	91AVENWD6PL	AVENTINE WD DRAWER 6" PULL PT-AVENTIN 1 PIECE		
BEDROOM	91AVENWD8PL	AVENTINE WD DRAWER 8" PULL PT-AVENTIN 1 PIECE		
BEDROOM	91AVENWDSLID	AVENTINE WD DRAWER SLIDES PT-AVENTIN 1 = PAIR OF SLIDES		

BECK

BEDROOM COLLECTION | MADE IN CHINA

shown in Moto Stucco/Shadow



KING BED

83" w x 89.5" d x 45.5" h Moto Flannel/Shadow Moto Stucco/Shadow

45BECKFSKGKT 45BECKSSKGKT

QUEEN BED

67" w x 89.5" d x 45.5" h Moto Flannel/Shadow Moto Stucco/Shadow

45BECKFSQNKT 45BECKSSQNKT

ESSENTIAL CONTEMPORARY COMFORT

Designed with a lower headboard for a more modern feel, our Beck Beds are a boudoir staple. These simple, contemporary classics are expertly fitted with designer-inspired fabrics—thoughtfully selected to complement your space with neutral tones that provide an ideal foundation of comfort. Headboards and other surfaces are generously cushioned with dense, eco-friendly foam and poly-fiber padding for relaxing "sink-into" comfort. Create a modern retreat that complements your taste and allows you to unwind in style.

PRODUCT DETAILS

- Craftsman-built bed frames are constructed using solid larch and engineered hardwood.
- Bed legs are crafted from solid catalpa wood and hand-finished in a warm brown tone.
- Bed frames are padded with dense eco-friendly foam—made partly from plant-based material—which is then wrapped in poly-fiber padding for additional, "sink-into" comfort.
- Bed frames accommodate for variances in mattress sizes and allow bedding to be tucked in.
- Beck Beds do not require box springs.
- Keep your furniture looking its best. Visit arhaus.com or speak to any
 Arhaus Design Consultant for care recommendations.

FABRICS:



Moto Stucco



FINISHES:

Shadow



Moto Flannel


NEED HELP?

Visit a store, call **866.427.4287**, or **live chat** with our Design Team to learn more.

$ARHAUS^*$

Beck King Bed


Assembly Instruction

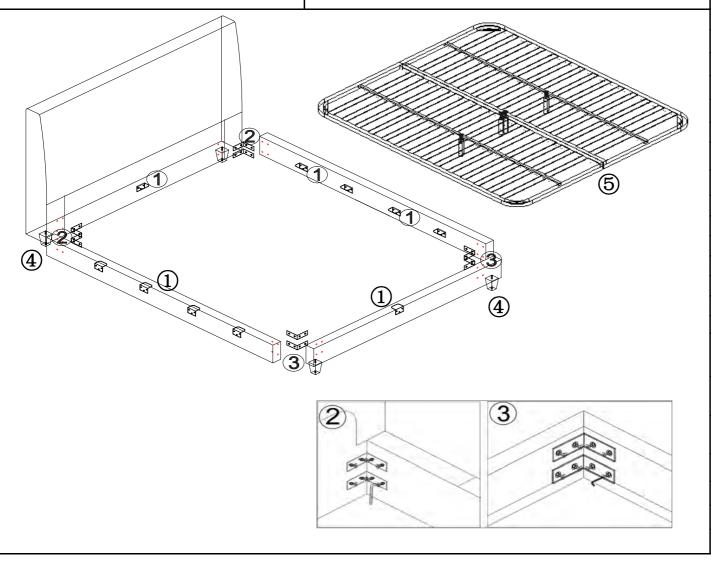

No.	Quantity	Accessory	
A	8	a 2 2	
В	10		
С	30	40×5mm	
D	32	② 30×8mm	
Е	1		
F	4		
G	4	metal leg 22cm	
Н	10	30mm	
	HARDWARE KIT: 91BECKKASHW		
Steps	Please refer following procedures		
1	Use screw C to install B on headboard, siderails,		
	footboard, and place H on B.		
2	Screw off D first and use A and D to connect headboard and siderails.		
3	Screw off D first and use A and D to connect		
	siderails and footboard.		
4	Install F legs on headboard and footboard;		
(5)	Install G legs on slat and put the slat on the bed		

Beck Queen Bed

Assembly Instruction

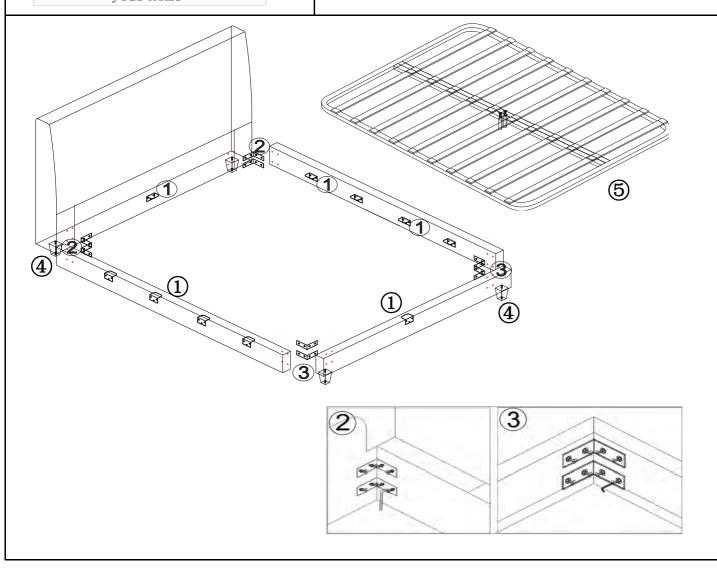

No.	Quantity	Accessory	
A	8	E-202	
В	10	5	
C	30	40×5mm	
D	32	② 30×8mm	
Е	1		
F	4		
G	2	metal leg 22cm	
Н	10	30mm	
		HARDWARE KIT: 91BECKQASHW	
Steps	Please refer following procedures		
1	Use screw C to install B on headboard, siderails, footboard, and place H on B.		
<u> </u>	Screw off D first and use A and D to connect		
2	headboard and siderails.		
3	Screw off D first and use A and D to connect		
	siderails and footboard.		
4	Install F legs on headboard and footboard;		
(5)	Install G legs on slat and put the slat on the bed		

BEDROOM PARTS SKUS

Super Category	Product ID	Description	Collection	Route
BEDROOM	91BECKKASHW	BECK ASSEMBLY HARDWARE KING	PT-BECK	PART
BEDROOM	91BECKQASHW	BECK ASSEMBLY HARDWARE QUEEN	PT-BECK	PART
BEDROOM	91BECKKGBRKT	BECK BRACKET KING	PT-BECK	PART
BEDROOM	91BECKKGSL	BECK KING SLATS BECK KING SLATS	PT-BECK	PART

BODHI

BEDROOM COLLECTION | MADE IN INDONESIA

shown in Salvaged Grey



REFINED YET RUSTIC

Featuring bold, minimalist silhouettes, our Bodhi Bedroom Collection is a new take on rustic that honors the beauty of simple construction and emphasizes the gorgeous grain of natural white oak. Each piece is carefully built by craftsmen and hand-finished—wire brushed and sanded before a six-step application of stain, glaze, sealer, and lacquer to achieve an elegant, "organically aged" patina. Modern case pieces and storage platform beds are also equipped with spacious drawers. Case pieces are accented by beautiful brass pulls adorned with a subtle champagne tone.





NEED HELP?

Visit a store, call **866.427.4287**, or **live chat** with our Design Team to learn more.

BODH

BEDROOM COLLECTION | MADE IN INDONESIA

shown in Salvaged Grey



PRODUCT DETAILS

- Craftsman-built frames are constructed from solid white oak and white oak veneers.
- + Indonesian artisans use wood certified by the Forest Stewardship Council.
- + Finishes are artfully applied by hand. Wood surfaces are wire-brushed and sanded before staining.
- Finished wood surfaces are sealed and lacquered for added protection and a subtle satin sheen.
- + Drawers are built using English dovetail joinery, sit on under-mounted soft-close glides, and feature solid brass hardware to complement the oak wood.
- + Storage beds feature two large drawers on each side of the platform.
- + Bodhi Beds do not require box springs.
- + Bed platforms measure 10.5" h.
- + Queen Bed frame cavities measure 68" w x 84" d.
- + King Bed frame cavities measure 84" w x 84" d.
- Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked in.
- This collection is artisan-crafted from natural materials with hand-applied finishes. Individual pieces may vary in color, pattern, shape, and texture, making each truly unique.
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.

FINISHES:



Salvaged Grey



Ebony

ARHAUS your home

BODHI

BEDROOM COLLECTION | MADE IN INDONESIA

shown in Salvaged Grey



KING CANOPY STORAGE BED

84" w x 88" d x 87" h

Salvaged Grey 45BODHIGQCP2 Ebony 45BODHIEKCP

QUEEN CANOPY STORAGE BED

68" w x 88" d x 87" h

45BODHIGKCP2 Salvaged Grey Ebony 45BODHIEQCP



KING STORAGE BED

84" w x 88" d x 40" h Salvaged Grey 45BODHIKG2 Ebony 45BODHIEBKG

QUEEN STORAGE BED

68" w x 88" d x 40" h Salvaged Grey Ebony

45BODHIQN2 45BODHIEBQN



6-DRAWER DRESSER

72.5" w x 22" d x 34.5" h Salvaged Grey Ebony

45BODHIWD2 45BODHIEBWD

BODHI

BEDROOM COLLECTION | MADE IN INDONESIA



5-DRAWER DRESSER

38.75" w x 22" d x 54" h Salvaged Grey Ebony

45BODHITD2 45BODHIEBTD



TALL NIGHTSTAND

30" w x 19.5" d x 28" h Salvaged Grey Ebony

45BODHI28NT2 45BODHEB28NT



NIGHTSTAND

28" w x 20" d x 22.25" h Salvaged Grey Ebony

45BODHINT2 45BODHIEBNT

3 O D H

BEDROOM COLLECTION | MADE IN INDONESIA



55" BENCH

55" w x 15.75" d x 18" h Salvaged Grey Ebony

45BODHI55GBN 45BODHI55EBN




70" BENCH

70" w x 15.75" d x 18" h Salvaged Grey Ebony

45BODHI70GBN 45BODHI70EBN

your home

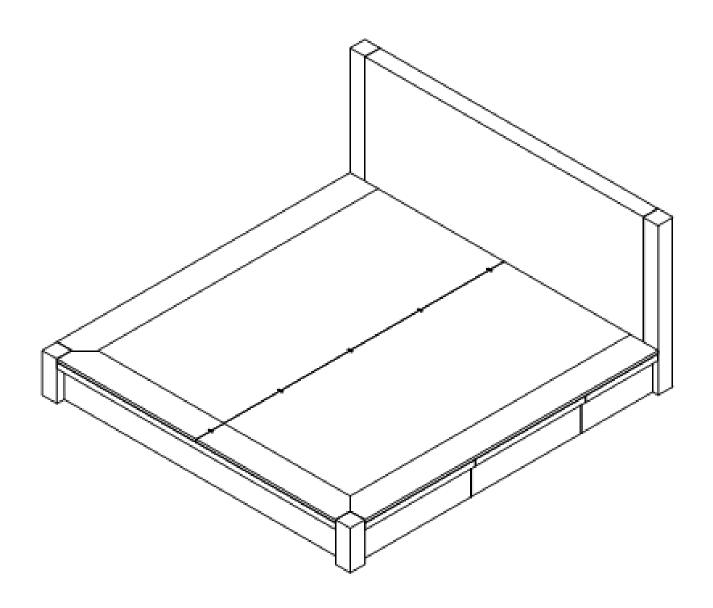

Assembly Instruction

45BODHIQNHBFB (Bodhi QN HB/FB Plat & Rails) 45BODHIQNDRS (Bodhi Queen Bed Frame Drawers) 45BODHIKGHBFB (Bodhi KG HB/FB Plat & Rails) 45BODHIKGDRS (Bodhi King Bed Frame Drawers)



your home

Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.


LIST OF PART AND HARDWAR BODHI BED FRAME				
Part	Quantity	Description	Image	
A	1	Headboard Panel		
В	1	Footboard Panel		
С	1	Slat Rail	• • •	
D	3	Slat Support	=::a	
E	2	Side Frame (L/R)		

HARDWARE KIT: 91BODHIASMHW


your home

F	2	Mattress Support Panel (L/R)	
G	16	Bolt JCBC 1/4 x 1 1/2"	
Н	8	Flat Washer 1/4"	0
I	1	Allen Key	
J	10	Screw JP 8 x 1"	(************************************

ARHAUS your home

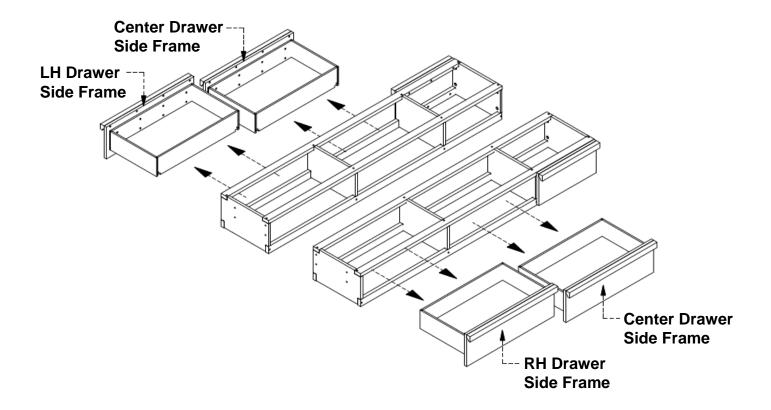


your home

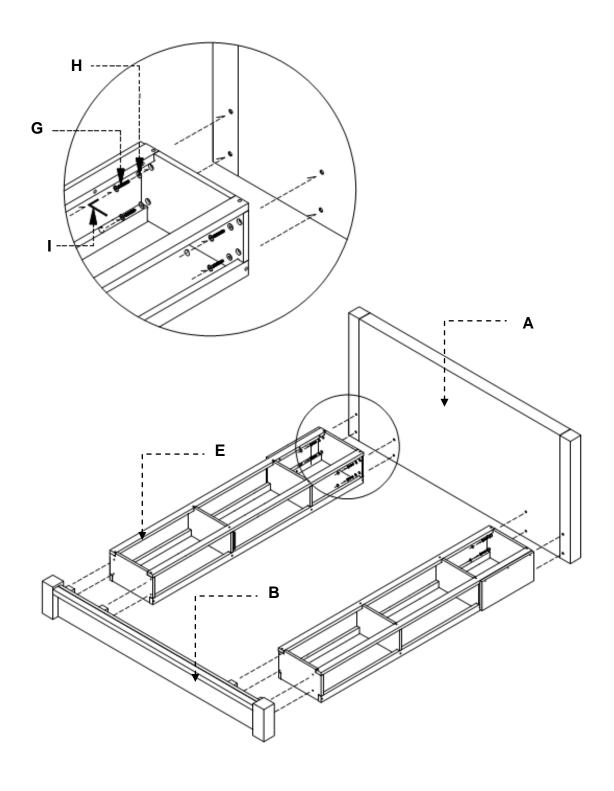




your home

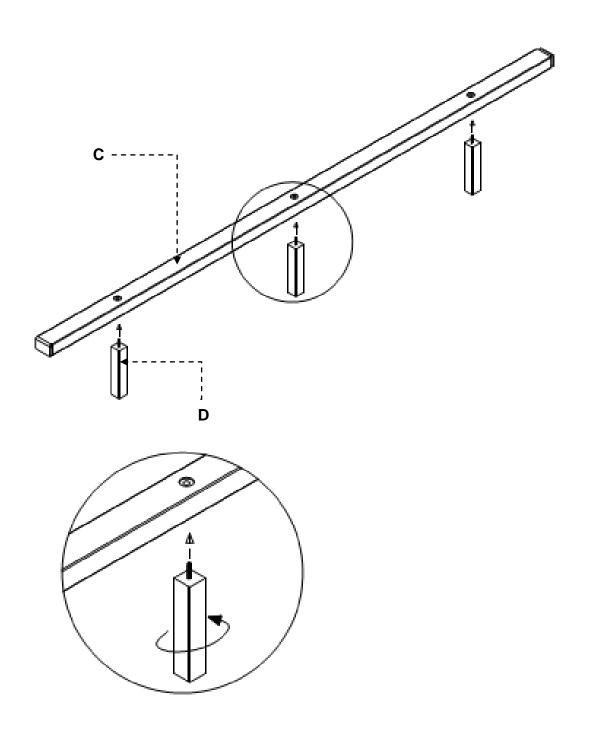


your home

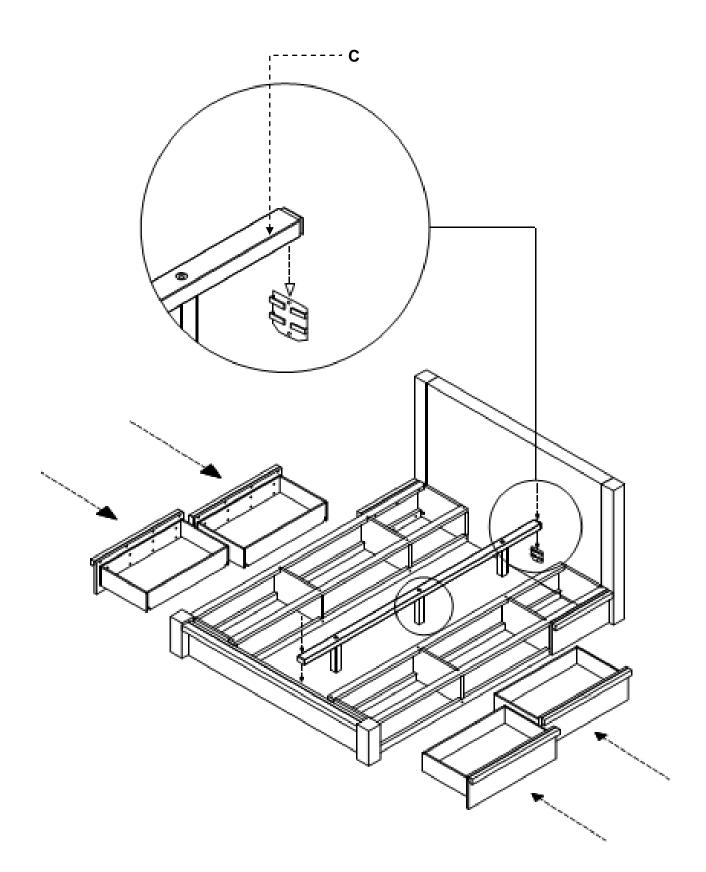



your home

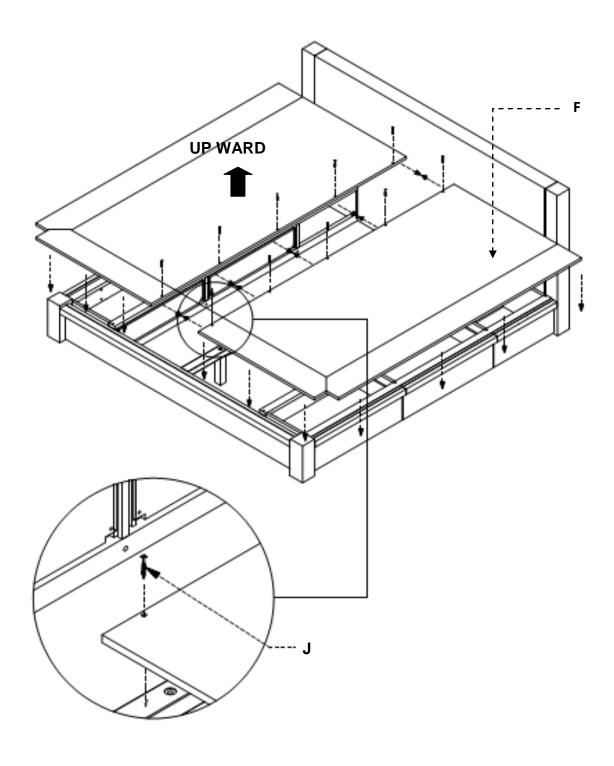

Thank You for Your Purchase




your home

BODHI CACHE DRESSER

(45BODHICACHE)

INSTRUCTION LEVELING GLIDER

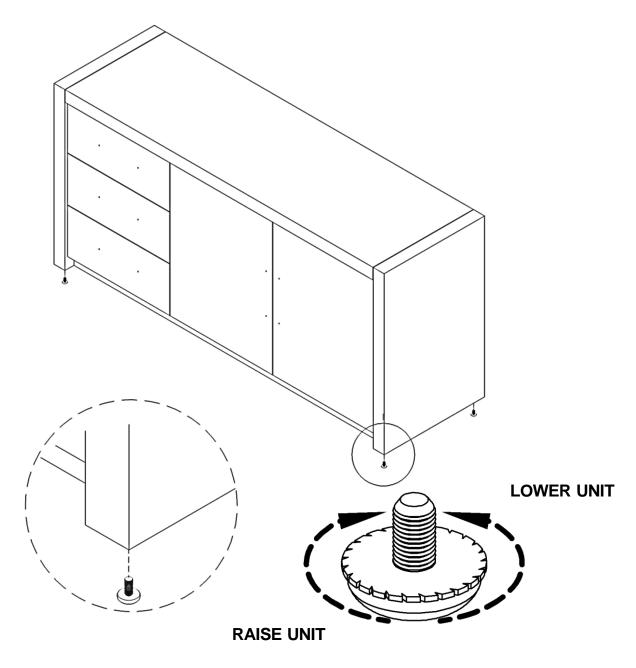


TWO-PERSON ASSEMBLY RECOMMENDED - Place the Base Unit (part I) as near as possible to its final location, allowing room to access the back. **NOTE:** Using a Level, make sure top surface of Base Unit is level before continuing Levelers are located on the bottom of the unit and may be adjusted, as necessary, to ensure proper leveling is achieved. To adjust the levelers, carefully lift the unit slightly to relieve pressure on the leveler(s) needing adjustment. To raise or lower the unit, turn the levelers as shown below. Repeat process as necessary until unit is level and stable.

your home

INSTRUCTIONS FOR ADJUSTING THE DOORS


The doors will already be adjusted by the manufacturer with the furniture on level ground. If your floor is uneven the doors may need further adjustment and this can be done with the hinges as shown below:

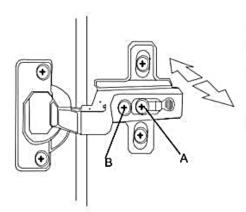

1. TO ADJUST THE DOORS FROM SIDE TO SIDE


Slacken screw A and adjust the door position from side to side using screw B.

When the door is correctly adjusted re-tighten screw A.

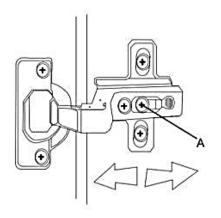

2. TO ADJUST THE DOORS FROM FRONT TO BACK

Slacken screw A and adjust door from front to back.
When the door is correctly adjusted re-tighten screw A.

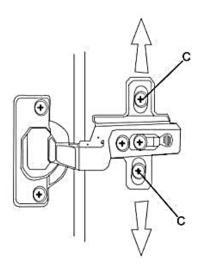


3. TO ADJUST THE DOORS UP OR DOWN

Slacken both screws C and adjust the door up or down

When the door is correctly adjusted re-tighten both screws C.

your home

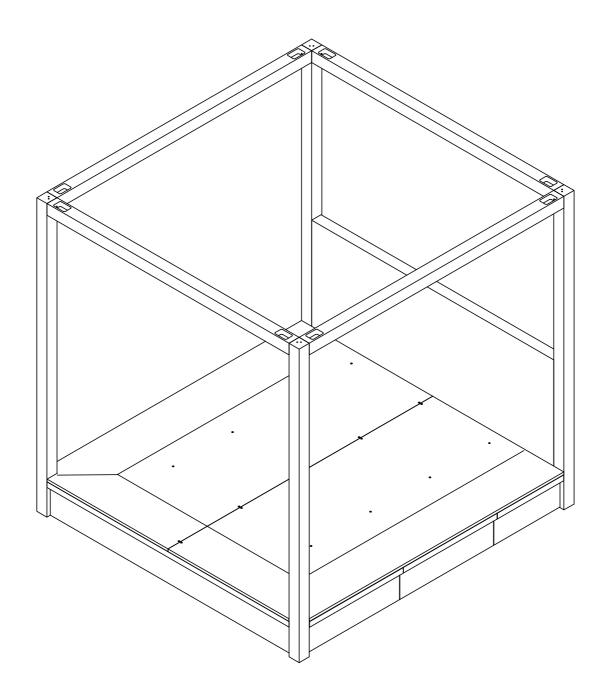

Assembly Instruction Bodhi Expansion King Canopy Bed Bodhi Expansion Queen Canopy Bed

your home

List Of Part & Hardware Bodhi Queen Headboard Extension Nightstand				
Part	Quantity	Description	Image	
A	1	Headboard Panel		
В	1	Posh L/R Headboard	<u> </u>	
С	1	Footboard Panel		
D	1	Posh L/R Footboard		
Е	2	Long Canopy		
F	2	Short Canopy		
G	1	Slat Rail	•	

your home


List Of Part & Hardware Bodhi Queen Headboard Extension Nightstand				
Part	Quantity	Description	Image	
Н	3	Slat Support		
I	1	Side Rail Drawer L/R		
J	1	Panel Matras L/R		
K	16	Flat washer 1/4		
L	16	Lock washer 1/4		
M	16	Bolt JCBC (L) Black 1/4"X1-1/2"		

your home

List Of Part & Hardware Bodhi Queen Headboard Extension Nightstand				
Part	Quantity	Description	Image	
N	1	Allen Wrench or Key		
О	18	Through Bolt 5/16		
P	18	Flat Washer 5/16	16	
Q	18	Lock Washer 5/16		
R	18	Hex Nut 5/16		
S	18	Rect Washer		
Т	4	Dowel Ø14		
U	18	Screw JP 8x1"		
V	1	Wrench	2-3	

your home


Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.

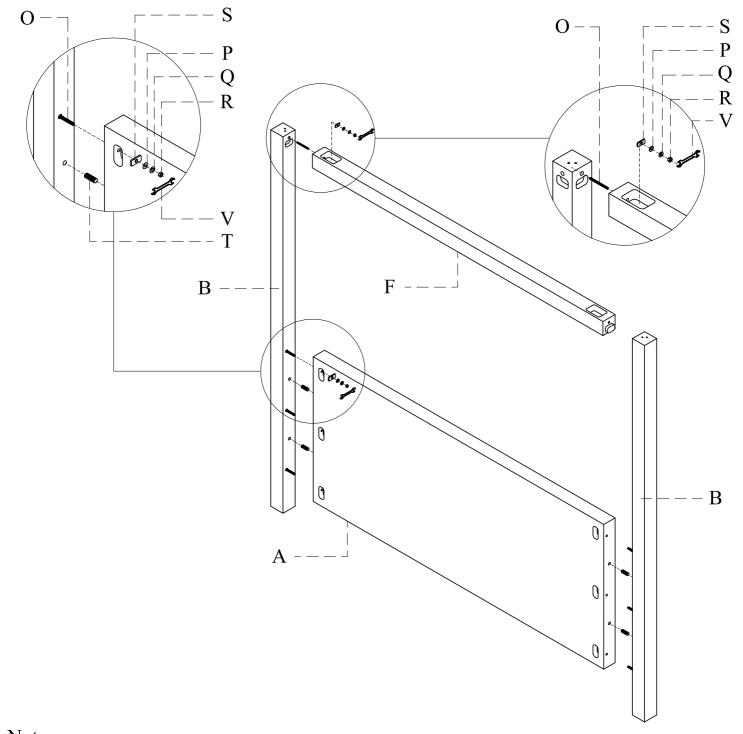

Note: Make sure the componen in flat before tightened


your home

Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.

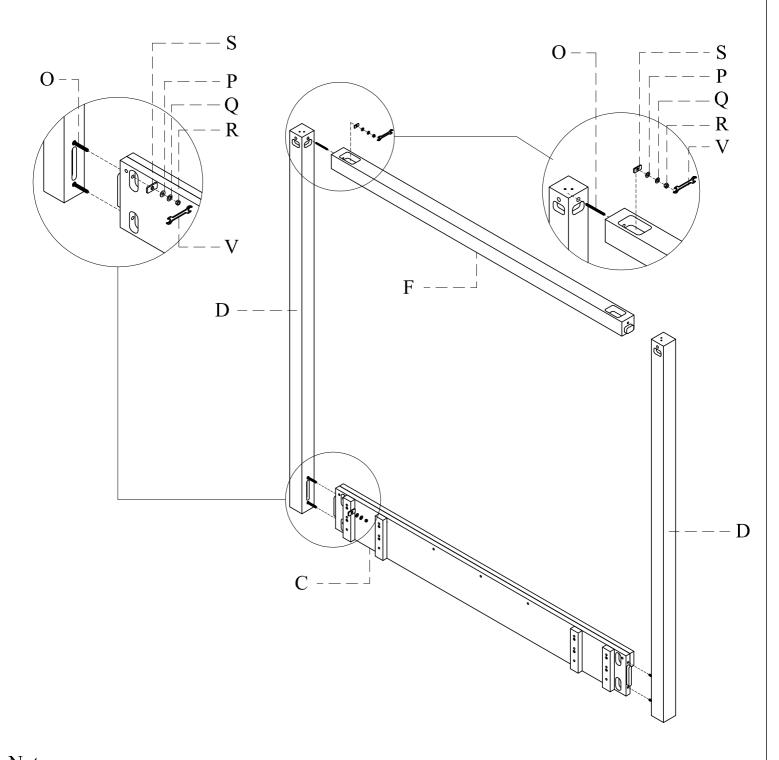


Note: Make sure the componen in flat before tightened

your home

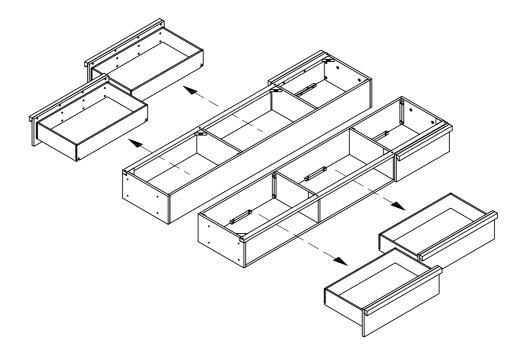


your home

Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.

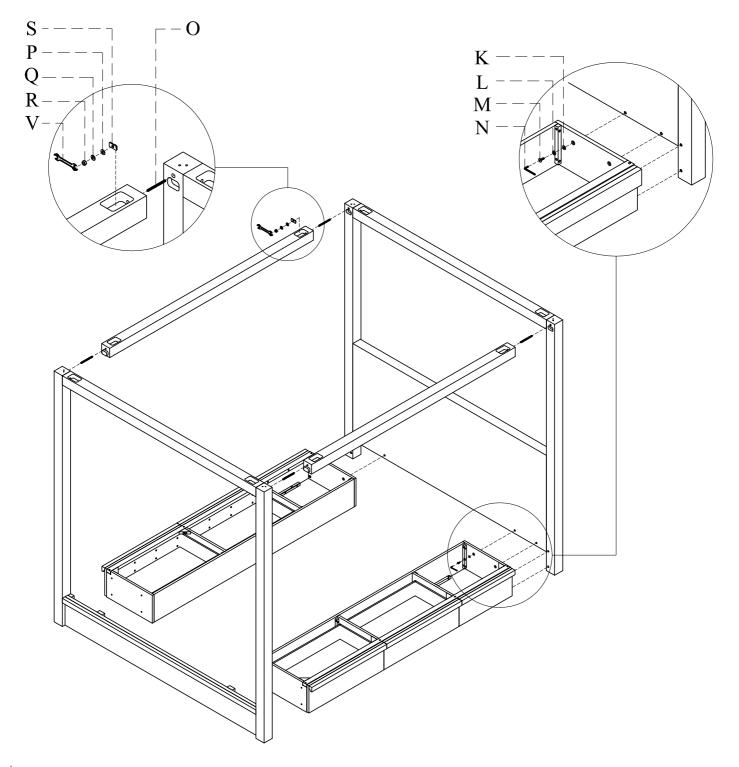


Note: Make sure the componen in flat before tightened


your home

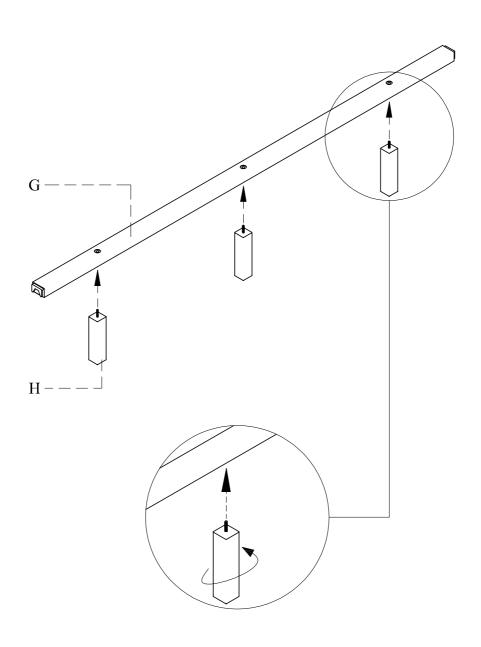


your home

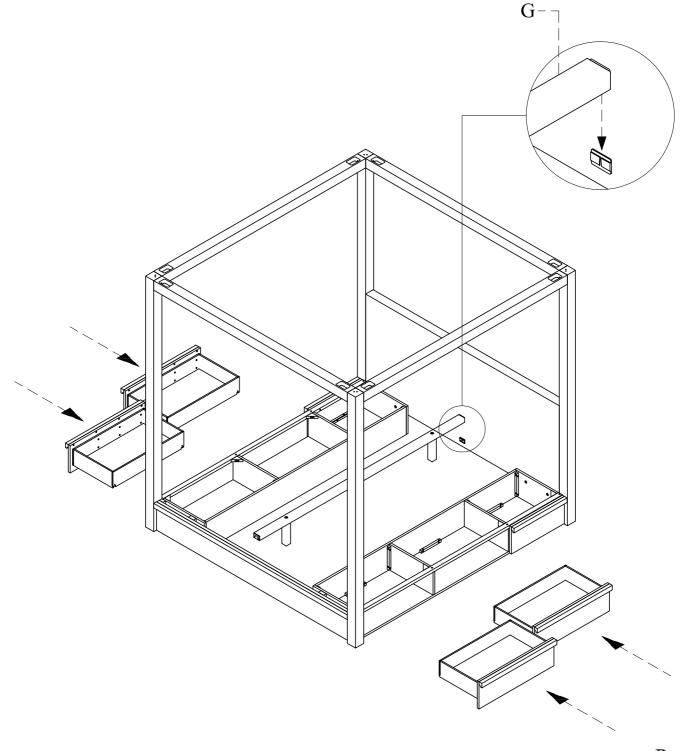

your home

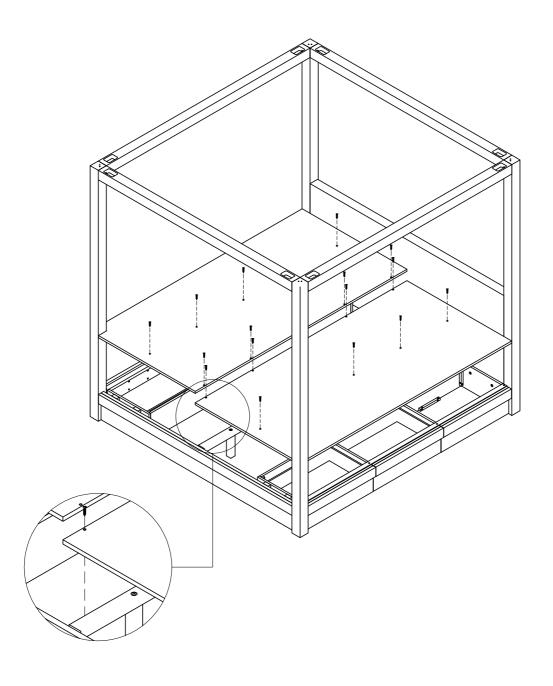

your home

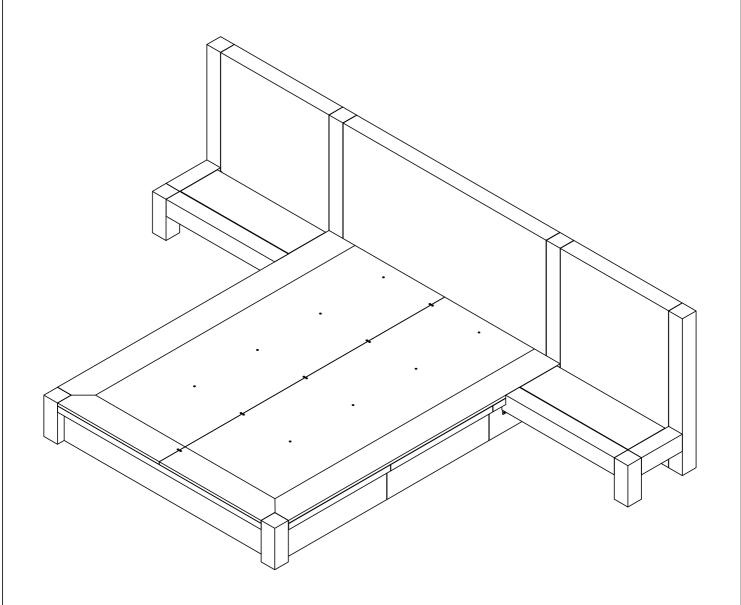

Assembly Instruction
King Headboard Extension Nightstand
Queen Headboard Extension Nightstand

your home

Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.

List Of Part & Hardware Bodhi Queen Headboard Extension Nightstand				
Part	Quantity	Description	Image	
A	1	Headboard Panel		
В	1	Footboard Panel		
С	1	Slat Rail	•	
D	3	Slat Support	€3	
E	2	Side Frame (L&R)		
F	2	Mattress Support Panel (L&R)		
G	2	HB Extension (L&R)		

Page 01 of 13


your home

List Of Part & Hardware Bodhi Queen Headboard Extension Nightstand				
Part	Quantity	Description	Image	
Н	2	Leg Nightstand (L&R)	0 C2	
I	2	Short Frame	:3 C: E:=[7] [7]::3	
J	2	Long Frame with Top Cover (L&R)		
K	2	Base Panel		
L	16	Flat washer 1/4		
M	16	Lock washer 1/4		
N	16	Bolt JCBC (L) Black 1/4"X1-1/2"		
О	1	Allen Wrench or Key		
Р	40	Screw JP 8X1"	(

your home


List Of Part & Hardware Bodhi Queen Headboard Extension Nightstand				
Part	Quantity	Description	Image	
Q	2	Mending Plate (L&R)		
	20	Screw JF 8x1") 	
R	2	Lid Stay		
IX	8	Screw JP 6x5/8"		
S	6	Through Bolt 5/16		
Т	6	Rect Washer		
U	6	Flat Washer 5/16		
V	6	Lock Washer 5/16		
W	6	Hex Nut 5/16		
X	1	Wrench		
Y	6	Dowel Ø14		
Z	20	Dowel Ø6		

your home

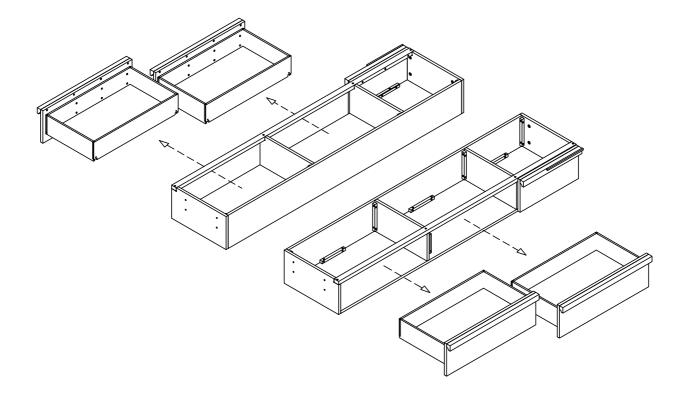


your home

Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.

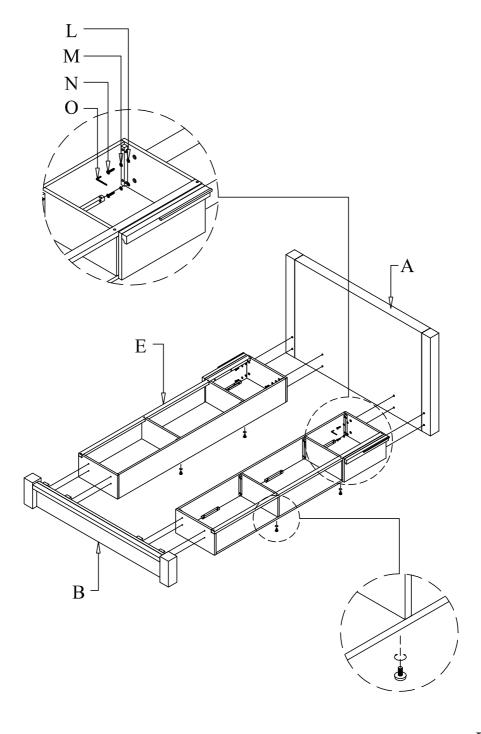


Page 05 of 13

your home

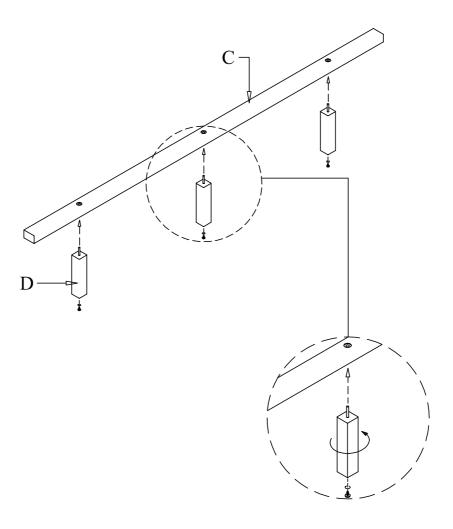


your home

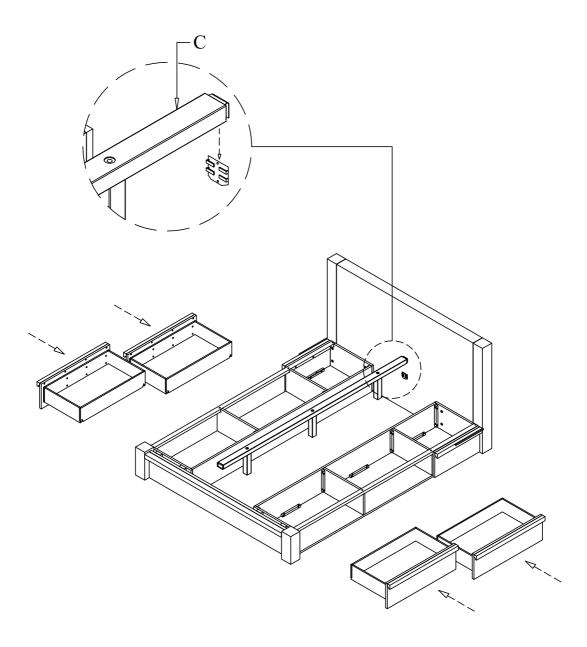

your home


Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.

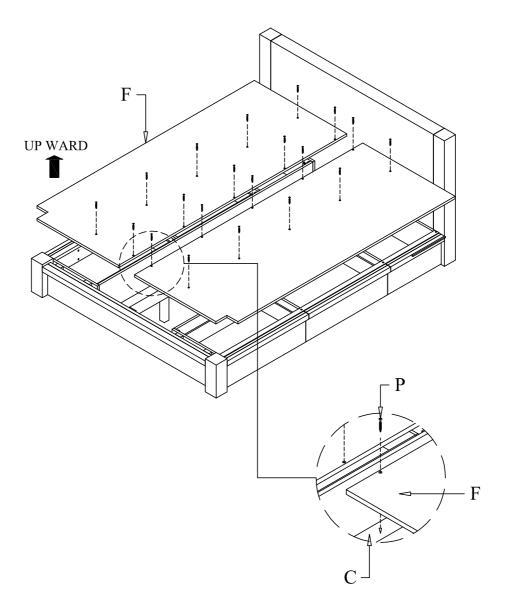

Page 08 of 13


your home


Please read all instructions carefully before starting the assembly process. Some parts are large and heavy and require AT LEAST TWO PEOPLE to assemble, to help prevent possible injury and or damage to the piece.

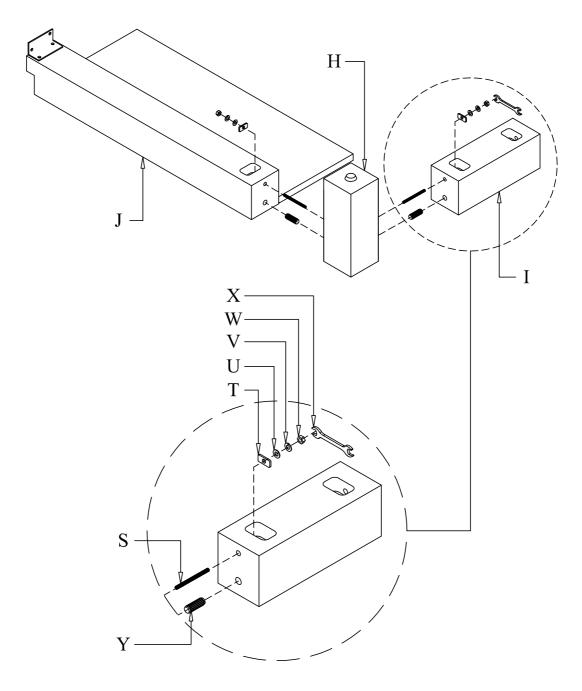


Page 09 of 13

your home

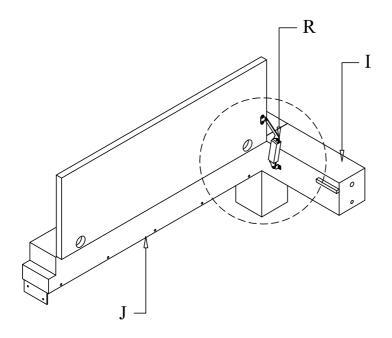


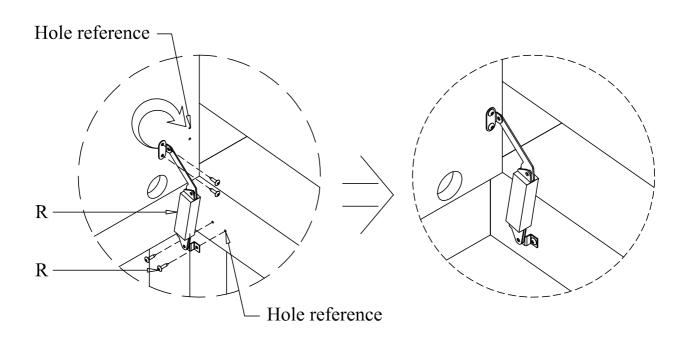


your home

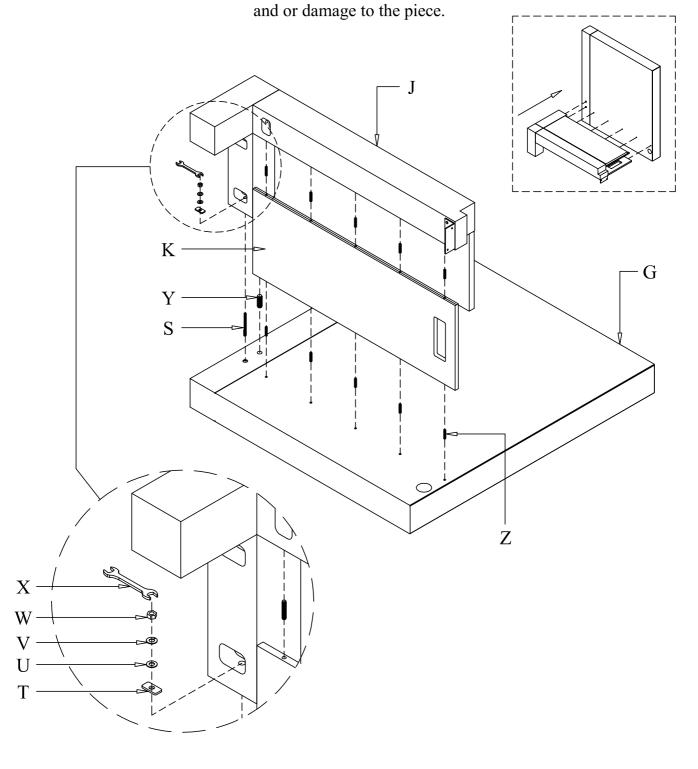

your home

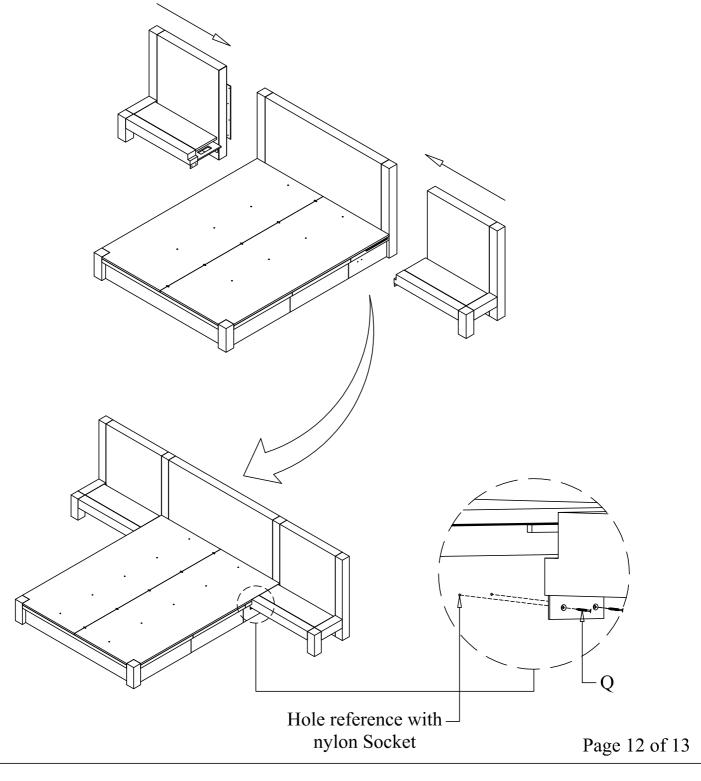

your home

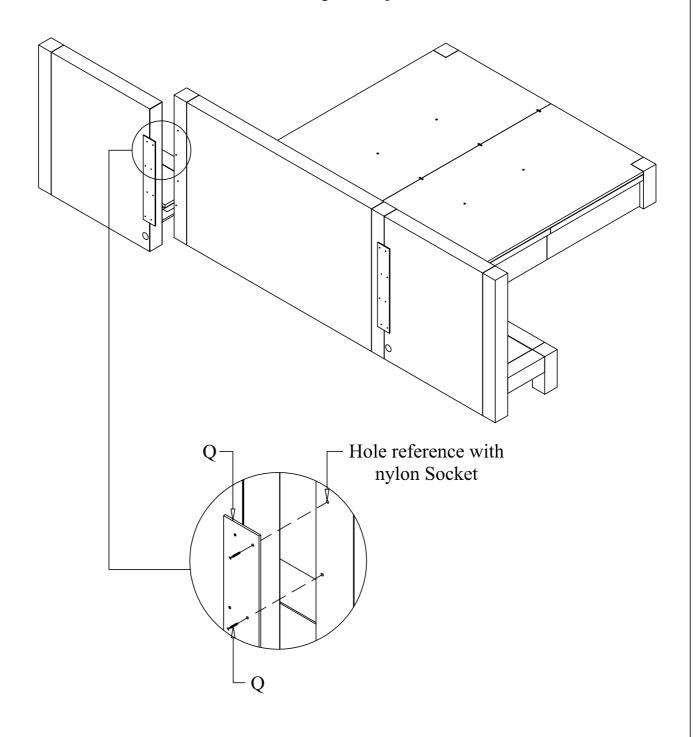

BEDROOM PARTS SKUS

Super Category	Product ID	Description	Stat	Collection
BEDROOM	91BODHCNTRSP	BODHI BED CENTER SUPPORT CENTER SUPPORT SET OF 3	Α	PT-BODHI
BEDROOM	91BODHIDRGLBED	BODHI BED DRAWR GLIDES 1 SET = 2 GLIDES	Α	PT-BODHI
BEDROOM	91BODHIASMHW	BODHI BED HARDWRE KG/QUEEN HARDWARE	Α	PT-BODHI
BEDROOM	91BODHIDRWGL	BODHI CASE PIECES DRAWR GLIDE 1 SET = 2 PCS	Α	PT-BODHI
BEDROOM	91BODHIFTGLD	BODHI CASE PIECES FEET GLIDES 1 SET = 4 PCS	Α	PT-BODHI
BEDROOM	91BODHIHANDLE	BODHI HANDLE + SCREW 1 HANDLE + SCREW	Α	PT-BODHI

BEDROOM COLLECTION | MADE IN INDONESIA



A MODERN CLASSIC

Our Brock Bedroom Collection's understated aesthetic features sleek silhouettes defined by clean lines and deep, hand-stained finishes. Subtle burnished brass hardware elevates Brock's midcentury style, complementing its natural ash wood with sophisticated detailing.





NEED HELP?

Visit a store, call **866.427.4287**, or **live chat** with our Design Team to learn more.

BEDROOM COLLECTION | MADE IN INDONESIA



PRODUCT DETAILS

- Our Brock Collection is handcrafted by Indonesian artisans from solid ash wood and ash veneers.
- Indonesian artisans use wood certified by the Forest Stewardship Council.
- + This collection is artisan-crafted from natural materials with hand-applied finishes. Individual pieces may vary in color, pattern, shape, and texture, making each truly unique.
- Finished wood is stained and sealed by hand to achieve a rich color. A topcoat of clear lacquer provides added protection and a subtle sheen.
- Brass hardware features a brushed finish to complement the wood's dark tones.
- Upholstered surfaces feature complementary fabrics.
- + Jewelry chest features a locking drawer and includes one key.
- Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked into the frame.
- We recommend pairing beds with our Retreat 4" Platform.
- + King Bed interior cavity measures: 77" w x 81.75" d.
- + Queen Bed interior cavity measures: 61" w x 81.75" d.
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.

FABRICS:



Warner Coal



FINISHES:

Dark Twilight



Warner Stone



Boulder Grey



Warner Taupe



Bahasa Brown



Tolliver Cream

$ARHAUS^{\circ}$

BROCK

BEDROOM COLLECTION | MADE IN INDONESIA

45BROCKTKGBD

45BROCKBGKKT

shown in Dark Twilight



Bahasa Brown 45BROCKBBKKT QUEEN POSTER BED

KING POSTER BED 80.75" w x 84" d x 85" h

64.5" w x 84" d x 85" h

Dark Twilight

Boulder Grey

Dark Twilight 45BROCKTQNBD Boulder Grey 45BROCKBGQKT Bahasa Brown 45BROCKBBQKT

additional dimensions

King Bed frame cavity 77" w x 81.75" d Queen Bed frame cavity 61" w x 81.75" d

IMAGE NOT AVAILABLE

UPHOLSTERED KING POSTER BED

80.75" w x 84" d x 85" h

Dark Twilight/Warner Coal
Boulder Grey/Warner Stone
Bahasa Brown/Warner Taupe
Dark Twilight/Tolliver Cream
Boulder Grey/Tolliver Cream
Bahasa Brown/Tolliver Cream
45BRCKKBTKT
45BRCKKTTKT
45BRCKKBTKT
45BRCKKBTKT

UPHOLSTERED QUEEN POSTER BED

64.5" w x 84" d x 85" h

Dark Twilight/Warner Coal
Boulder Grey/Warner Stone
Bahasa Brown/Warner Taupe
Dark Twilight/Tolliver Cream
Boulder Grey/Tolliver Cream
Bahasa Brown/Tolliver Cream
45BRCKQTMKT
45BRCKQTTKT
45BRCKQBTKT



CANE KING POSTER BED

80.75" w x 84" d x 85" h

Dark Twilight 45BRCKTKCNBD Boulder Grey 45BRCKGKCNKT Bahasa Brown 45BRCKBKCKT

CANE QUEEN POSTER BED

64.5" w x 84" d x 85" h

Dark Twilight 45BRCKTQCNKT Boulder Grey 45BRCKGQCNKT Bahasa Brown 45BRCKBBQCNKT

ARHAUS°

BROCK

BEDROOM COLLECTION | MADE IN INDONESIA



GALLERY KING BED

80.75" w x 84" d x 54" h

Dark Twilight 45BRCKTKGLBD Boulder Grey 45BRCKGKGLBD Bahasa Brown 45BRCKKBGLBD

GALLERY QUEEN BED

64.5" w x 84" d x 85" h

Dark Twilight 45BRCKTQGLBD Boulder Grey 45BRCKGQGLBD Bahasa Brown 45BRCKQBGLBD





UPHOLSTERED GALLERY KING BED

80.75" w x 84" d x 54" h

Dark Twilight/Warner Coal 45BRCKKGTWKT Boulder Grey/Warner Stone 45BRCKKGGWKT Bahasa Brown/Warner Taupe 45BRCKKGBWKT Dark Twilight/Tolliver Cream 45BRCKKGTTKT Bahasa Brown/Tolliver Cream 45BRCKKGGTKT 45BRCKKGGTKT

UPHOLSTERED GALLERY QUEEN BED

64.5" w x 84" h x 54" h

Dark Twilight/Warner Coal
Boulder Grey/Warner Stone
Bahasa Brown/Warner Taupe
Dark Twilight/Tolliver Cream
Boulder Grey/Tolliver Cream
Bahasa Brown/Tolliver Cream
45BRCKQGWKT
45BRCKQGTTKT
45BRCKQGTTKT
45BRCKQGTKT

IMAGE NOT AVAILABLE

CANE GALLERY KING BED

80.75" w x 84" d x 54" h

Dark Twilight 45BRKTKGCNKT Boulder Grey 45BRKGKGCNKT Bahasa Brown 45BRKBKGCNKT

CANE GALLERY QUEEN BED

64.5" w x 84" h x 54" h

Dark Twilight 45BRKTQGCNKT Boulder Grey 45BRKGQGCNKT Bahasa Brown 45BRKBQGCNKT

ARHAUS°

BROCK

BEDROOM COLLECTION | MADE IN INDONESIA

shown in Bahasa Brown



WARDROBE

52" w x 20" d x 54" h

Bahasa Brown 45BRCKBBWRD

shown in Dark Twilight



TWO OVER TWO DRESSER

32.5" w x 20" d x 36" h

Dark Twilight 45BROCKT22 Boulder Grey 45BROCKBG22 Bahasa Brown 45BROCKBB22



TWO OVER FOUR TALL DRESSER

42" w x 20" d x 54" h

Dark Twilight 45BROCKT24 Boulder Grey 45BROCKBG24 Bahasa Brown 45BROCKBB24



7-DRAWER WIDE DRESSER

65" w x 20" d x 36" h

Dark Twilight 45BROCKT7DR Boulder Grey 45BROCKBG7DR Bahasa Brown 45BROCKBB7DR

$\underset{\mathrm{your\,home}}{A\,R\,H\,A\,U\,S^{^{\circ}}}$

BROCK

BEDROOM COLLECTION | MADE IN INDONESIA



11-DRAWER DRESSER

65" w x 20" d x 54" h

Dark Twilight 45BRCK11DDT Boulder Grey 45BRCK11DBG Bahasa Brown 45BRCK11DBB



JEWELRY CHEST

20" w x 18" d x 46" h

Dark Twilight 45BRCKJEWLDT Boulder Grey 45BRCKJEWLBG Bahasa Brown 45BRCKJEWLBB





26" NIGHTSTAND

26" w x 18" d x 25" h

Dark Twilight 45BROCKT26NT Boulder Grey 45BRCKBG26NT Bahasa Brown 45BROCKB26NT

32" NIGHTSTAND

32" w x 18" d x 25" h

Dark Twilight 45BROCKT32NT Boulder Grey 45BRCKBG32NT Bahasa Brown 45BROCKB32NT





48.5" BENCH

48.5" w x 18" d x 19" h

Dark Twilight/Tolliver Cream Dark Twilight/Warner Coal Boulder Grey/Tolliver Cream Boulder Grey/Warner Stone Bahasa Brown/Tolliver Cream Bahasa Brown/Warner Taupe 45BRCKTTBNCH 45BRCKTWBNCH 45BRCKGTBNCH 45BRCKGWBNCH 45BRCKBTBNCH 45BRCKBWBNCH


70" BENCH

70" w x 18" d x 19" h
Dark Twilight/Tolliver Cream
Dark Twilight/Warner Coal
Boulder Grey/Tolliver Cream
Boulder Grey/Warner Stone
Bahasa Brown/Tolliver Cream


Bahasa Brown/Warner Taupe

45BRCK70TTBN 45BRCK70TWBN 45BRCK70GTBN 45BRCK70GWBN 45BRCK70BTBN 45BRCK70BWBN

ASSEMBLY INSTRUCTIONS FOR BROCK POSTER BED

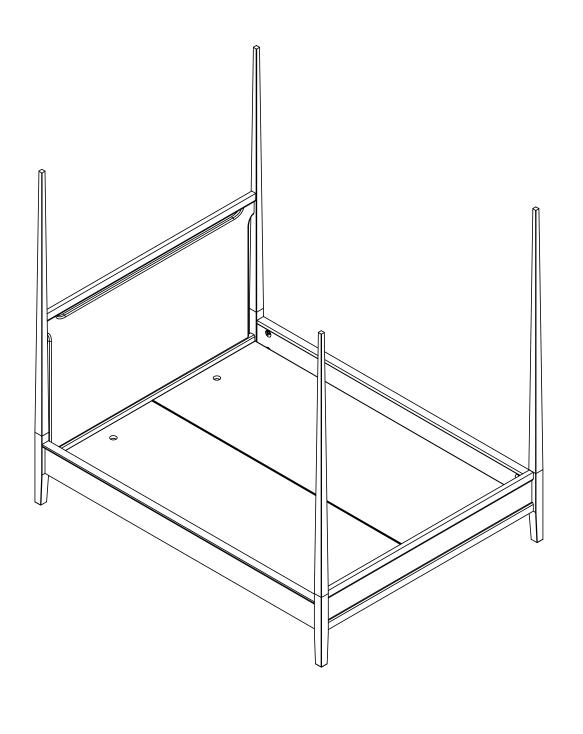

Carefully unpack and familiarize yourself with all parts and diagrams to facilitate the assembly of Brock Poster Bed

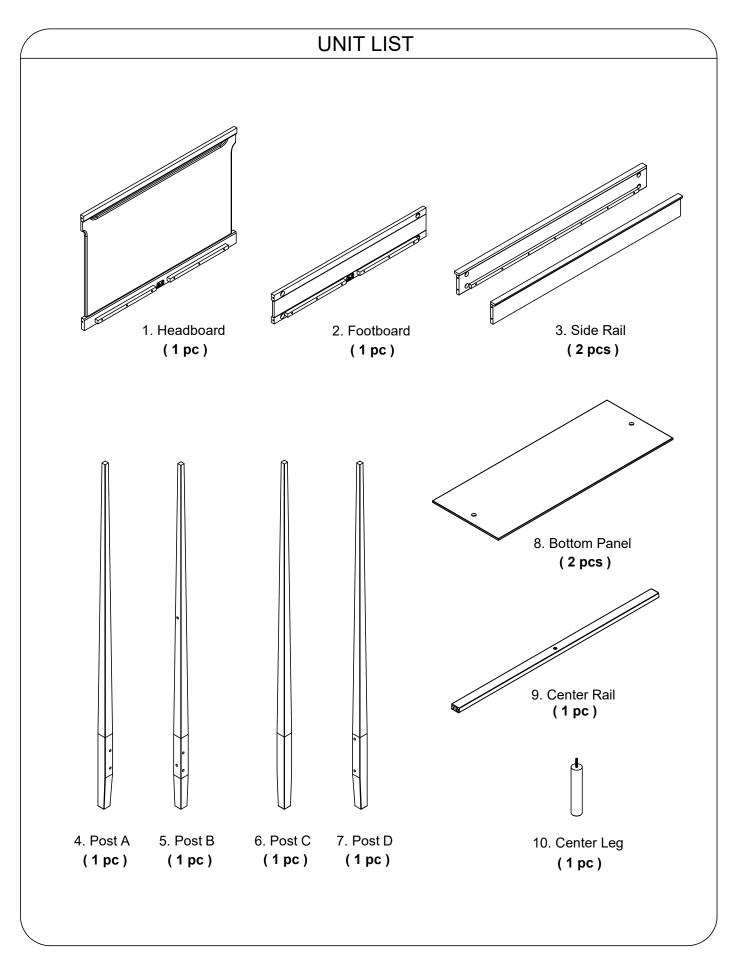

Carefully unpack and familiarize yourself with all parts and diagrams to facilitate the assembly of Brock Poster Bed

HARDWARE



A. Connecting Bolt (16 pcs)



B. Metal Washer (16 pcs)




C. Wrench (2 pcs)

HOW TO ASSEMBLE BROCK POSTER BED (STEP 1)

THIS STEP REQUIRES:

- 1. Headboard (1 set)
- 4. Post A (1 pc)
- 5. Post B (1 pc)

- A. Connecting Bolt (4 pcs)
- B. Metal Washer (4 pcs)
- C. Wrench (1 pc)

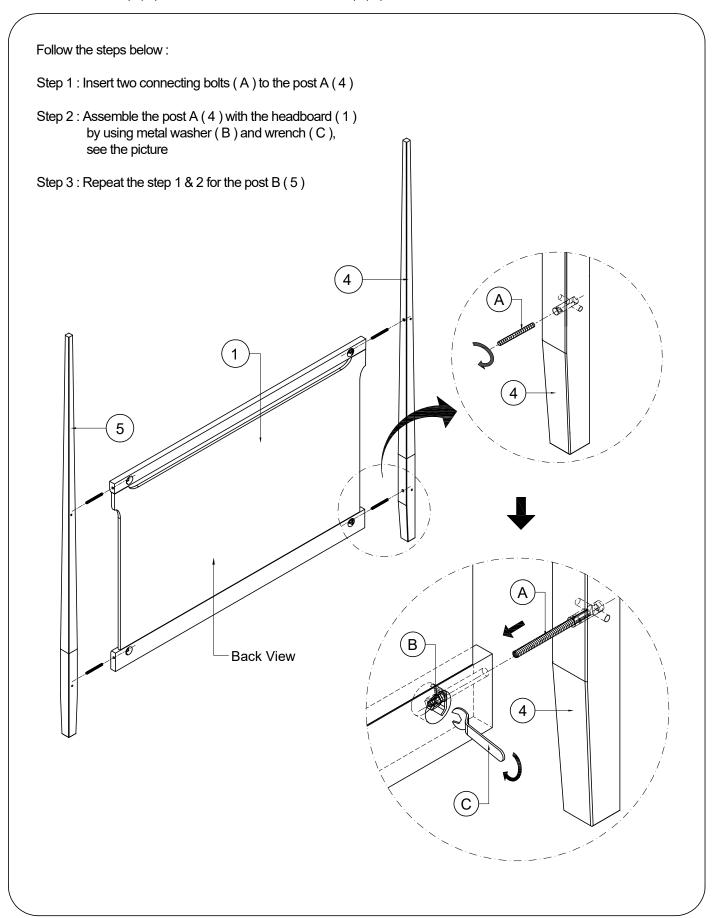


HOW TO ASSEMBLE BROCK POSTER BED (STEP 2)

THIS STEP REQUIRES:

- 1. Footboard (1 set)
- 6. Post C (1 pc)
- 7. Post D (1 pc)


- A. Connecting Bolt (4 pcs)
- B. Metal Washer (4 pcs)
- C. Wrench (1 pc)

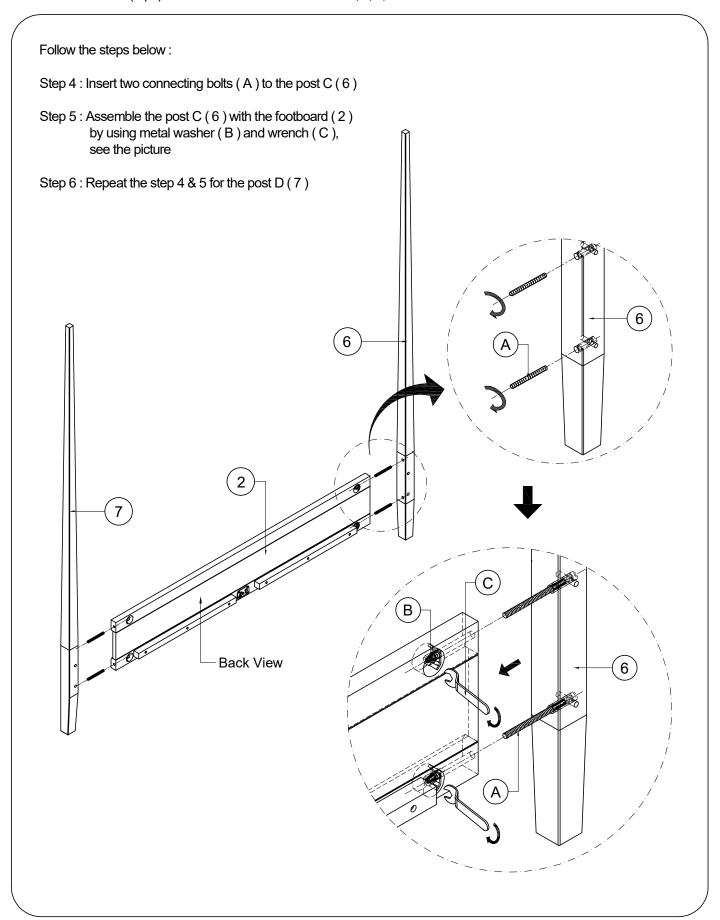

HOW TO ASSEMBLE BROCK POSTER BED (STEP 3)

THIS STEP REQUIRES:


- 3. Side Rail (2 pcs)
- A. Connecting Bolt (8 pcs)
- B. Metal Washer (8 pcs)
- C. Wrench (1 pc)

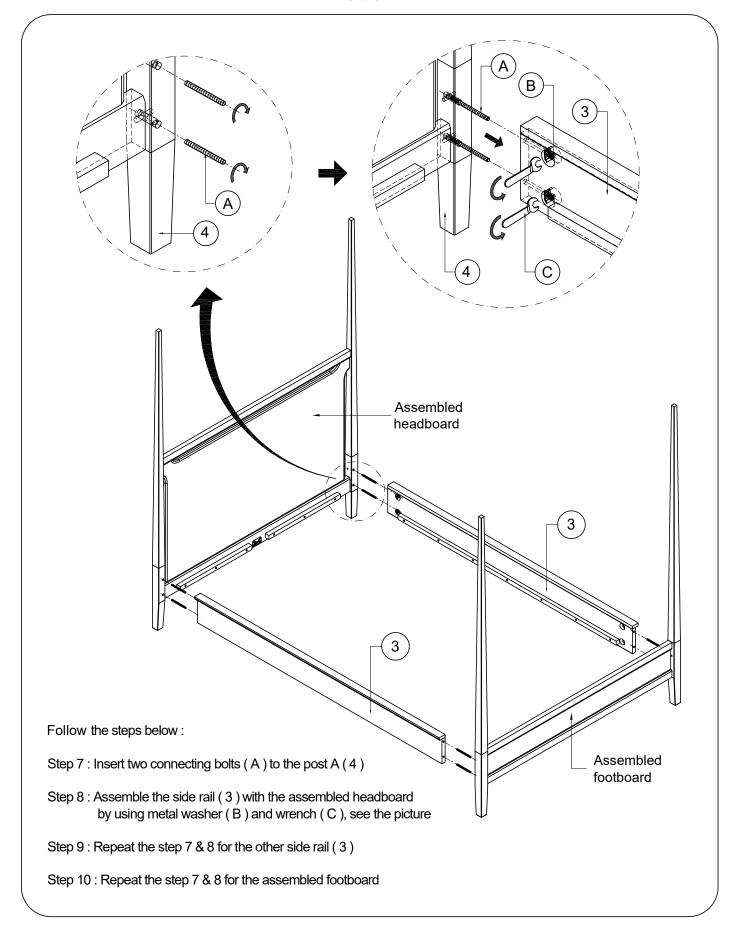

HOW TO ASSEMBLE BROCK POSTER BED (STEP 4)

THIS STEP REQUIRES:


- 9. Center Rail (1 pc)
- 10. Center Leg (1 pc)

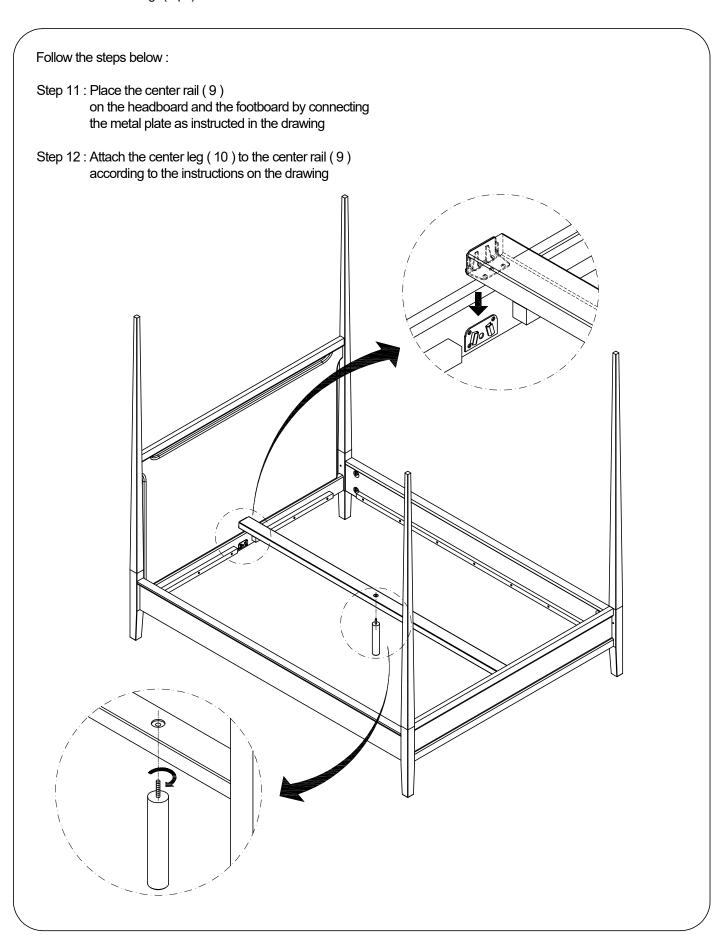


HOW TO ASSEMBLE BROCK POSTER BED (STEP 5)


THIS STEP REQUIRES:

8. Bottom Panel (2 pcs)

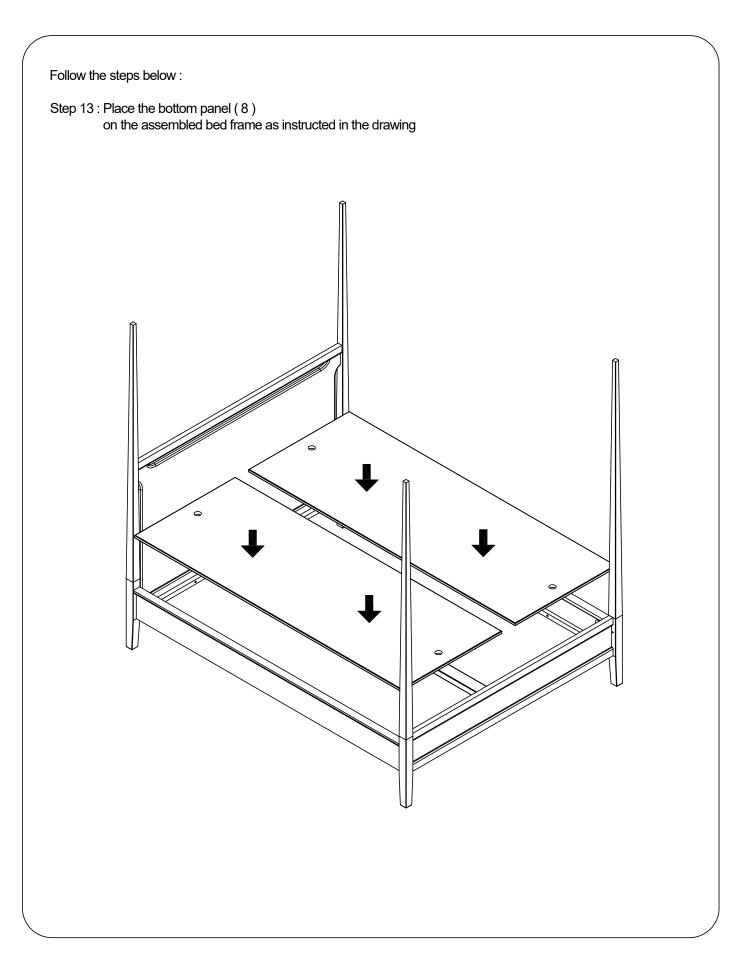


ASSEMBLY INSTRUCTION for BROCK NON POSTER BED

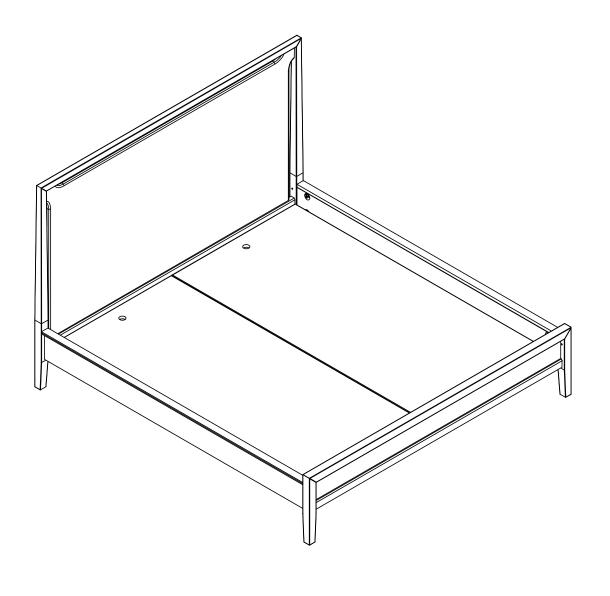

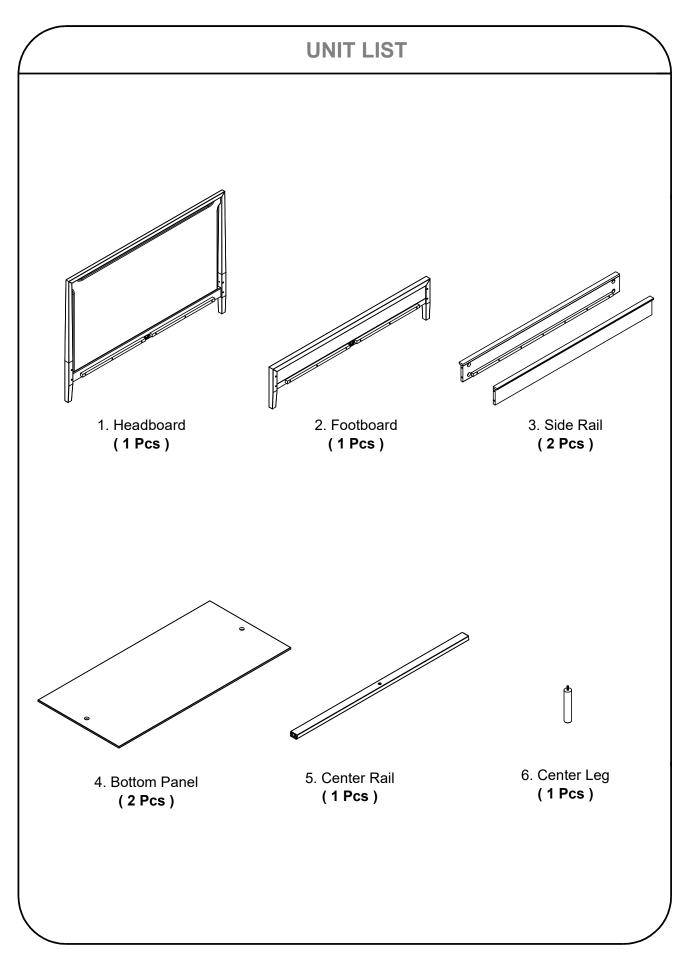


HARDWARE

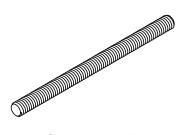

A. Connecting Bolt (8 Pcs)



B. Metal Washer (8 Pcs)




C. Wrench (2 Pcs)

HOW TO ASSEMBLY BROCK NON POSTER BED (STEP 1)

THIS STEP REQUIRES:

- 1. Headboard (1 Set)
- 2. Footboard (1 Set)
- 3. Side Rail (2 Pcs)
- A. Connecting Bolt (8 Pcs)
- B. Metal Washer (8 Pcs)
- C. Wrench (2 Pcs)

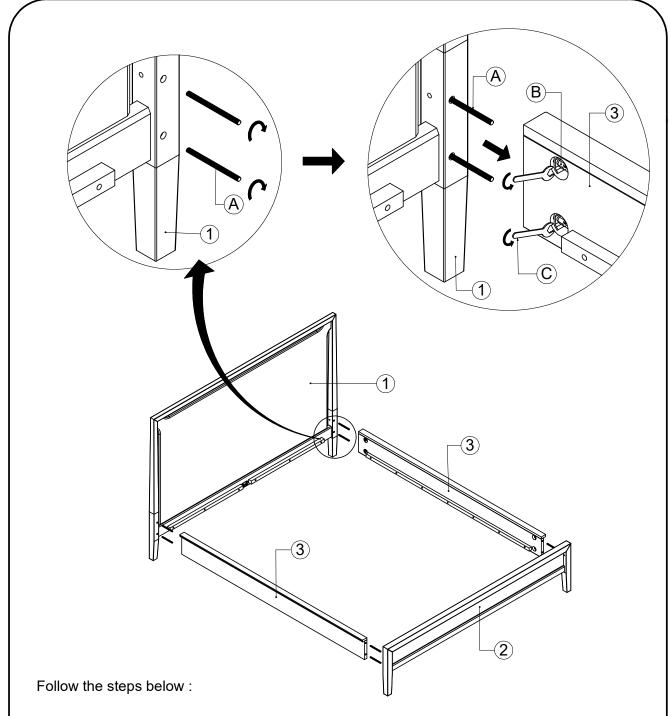


- Step 1: Insert connecting bolts (A) to the Headboard (1)
- Step 2 : Assemble the side rail (3) with the assembled headboard by using metal washer (B) and wrench (C), see the picture
- Step 3 : Repeat the step 1 & 2 for the assembled footboard

HOW TO ASSEMBLY BROCK NON POSTER BED (STEP 2)

THIS STEP REQUIRES:

- 5. Center Rail (1 Pcs)
- 6. Center Leg (1 Pcs)

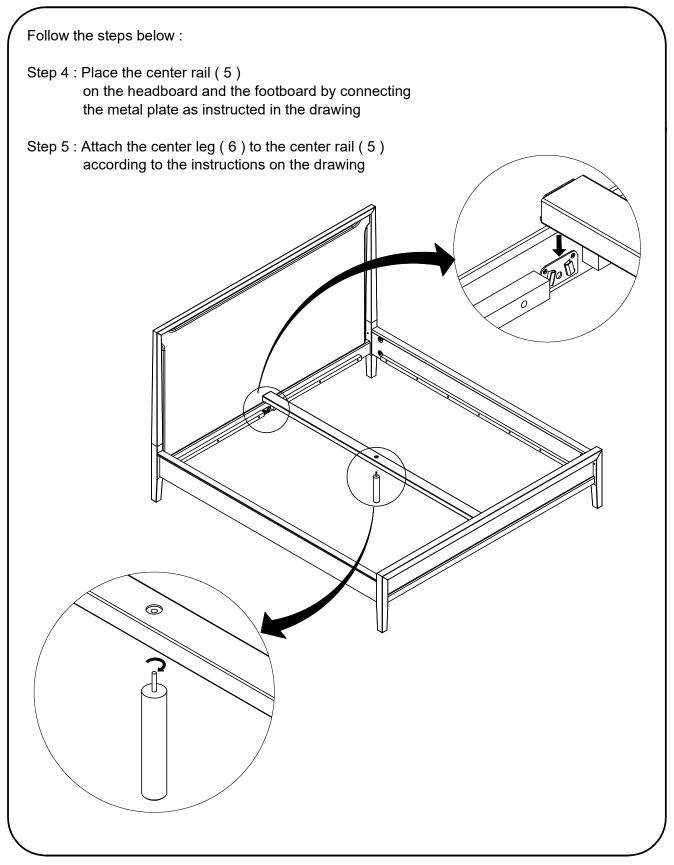


HOW TO ASSEMBLY BROCK NON POSTER BED (STEP 3)

THIS STEP REQUIRES:

4. Bottom Panel (2 Pcs)

Follow the steps below:

Step 6 : Place the bottom panel (4) on the assembled bed frame as instructed in the drawing

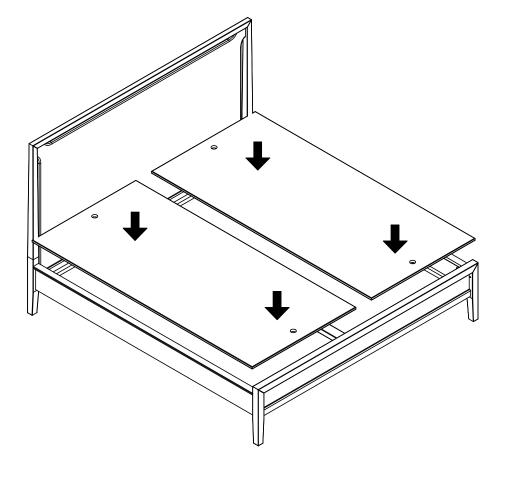

Parts Inventory

Product ID	Description	Stat
91BROCKAHDW	BROCK BED ASSEMBLY HARDWARE BROCK BED ASSEMBLY HARDWARE	A
91BROCKCSLGS	BROCK BED CENTER SUPPORT LEG BROCK BED CENTER SUPPORT LEG	A
91BRCKGLDS	BROCK DRWR GLDS UNDER MOUNTS BEDROOM, WALL, DESK. SET OF 2	A
91BRKGLBDAHW	BROCK GALLERY BED ASSEM HDW BROCK	A
91BRCKHNG	BROCK HINGE BEDROOM, WALL	A
91BRCKKNOB	BROCK KNOB BEDROOM, WALL, DESK	A
91BRCKLVLRS	BROCK LEVELERS BEDROOM, WALL, DESK	А
91BRCKPEGS	BROCK SHELF SUPPORT PEGS BEDROOM, WALL	А

CALISTA

BEDROOM COLLECTION | MADE IN VIETNAM

shown in Georges Snow



SIMPLE SILHOUETTES WITH BEAUTIFUL DETAILS

Featuring clean lines and subtle curves, our Calista Bedroom Collection is all about the small details. Crafted in veneered oak, the frame's rounded corners complement the angled sheltering wings that offer enveloping comfort of sumptuous upholstery.

Simplistic case pieces are equipped with spacious drawers accented by beautiful pewter pulls.





NEED HELP?

Visit a store, call **866.427.4287**, or **live chat** with our Design Team to learn more.

your home

CALISTA

BEDROOM COLLECTION | MADE IN VIETNAM





PRODUCT DETAILS

- + Handcrafted in sustainably sourced veneered oak with hand-applied finishes.
- Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked in.
- + We recommend pairing beds with our Retreat 4" Platform.
- + Finishes are artfully applied by hand.
- + Finished wood surfaces are sealed and lacquered for added protection.
- 4 Queen beds feature a frame cavity measuring 61" w x 80.5" d x 5" h with 6" under-bed clearance.
- King beds feature a frame cavity measuring 77" w x 80.5" d x 5" h with 6" under-bed clearance.
- + Drawers sit on under-mounted soft-close glides and feature pewter hardware to complement the wood's finish.
- + Closed nightstand features three drawers. Each drawer interior measures 23.25" w x 16.75" d x 5" h.
- + Open nightstand features one drawer with an open shelf design for decorative storage. Drawer interior measures 21" w x 16.75" d x 5" h.
- 4 3-Drawer Chest top drawer interior measures 33.75" w x 16.75" d x 7" h. Middle drawer interior measures 33.75" w x 16.75" d x 9.5" h. Bottom drawer interior measures 33.75" w x 16.75" d x 10.25" h.
- + 5-Drawer Tall Dresser drawer interiors measure 30.75" w x 16.75" d x 8.25" h.
- 6-Drawer Dresser drawer interiors measure 33" w x 16.75" d x 7.25" h.
- 11-Drawer Tall Dresser top drawer interior measures 20.75" w x 7.75" d x 16.75" h. Middle drawer interiors measure 30.25" w x 16.75" d x 9.5" h. Bottom drawer interiors measure 30.25" w x 16.75" d x 10" h.
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.

PERFORMANCE FABRIC:



Georges Snow

FINISHES:



Carob



Sand

$ARHAUS^{\circ}$

CALISTA

BEDROOM COLLECTION | MADE IN VIETNAM

shown in Georges Snow/Sand



KING BED

79.5" w x 83.5" d x 50" h

Georges Snow/Carob 45CALISCKGKT Georges Snow/Sand 45CALISSKGKT

QUEEN BED

63.5" w x 83.5" d x 50" h

Georges Snow/Carob 45CALISCQNKT Georges Snow/Sand 45CALISSQNKT

shown in Sand



11-DRAWER DRESSER

68" w x 20" d x 55" h

Carob 45CALISC11DR Sand 45CALISS11DR



6-DRAWER DRESSER



5-DRAWER TALL DRESSER

38" w x 20" d x 50" h Carob 45CALISCTDR

Sand 45CALISSTDR

$\underset{\mathrm{your\,home}}{A\,R\,H\,A\,U\,S^{^{\circ}}}$

CALISTA

BEDROOM COLLECTION | MADE IN VIETNAM

IMAGE NOT AVAILABLE

3-DRAWER CHEST

shown in Sand



28" CLOSED NIGHTSTAND

 $\begin{array}{ll} 28\text{" w x 20" d x 25" h} \\ \text{Carob} & 45\text{CALISCCNT} \\ \text{Sand} & 45\text{CALISSCNT} \end{array}$



28" OPEN NIGHTSTAND

28" w x 20" d x 25" h

Carob 45CALISCONT
Sand 45CALISSONT



CALISTA 3 DRAWER DRESSER

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

PARTS

• [1] Malone Close nightstand

TOOLS NEEDED

- Pencil (Not Included)
- Hand Drill (Not Included)
- Screw Driver (Not Included)

HARDWARE

• Set of Anti-Tip Kit

A.) 	[1] 5/8" Screw
B.) 	[1] 2" Screw
C.	0	[2] Bracket
D.		[1] Restraint Strap


INSTALLATION INSTRUCTIONS


From the desired location, pre-set the unit 16" to 20" from
the wall. Examine the alignment of the drawers to determine
if leveling is necessary. If needed, tilt the dresser slightly and
turn the head of the levelers clockwise to raise the furniture
and counter-clockwise to lower it. Adjust all levelers until the
correct level or flatness is achieved. Repeat adjustment
procedures if necessary, such as after the furniture settles on
rugs or carpeted surfaces. Please see FIGURE 02.

This tip restraint must be attached to a wall stud using the 2" screw enclosed:

- Attach a bracket (C) to the back top rail or back top edge of the furniture using the 5/8" screw (A) provided, through the smaller hole in the brackets.
- Locate the other bracket (C) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw (B) provided, through the smaller hole.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap (D) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
- Confirm that the strap is securely laced and locked. Please see the sketch in Figure 03.

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

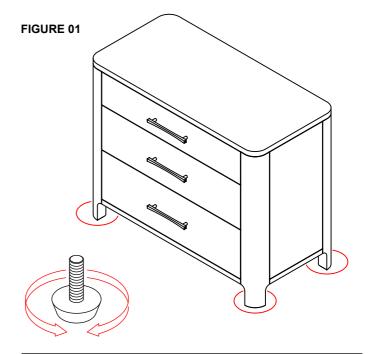

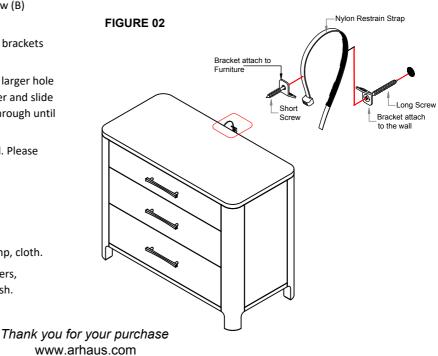



CALISTA 5 DRAWER DRESSER

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

PARTS

• [1] Malone Close nightstand

TOOLS NEEDED

- Pencil (Not Included)
- Hand Drill (Not Included)
- Screw Driver (Not Included)

HARDWARE

• Set of Anti-Tip Kit

A.) 	[1] 5/8" Screw
B.) 	[1] 2" Screw
C.	0	[2] Bracket
D.		[1] Restraint Strap


INSTALLATION INSTRUCTIONS


1. From the desired location, pre-set the unit 16" to 20" from the wall. Examine the alignment of the drawers to determine if leveling is necessary. If needed, tilt the dresser slightly and turn the head of the levelers clockwise to raise the furniture and counter-clockwise to lower it. Adjust all levelers until the correct level or flatness is achieved. Repeat adjustment procedures if necessary, such as after the furniture settles on rugs or carpeted surfaces. Please see FIGURE 02.

This tip restraint must be attached to a wall stud using the 2" screw enclosed:

- Attach a bracket (C) to the back top rail or back top edge of the furniture using the 5/8" screw (A) provided, through the smaller hole in the brackets.
- Locate the other bracket (C) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw (B) provided, through the smaller hole.
- 4. Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap (D) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
- Confirm that the strap is securely laced and locked. Please see the sketch in Figure 03.

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

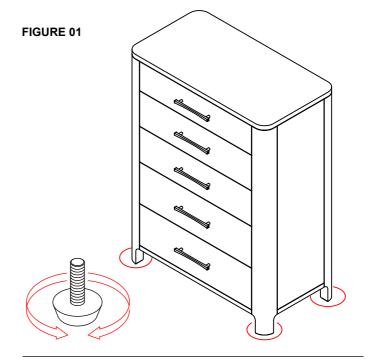

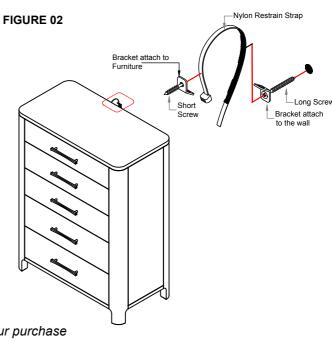



CALISTA 6 DRAWER DRESSER

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

PARTS

- [1] Malone 6 Drawer Dresser
- Leg

TOOLS NEEDED

- Pencil (Not Included)
- Hand Drill (Not Included)
- Screw Driver (Not Included)

HARDWARE

Set of Anti-Tip Kit

A.) 	[1] 5/8" Screw
B.) 	[1] 2" Screw
C.	0	[2] Bracket
D.		[1] Restraint Strap


INSTALLATION INSTRUCTIONS


- Gently laid the dresser on its back and install the leg in the middle as shown in FIGURE 01.
- 2. From the desired location, pre-set the unit 16" to 20" from the wall. Examine the alignment of the drawers to determine if leveling is necessary. If needed, tilt the dresser slightly and turn the head of the levelers clockwise to raise the furniture and counter-clockwise to lower it. Adjust all levelers until the correct level or flatness is achieved. Repeat adjustment procedures if necessary, such as after the furniture settles on rugs or carpeted surfaces. Please see FIGURE 02.


This tip restraint must be attached to a wall stud using the 2" screw enclosed:

- Attach a bracket (C) to the back top rail or back top edge of the furniture using the 5/8" screw (A) provided, through the smaller hole in the brackets.
- Locate the other bracket (C) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw (B) provided, through the smaller hole.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap (D) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
- Confirm that the strap is securely laced and locked. Please see the sketch in Figure 03.

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

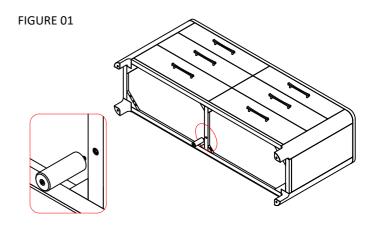

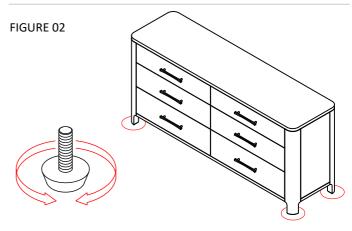

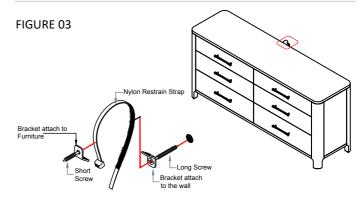



CALISTA 11 DRAWER DRESSER

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These case parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

PARTS

- [1] Malone 6 Drawer Dresser
- Leg

TOOLS NEEDED

- Pencil (Not Included)
- Hand Drill (Not Included)
- Screw Driver (Not Included)

HARDWARE

Set of Anti-Tip Kit

A.) 	[1] 5/8" Screw
В.) 	[1] 2" Screw
C.	0	[2] Bracket
D.		[1] Restraint Strap


INSTALLATION INSTRUCTIONS


- Gently laid the dresser on its back and install the leg in the middle as shown in FIGURE 01.
- 2. From the desired location, pre-set the unit 16" to 20" from the wall. Examine the alignment of the drawers to determine if leveling is necessary. If needed, tilt the dresser slightly and turn the head of the levelers clockwise to raise the furniture and counter-clockwise to lower it. Adjust all levelers until the correct level or flatness is achieved. Repeat adjustment procedures if necessary, such as after the furniture settles on rugs or carpeted surfaces. Please see FIGURE 02.


This tip restraint must be attached to a wall stud using the 2" screw enclosed:

- Attach a bracket (C) to the back top rail or back top edge of the furniture using the 5/8" screw (A) provided, through the smaller hole in the brackets.
- Locate the other bracket (C) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw (B) provided, through the smaller hole.
- 5. Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap (D) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
- Confirm that the strap is securely laced and locked. Please see the sketch in Figure 03.

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

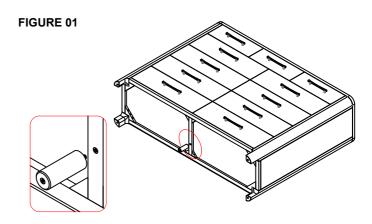

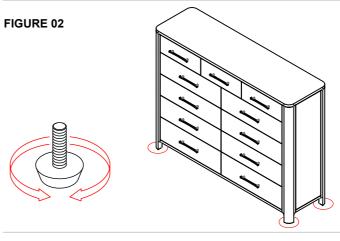

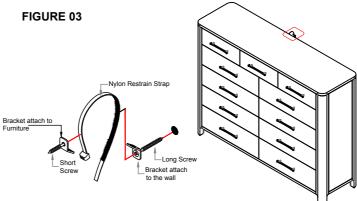



CALISTA CLOSED NIGHTSTAND

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

 $extstyle egin{aligned} extstyle egin{aligned} extstyle L & extst$ recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

PARTS

[1] Malone Close nightstand

TOOLS NEEDED

- Pencil (Not Included)
- Hand Drill (Not Included)
- Screw Driver (Not Included)

HARDWARE

Set of Anti-Tip Kit

A.) 	[1] 5/8" Screw
B.) 	[1] 2" Screw
C.	0	[2] Bracket
D.		[1] Restraint Strap


INSTALLATION INSTRUCTIONS


From the desired location, pre-set the unit 16" to 20" from the wall. Examine the alignment of the drawers to determine if leveling is necessary. If needed, tilt the dresser slightly and turn the head of the levelers clockwise to raise the furniture and counter-clockwise to lower it. Adjust all levelers until the correct level or flatness is achieved. Repeat adjustment procedures if necessary, such as after the furniture settles on rugs or carpeted surfaces. Please see FIGURE 02.

This tip restraint must be attached to a wall stud using the 2" screw enclosed:

- Attach a bracket (C) to the back top rail or back top edge of the furniture using the 5/8" screw (A) provided, through the smaller hole in the brackets.
- Locate the other bracket (C) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw (B) provided, through the smaller hole.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap (D) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
- Confirm that the strap is securely laced and locked. Please see the sketch in Figure 03.

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

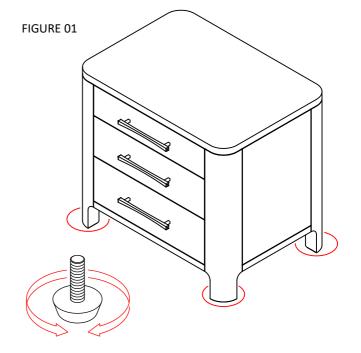

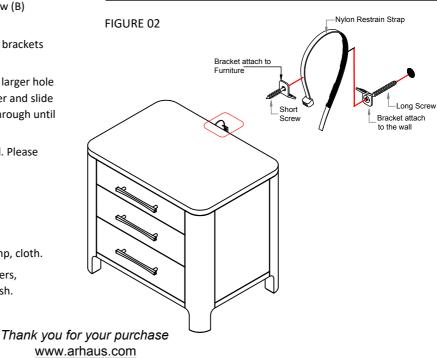

CALISTA KING BED

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These bed parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the bed are not damaged during the assembly process.

PARTS INCLUDED

A. [1] HEADBOARD

B. [1] FOOTBOARD

C. [2] SIDE RAILS


D. [9] BED SLATS

E. [2] SUPPORT SLAT

F. [2] LEG

TOOLS NEEDED

- OPEN WRENCH
- SCREW DRIVER (NOT INCLUDED)

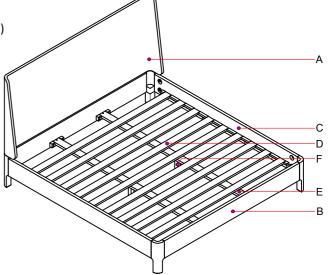


HARDWARE LIST

NO.	ITEM	DESCRIPTION	QTY.
1		SCREWS	4 PCS
2		THREADED ROD M8X100	8 PCS
3		HEX NUT	8 PCS
4	0	LOCK WASHER M8	8 PCS
5	<u></u>	WASHER M8	8 PCS
6	6	CURVED SLOTTED WASHER	8 PCS

ASSEMBLY INSTRUCTIONS

- Place the Headboard upright in the desired position.
 Secure the Threaded Rod (2) to the fixed nut in the
 Headboard (A) by simply turning it manually. Raise the
 Side Rail (C) and set the Threaded Rod (2) to align with
 the boreholes on the end of the Side Rails (C). Put the
 Side Rails (C) up against the Headboard (A) so the
 Threaded Rod (2) goes through the borehole. Insert
 Curved Slotted Washer (5) and Lock Washer (4), then
 engage Hex Nuts (3) on Threaded Rod (2) and tighten
 the Hex Nuts (3) with Open Wrench. See FIGURE 01.
- Repeat the above procedure with the other Side Rail (C) to attach it to the Headboard (A), and then repeat to connect Side Rails (C) to the Footboard (B).

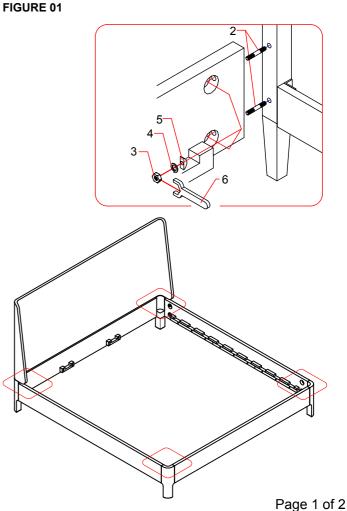

CALISTA KING BED

3. At the middle part of the Support Slats (E), there is a hole with T-nuts pre-installed designed to hold the Leg (F). Align and install the Legs (F) on the Supports Slats (E) as shown in sketch FIGURE 02 -A.

After installing the Legs (F), Position and secure the Supports Slats (E) into the wooden brackets of both Headboard and Footboard with screw (1). Please see FIGURE 02 - B.

4. On the inside surface of both Side Rails (C), there is a cleat designed to hold individual Bed Slat (D). Set the individual Bed Slat (D) on the cavities as shown in FIGURE 03.


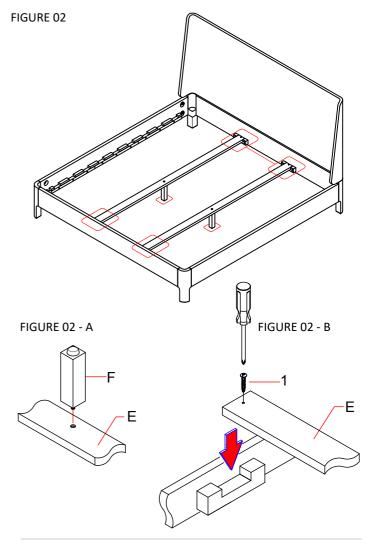


FIGURE 03

www.arhaus.com

- Hardware may loosen over time, periodically check that all connections are tight and secure and tighten them if necessary.
- Wipe with a soft, dry cloth, to protect the finish and avoid the use of all chemicals or any household cleaners or spray



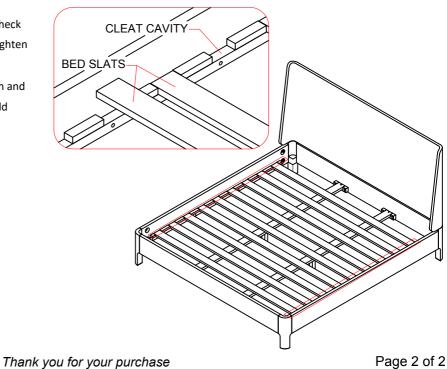

CALISTA OPEN NIGHTSTAND

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

 $extstyle egin{aligned} extstyle egin{aligned} extstyle L & extst$ recommended in order to prevent personal injury and ensure the case are not damaged during the assembly process.

PARTS

[1] Malone Close nightstand

TOOLS NEEDED

- Pencil (Not Included)
- Hand Drill (Not Included)
- Screw Driver (Not Included)

HARDWARE

Set of Anti-Tip Kit

A.) 	[1] 5/8" Screw
B.) 	[1] 2" Screw
C.	0	[2] Bracket
D.		[1] Restraint Strap


INSTALLATION INSTRUCTIONS


From the desired location, pre-set the unit 16" to 20" from the wall. Examine the alignment of the drawers to determine if leveling is necessary. If needed, tilt the dresser slightly and turn the head of the levelers clockwise to raise the furniture and counter-clockwise to lower it. Adjust all levelers until the correct level or flatness is achieved. Repeat adjustment procedures if necessary, such as after the furniture settles on rugs or carpeted surfaces. Please see FIGURE 02.

This tip restraint must be attached to a wall stud using the 2" screw enclosed:

- Attach a bracket (C) to the back top rail or back top edge of the furniture using the 5/8" screw (A) provided, through the smaller hole in the brackets.
- Locate the other bracket (C) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw (B) provided, through the smaller hole.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap (D) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
- Confirm that the strap is securely laced and locked. Please see the sketch in Figure 03.

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

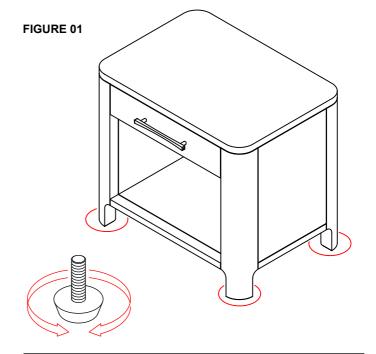

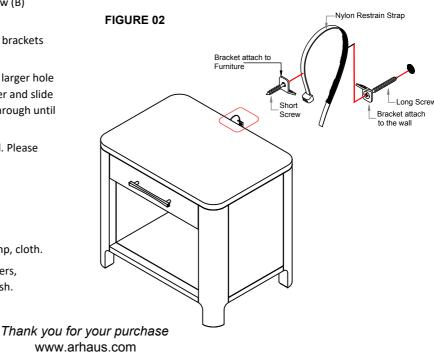

CALISTA QUEEN BED

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

WARNING: These bed parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the bed are not damaged during the assembly process.

PARTS INCLUDED

A. [1] HEADBOARD

B. [1] FOOTBOARD

C. [2] SIDE RAILS

D. [9] BED SLATS

E. [2] SUPPORT SLAT

F. [2] LEG

TOOLS NEEDED


- **OPEN WRENCH**
- SCREW DRIVER (NOT INCLUDED)

HARDWARE LIST

NO.	ITEM	DESCRIPTION	QTY.
1	-	SCREWS	2 PCS
2		THREADED ROD M8X100	8 PCS
3		HEX NUT	8 PCS
4	0	LOCK WASHER M8	8 PCS
5	<u></u>	WASHER M8	8 PCS
6	6	CURVED SLOTTED WASHER	8 PCS

ASSEMBLY INSTRUCTIONS

- 1. Place the Headboard upright in the desired position. Secure the Threaded Rod (2) to the fixed nut in the Headboard (A) by simply turning it manually. Raise the Side Rail (C) and set the Threaded Rod (2) to align with the boreholes on the end of the Side Rails (C). Put the Side Rails (C) up against the Headboard (A) so the Threaded Rod (2) goes through the borehole. Insert Curved Slotted Washer (5) and Lock Washer (4), then engage Hex Nuts (3) on Threaded Rod (2) and tighten the Hex Nuts (3) with Open Wrench. See FIGURE 01.
- 2. Repeat the above procedure with the other Side Rail (C) to attach it to the Headboard (A), and then repeat to connect Side Rails (C) to the Footboard (B).

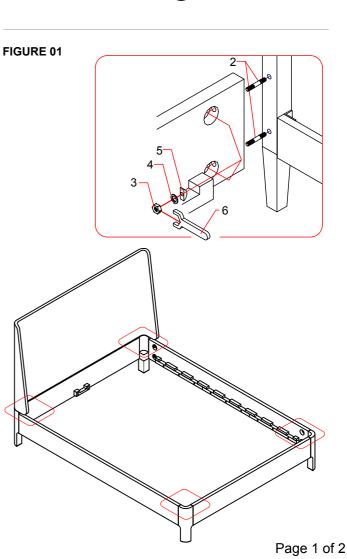

CALISTA QUEEN BED

 At the middle part of the Support Slats (E), there is a hole with T-nuts pre-installed designed to hold the Leg (F). Align and install the Legs (F) on the Supports Slats (E) as shown in sketch FIGURE 02 -A.

After installing the Legs (F), Position and secure the Supports Slats (E) into the wooden brackets of both Headboard and Footboard with screw (1). Please see FIGURE 02 - B.

On the inside surface of both Side Rails (C), there is
a cleat designed to hold individual Bed Slat (D). Set
the individual Bed Slat (D) on the cavities as shown
in FIGURE 03.

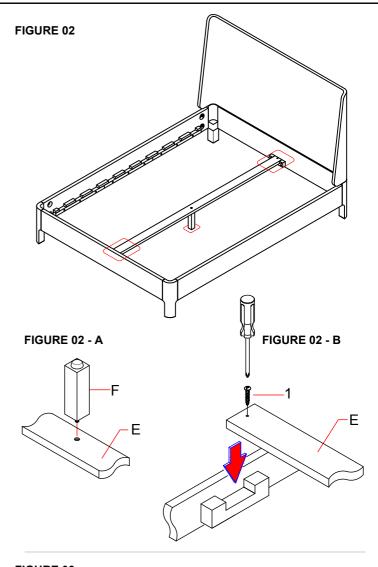


FIGURE 03

CLEAT CAVITY BED SLATS

Thank you for your purchase Page 2 of 2 www.arhaus.com

- Hardware may loosen over time, periodically check that all connections are tight and secure and tighten them if necessary.
- Wipe with a soft, dry cloth, to protect the finish and avoid the use of all chemicals or any household cleaners or spray

your home

celeste



4-Drawer Dresser 56" w x 24" d x 43.75" h 45CEL4DR



8-Drawer Dresser 68" w x 24" d x 43.75" h 45CEL8DR



3-Drawer Bedside Table 30.75" w x 19" d x 30.5" h 45CELBT

your style your way

Our Design Consultants can help you craft a custom design with hundreds of options to choose from. Ask in store or call **866.427.4287**

designed by our long-time Italian artisan,

our Celeste Collection is named for the color blue—like the sky, the same color as our artisan's eyes and those of his daughters who work with him. Handcrafted from solid tulip wood and finished with impeccable care, these elegant pieces are timelessly styled with sculpted moulding, antique brass drawer pulls, and an exclusive, 21-step finishing process—which has only been taught to three other men, in order to continue the legacy of this time-honored tradition of craftsmanship.

product details

- Case frames, tops, and drawer fronts are made from solid tulip wood; while case sides are crafted from veneers for a smooth surface.
- ▶ Exclusive finish are crafted over an extensive 21-step process. Bases feature our Cielo finish, while tops feature our Notturno finish.
- ➤ All pieces of our Celeste collection are also available in any of our beautiful Italian finishes by special order.
- Finished surfaces are coated with a soft layer of lacquer for added protection and a subtle satin sheen.
- ▶ All joints are doubly reinforced with a mortise-and-tenon construction and corner-blocks to guarantee years of structural reliability.
- Drawers are durable constructed using dovetail joinery and sit on wood glides.
- ► All drawers are complemented with antique brass pulls and lined in a hand-distressed paper with Florentine Lily motif..
- Due to the nature of handcrafted construction and finishing, each piece features a distinct "fingerprint"—making each truly one-of-a-kind.







Dimensions may vary slightly. Please ensure furnishings fit through interior structures and into desired space before purchase.

Parts Inventory

Super Category	Product ID	Description	Stat	Collection
BEDROOM	911679CELHND	CELESTE HANDLE 5 PCS HANDLE FOR CELESTE CASE PCS	Α	PT-CELESTE
BEDROOM	911679CELKNB	CELESTE KNOB	Α	PT-CELESTE

ARHAUS your home

chambers







Bench

60" w x 20" d x 19" h

Tufted

Dasher Ash/Fossil

Non-tufted

Dasher Ash/Fossil Matisse Tuxedo/Wenge

Biscuit-tufted

Dansby Pewter/Fossil

45CHAMBT

45CHAMBNT X0CFBNJ*

45CHAMBB

Fabrics:



Dasher Ash Dansby Pewter



Matisse

Finishes:



Fossil



Wenge*

your style your way

Craft a custom design that tells your style story. This collection is available in special-order:

Fabrics, Leathers, and Finishes Ask in store or call 866.427.4287


*available by special order

ease into your day.


Our Chambers bench is functional design at its best. A comfortable, durable upholstered bench perfect for a bedroom or entryway. Have a seat while you slip on your shoes and use the matching, removable tray to store everyday items. Or, show someone you care by using the tray to serve breakfast in bed. This piece can be customized in an array of fabrics and leathers to complement your space.

product details

- ► Craftsman-built frames are constructed using solid, reinforced, laminate hardwood for lasting strength and superior stability.
- Made in America—this collection was handcrafted by upholstery artisans in North Carolina.



- Removable trays provide added surface area and serving space.
- Bench legs, shelves, and trays are handcrafted from solid maple wood.
- Seats are sustained by a flexible network of durable, interwoven nylon webbing designed for evenly dispersed support and hours of comfort.



- Seat cushions are padded with poly-fiber to create a relaxing "sink-into"
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.







Dimensions may vary slightly. Please ensure furnishings fit through interior structures and into desired space before purchase.



KING BED

95.5" w x 99.5" d x 36.25" h Nomad Snow 45COBNSKBKT

QUEEN BED

79.75" w x 99.5" d x 36.25" h Nomad Snow 45COBNSQBKT

Let our breezy, easy-to-style Coburn Bedroom Collection complete your space with a hint of modern flair.

Crafted from solid poplar and pine wood framing, Coburn is low maintenance yet durable, featuring sustainably certified Crypton® Nomad Snow Performance Fabric with moisture-resistant technology in every fiber.

PRODUCT DETAILS

- Craftsman-built frames are constructed using solid poplar and pine wood for lasting strength and stability.
- Our sustainably certified Crypton® Performance Fabrics are easy to clean, soft, and durable—engineered with stain-, odor-, and moisture-resistant technology in every fiber.
- Upholstered frames contain dense, fire-retardant foam to create a luxurious, plush backdrop.
- + Box spring not required.
- Frames include space to accommodate variances in mattress sizes and allow bedding to be tucked in.
- + Queen Bed weighs 183 lbs.; inner frame cavity measures 61" w x 80.75" d.
- + King Bed weighs 234 lbs.; inner frame cavity measures 77" w x 80.75" d.
- Weight limit is 924 lbs.
- + Clearance under bed is 1.3". From floor to top of slats measures 11.4".
- + Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.

FABRIC:




Crypton® Nomad Snow


NEED HELP?


Visit a store, call **866.427.4287**, or **live chat** with our Design Team to learn more.

your home

COBURN KING BED

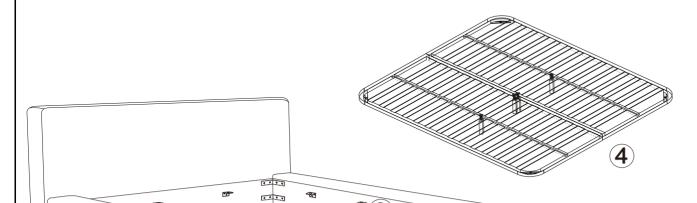

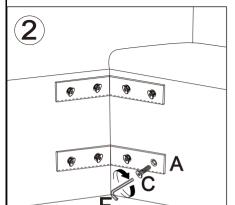

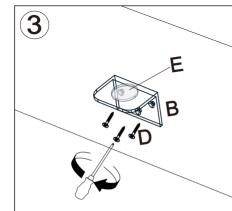



Assembly Instruction


No.	Quantity	A	Accessory
A	8	0 0 0 0	Metal Support A
В	12		Metal Support B
С	32	9	Screw 8×25mm
D	36	3)	Screw 5×40mm
Е	12		Gasket 33mm
F	1		Allen Wrench 5mm
G	8	<u></u>	Plastic Foot 3.35cm
Н	4		Center Leg 22cm
Steps		Please refer follow	wing procedures
1	Istall plastic foot G to headboard, siderails, and footboard.		
2	Install metal support A with screw C to fix headboard siderails, and footboard.		
3	Fix metal support B with screw D and stick Gasket E.		
4	Install H le	eg on slat and put	the slat on the bed.

your home

COBURN QUEEN BED

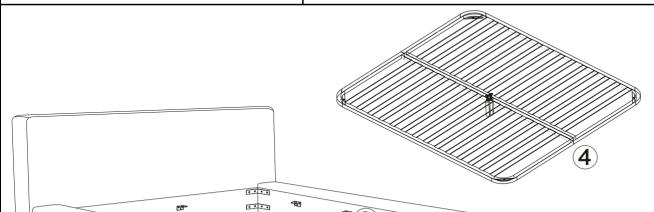

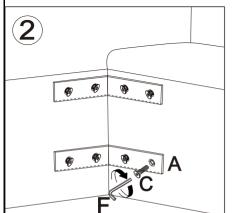

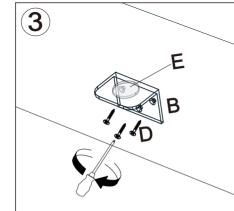

Assembly Instruction

No.	Quantity		Accessory
A	8	000	Metal Support A
В	10	Ø	Metal Support B
С	32		Screw 8×25mm
D	30	9)	Screw 5×40mm
Е	10		Gasket 33mm
F	1		Allen Wrench 5mm
G	8	•	Plastic Foot 3.35cm
Н	2		Center Leg 22cm
Steps		Please refer	following procedures
1	Istall plastic foot G to headboard, siderails, and footboard.		
2	Install metal support A with screw C to fix headboard, siderails, and footboard.		
3	Fix metal support B with screw D and stick Gasket E.		
4	Install H leg on slat and put the slat on the bed.		
		_	

your home

devereaux



55" High Queen Bed 67" w x 91" d x 55" h *Tufted*

View Otter/Hickory 45DEVQN2 Taranto Zinc/Fossil 45DEV55ZQN Non-tufted version available by special order*

55" High King Bed 83" w x 91" d x 55" h

83" w x 91" d x 55" h Tufted

View Otter/Hickory 45DEVKG2 Taranto Zinc/Fossil 45DEV55ZKG Non-tufted version available by special order*

55" High California King Bed*

79" w x 95" d x 55" h

Non-tufted version available by special order*





63" High Queen Bed

67" w x 91" d x 63" h

View Otter/Hickory 45DEVQN63 Taranto Zinc/Fossil 45DEV63ZQN Non-Tuffed

Dansby Pewter/Fossil 45DEVNTQN63

63" High King Bed

83" w x 91" d x 63" h

View Otter/Hickory 45DEVKG63 Taranto Zinc/Fossil 45DEV63ZKG

Non-Tufted
Dansby Pewter/Fossil 45DEVNTKG63

63" High California King Bed*

79" w x 95" d x 63" h

Non-tufted version available by special order*



70" High Queen Bed* 67" w x 91" d x 70" h

Tufted
View Otter/Hickory 45DEVQN70

View Otter/Hickory 45DEVQN70
Taranto Zinc/Fossil 45DEV70ZQN
Non-tufted version available by
special order*

70" High King Bed*

83" w x 91" d x 70" h Tufted

View Otter/Hickory 45DEVKG70 Taranto Zinc/Fossil 45DEV70ZKG Non-tufted version available by special order*

70" High California King Bed*

79" w x 95" d x 70" h

Non-tufted version available by special order*



View Otter



Taranto Zinc



Dansby Pewter





Hickory

your style your way

Craft a custom design that tells your style story.
This collection is available in special-order **Fabrics**,

Leathers, Finishes, and More.

Ask in store or call 866.427.4287

*special order only

55" w x 20" d x 20" h

View Otter/Hickory 45DEVBNCH3

glamorous and enchanting

This update on a classic upholstered bed infuses your space with sophistication. Its simple, angular silhouette is softened by gently curving "wings" and distinguished by distinctive detailing. The grand, soft, and pillowy headboard is painstakingly upholstered by hand, swathed in sumptuously soft fabric, adding a dramatic focal point that heightens the style of any well-dressed space. Thick layers of padding enfold all surfaces including the footboard and side rails, allowing this piece to float beautifully anywhere in your room.

product details


- Craftsman-built frames are constructed using solid, reinforced, laminate hardwood for lasting strength and superior stability.
- Solid hardwood panels rest on solid wood braces attached to the frame's side rails for reliable mattress support.
- ▶ Made in America—this collection was handcrafted by upholstery artisans in North Carolina.
- Arhaus upholstery is made using wood certified by the Sustainable Forestry Initiative.
- Lightly tapered solid, wood, block feet enhance this collection's transitional styling.
 Matching fabric welting enhances the distinctive lines of each silhouette.
- Frames are padded in dense, eco-friendly foam and poly-fiber wrapped in casings that maintain the padding's shape.
- ▶ Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked into frame.
- ► King beds feature a frame cavity of 78.75" w x 82.75" d.
- ▶ Queen beds feature a frame cavity of 62.75" w x 82.75" d.
- ▶ Upholstered beds are offered in both tufted and non-tufted versions.
- ► Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.













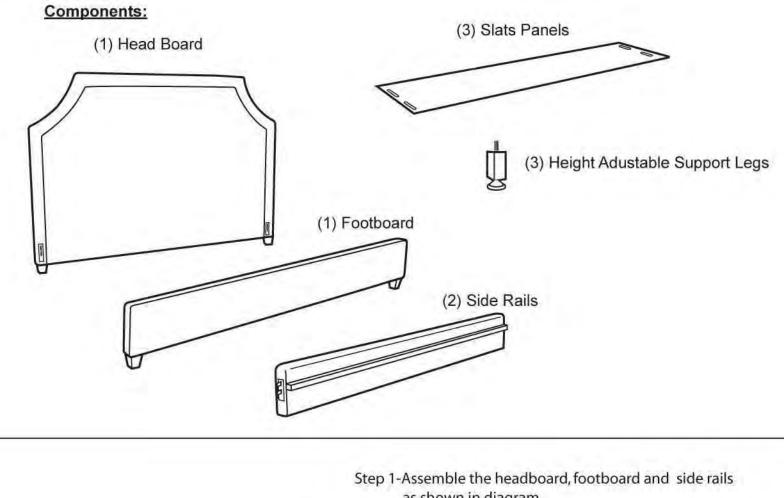

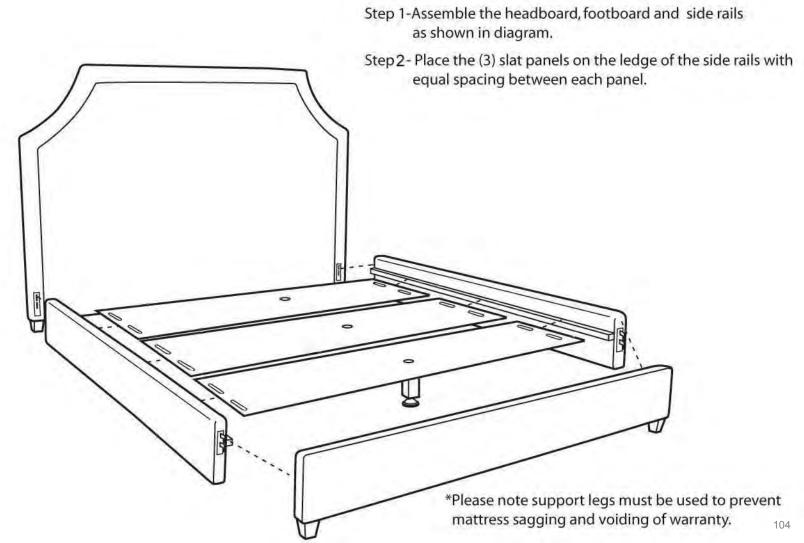

BEDROOM PARTS SKUS

Super Category	Product ID	Description	Collection	Route
BEDROOM	CS07BDKGFB	07BD-K3G UPH. F/B REPLACEMENT FOOTBOARD ONLY	PT-DEVER	PARGD
BEDROOM	CS07BDQ3RL	07BD-Q3 SIDE RAIL FABRIC	PT-DEVER	
BEDROOM	CS07BDQ3FB	07BD-Q3 UPH. F/B REPLACEMENT FOOTBOARD ONLY	PT-DEVER	
BEDROOM	91DEVSUPLEG	DEVEREAUX BED SUPPORT LEG USED FOR DEVEREAUX AND FELIX	PT-DEVER	PART
BEDROOM	91DEVBNCHHG	DEVEREAUX BENCH HINGES 2PC 2 HINGES PER SET	PT-DEVER	PART
BEDROOM	91DEVSPRNG	DEVEREAUX BENCH SPRING SPRING ONLY	PT-DEVER	PART

edie



Bench
55" w x 20" d x 20" h
Gibson Flannel/Rough Black
Devere Ivory/Brass
45EDIEBI



20" Bench20" w x 20" d x 20" h
Devere Blush/Chrome 45EDIECB

Fabrics:

Gibson Flannel



Devere Ivory



Devere Blush

Finishes:



Rough Black



Brass



Chrome

luxe accent seating

A plush companion to our Palmer collection, our Edie benches are artisan-designed with versatile style and chic comfort. Generous upholstery is covered in neutral fabrics to complement any aesthetic. Hand-finished metal frames provide stability and resilience. And, channel-stitched cushions will add a sense of luxury to any bedroom or foyer.

product details

- Craftsman-built frames are built from welded iron or stainless
- ▶ Pieces upholstered in our Gibson Flannel fabric are framed in iron hand-finished with a Rough Black powder coating, which is 10 times more durable than paint and protects against water and rust.
- ▶ Pieces upholstered in our Devere Ivory fabric are framed in iron hand-painted in a Brass tone.
- ▶ Pieces upholstered in our Devere Blush fabric are framed in stainless steel, featuring our Chrome finish.
- ▶ Bench seats are channel stitched and generously padded for luxurious style and sink-into comfort.
- ▶ Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.







Dimensions may vary slightly. Please ensure furnishings fit through interior structures and into desired space before purchase.









KING BED

83" w x 96" d x 50" h

Wooly Sand Gracy Caramel Leigh Hare Tolliver Cream

45ELLAWSKG 45ELLAGCKG X0EL1* X0EF1*

QUEEN BED

67" w x 96" d x 50" h

Wooly Sand Gracy Caramel Leigh Hare Tolliver Cream

45ELLAWSQN 45ELLAGCQN X0EL2* X0EF3*

additional dimensions

King Bed frame cavity Queen Bed frame cavity Footboard:

25" h.

61.6" w x 80" d x 7.5" h

FABRICS:



Wooly Sand



Gracy Caramel



Tolliver Cream*

LEATHER:



Leigh Hare*

YOUR STYLE YOUR WAY

77.5" w x 80" d x 7.5" h

Craft a custom design that tells your story. This collection is available in special-order Fabrics and Leathers, details below. Ask in store or call 866.427.4287

*available by special order

A MODERN TWIST ON THE CLASSIC SLEIGH BED

our richly colored Ella Bedroom Collection is artisan-crafted in North Carolina with soft lines and even softer upholstery. Grand frames hand-built from solid, sustainably sourced hardwoods are luxuriously padded with dense, eco-friendly foam, creating a plush focal point perfect for any bedroom suite.







PRODUCT DETAILS

- Craftsman-built frames are constructed using solid, reinforced laminate hardwood for lasting strength and superior stability.
- Solid hardwood panels rest on wood braces attached to the frame's side rails for reliable mattress support.
- Made in America—this collection was handcrafted by upholstery artisans in North Carolina.
- Arhaus upholstery is made using wood certified by the Sustainable Forestry Initiative.
- Frames are padded in dense, eco-friendly foam and poly-fiber wrapped in casings that maintain the padding's shape.
- Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked into frame.
- We recommend using our Retreat 4" Platform with Ella Beds.
- Ella Beds are compatible with our Elite Motion Base Collection.
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.

your home

evelyn



Kina Bed

80.25" w x 85.5" d x 62.75" h Nimbus/Devere Cobblestone Cirrus/Devere Ivory Stratus/Dove Grev

Queen Bed

65.25" w x 85.5" d x 62.75" h Nimbus/Devere Cobblestone Cirrus/Devere Ivory Stratus/Dove Grey 45EVENKGKT 45EVECKGKT 45EVESKGKT

45EVENQNKT 45EVENCQNKT 45EVESQNKT

Full Bed

59" w x 82.75" d x 62.25" h Nimbus/Devere Cobblestone Cirrus/Devere Ivory Stratus/Dove Grey

45EVENFLKT 45EVECFLKT 45EVESFLKT

Twin Bed

43.5" w x 82.75" d x 62.25" h Nimbus/Devere Cobblestone Cirrus/Devere Ivory Stratus/Dove Grey

45EVENTWKT 45EVECTWKT 45EVESTWKT

Finishes:

Nimbus







Fabrics:





Dove Grey

your style your way

Craft a custom design that tells your style story. This collection is available in special-order **Fabrics**. Ask in store or call 866.427.4287

inspired by Greco-Roman architecture and furnishings,

Cobblestone

neoclassical French design rose to popularity during the reign of Louis XVI. Our Evelyn Bedroom Collection reflects this classic style through straight lines and turned legs accentuated by hand-carved detailing fit for royalty. Meticulously applied finishes add warmth and softness to each piece. Furniture artisans thoughtfully paint, distress, and lacquer the carefully crafted mahogany and poplar surfaces, giving them the appearance of well-loved antiques.

product details

- Craftsman-built by Indonesian artisans, this collection is constructed using solid mahogany and poplar wood.
- Frames are corner-blocked and reinforced with mortise-and-tenon joinery for everyday durability and superior structural stability.
- Wooden surfaces are sanded, painted, and distressed by hand. Finished surfaces are lacquered for added protection and a subtle sheen
- ▶ Case pieces feature drawers mounted on full-extension, soft-close glides.
- ► Hardware features an antiqued brass finish.
- ▶ Beds feature upholstered headboards accentuated by flat, brass-colored nailheads.
- Bed frames include space to accommodate variances in mattress sizes and allow bedding to be tucked into frame.
- ▶ King bed frames have a cavity measuring 77.25" w x 80.25" d.
- Queen bed frames have a cavity measuring 62" w x 80.25"d.
- ► Full bed frames have a cavity measuring 56" w x 77" d.
- ► Twin bed frames have a cavity measuring 40" w x 77" d.
- This collection is artisan-crafted from natural materials with hand-applied finishes. Individual pieces may vary in color, pattern, shape, and texture, making each truly unique.
- Natural wood may display small splits, knots, joint lines, or other organic features that will
 not affect the quality or performance of your piece.
- Furniture made from natural wood may move slightly due to temperature and humidity.
 This is normal and should be expected from season to season.
- Keep your furniture looking its best. Visit arhaus.com or speak to any Arhaus Design Consultant for care recommendations.

mirror

- Mirrors can be hung vertically or horizontally. Hardware included.
- Professional installation recommended for mirrors; please consult a professional before hanging.
- Mirror weighs 44 lbs.







Dimensions may vary slightly. Please ensure furnishings fit through interior structures and into desired space before purchase.

ARHAUS

your home



2-Over-4 Dresser

40.5" w x 22.75" d x 56.25" h
Nimbus 45EVEN24
Cirrus 45EVEC24
Stratus 45EVES24



7-Drawer Dresser



Nightstand

27.25" x 19.75" d x 28.75" h Nimbus 45EVENBT Cirrus 45EVECBT Stratus 45EVESBT



Open Nightstand



Mirror

56" w x 1.5" d x 33.75" h Nimbus 45EVENMR Cirrus 45EVECMR Stratus 45EVESMR



Cheval Mirror


38.25" w x 20.5" d x 72" h
Nimbus 45EVENCHMR
Cirrus 45EVECCHMR
Stratus 45EVESCHMR


ASSEMBLY INSTRUCTIONS EVELYN FULL BED


Parts List						
A		1 pc	G		8 pcs	
В		1 pc	Н		8 pcs	
С		2 pcs	I		8 pcs	
D		1 pc	J		1 pc	
Е		1 pc	К		12 pcs	
F		1 set	Tools (not included)			

ASSEMBLY INSTRUCTIONS




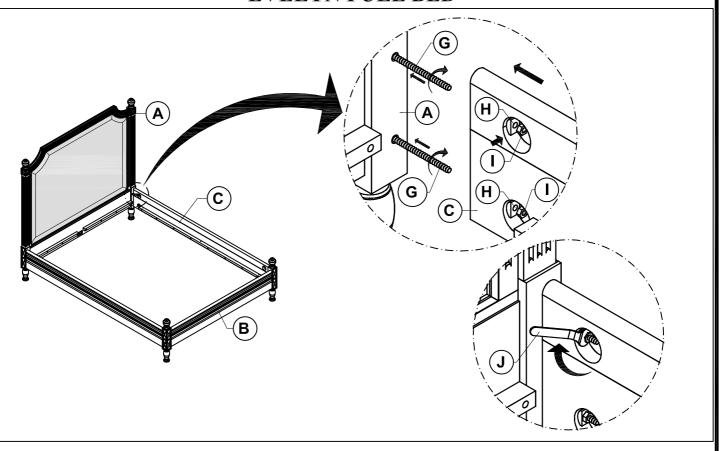

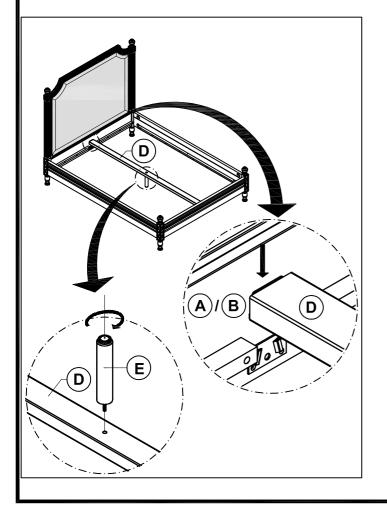

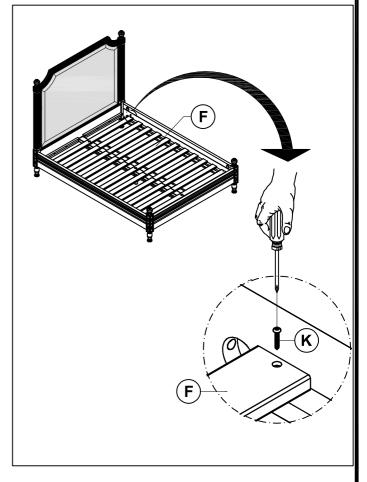


FURNITURE TIPPING RESTRAINT Safety Mounting Assembly HARDWARE

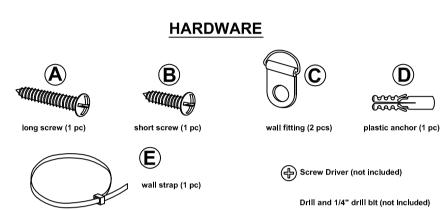

Installation Instructions:

For added safety and stability, it is recommended that the wall mounting hardware be installed. For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. Plaster, drywall, concrete, etc.). Mount to wood studs whenever possible.

- Attach 1 pc of wall fitting to furniture as shown, using small screw.
- Determine the final position for the furniture. Mark position on the wall approximately 2" below the bracket mounted to the back of the unit.
- Drill a hole in the wall stud. If the wall stud is not available, drill a hole in the wall that is slightly smaller in diameter than the anchor. Gently tap the **plastic anchor** until the flange of the anchor is flush with the wall.
- Attach the **wall fitting** to the wall by inserting **large screw** through the wall fitting and into the **plastic anchor** in the wall.
- Place the unit so the wall fitting on the back edge is aligned with the wall fitting on the wall.
- Lace one end of the **wall strap** through both fittings, and into the other end of the strap.
- Pull the strap tightly until secure.

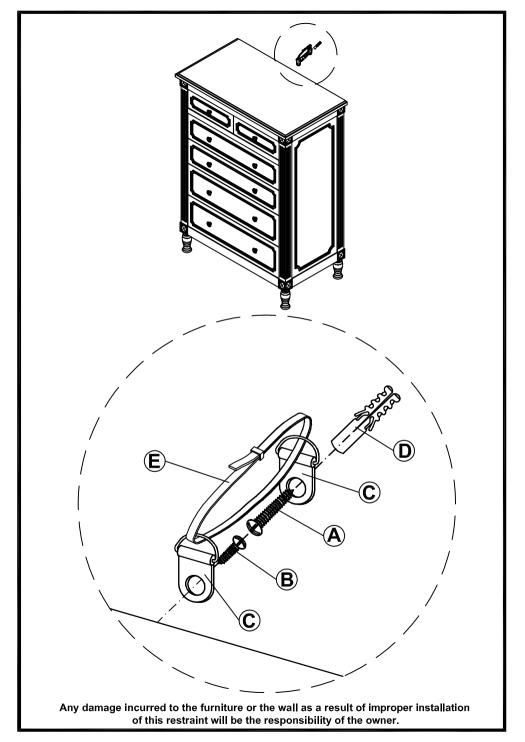


FURNITURE TIPPING RESTRAINT Safety Mounting Assembly HARDWARE B B Wall fitting (2 pcs) Plastic anchor (1 pc) Wall strap (1 pc) Wall strap (1 pc) Wall strap (1 pc)

Drill and 1/4" drill bit (not included)


Installation Instructions:

For added safety and stability, it is recommended that the wall mounting hardware be installed. For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. Plaster, drywall, concrete, etc.). Mount to wood studs whenever possible.

- Attach 1 pc of wall fitting to furniture as shown, using small screw.
- Determine the final position for the furniture. Mark position on the wall approximately 2" below the bracket mounted to the back of the unit.
- Drill a hole in the wall stud. If the wall stud is not available, drill a hole in the wall that is slightly smaller in diameter than the anchor. Gently tap the **plastic anchor** until the flange of the anchor is flush with the wall.
- Attach the **wall fitting** to the wall by inserting **large screw** through the wall fitting and into the **plastic anchor** in the wall.
- Place the unit so the wall fitting on the back edge is aligned with the wall fitting on the wall.
- Lace one end of the **wall strap** through both fittings, and into the other end of the strap.
- Pull the strap tightly until secure.

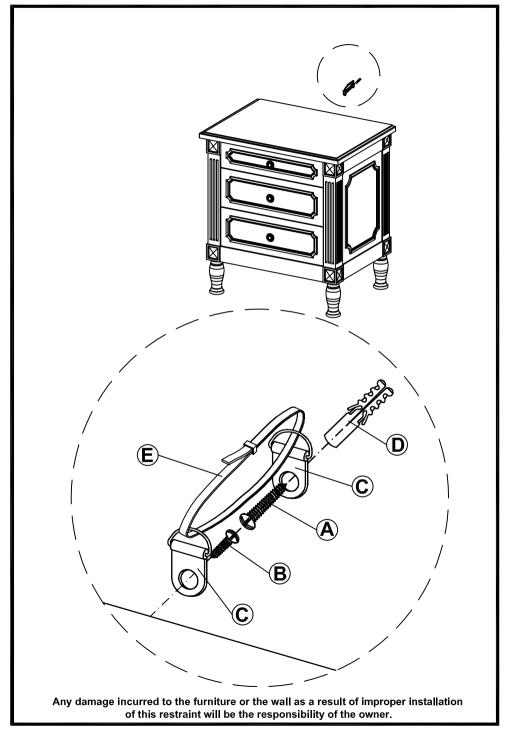

FURNITURE TIPPING RESTRAINT Safety Mounting Assembly

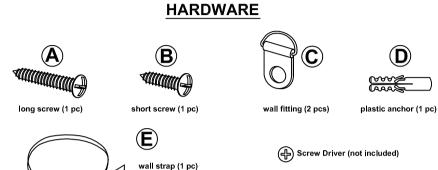


Installation Instructions:

For added safety and stability, it is recommended that the wall mounting hardware be installed. For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. Plaster, drywall, concrete, etc.). Mount to wood studs whenever possible.


Drill and 1/4" drill bit (not included)

- Attach 1 pc of wall fitting to furniture as shown, using small screw.
- Determine the final position for the furniture. Mark position on the wall approximately 2" below the bracket mounted to the back of the unit.
- Drill a hole in the wall stud. If the wall stud is not available, drill a hole in the wall that is slightly smaller in diameter than the anchor. Gently tap the **plastic anchor** until the flange of the anchor is flush with the wall.
- Attach the **wall fitting** to the wall by inserting **large screw** through the wall fitting and into the **plastic anchor** in the wall.
- Place the unit so the wall fitting on the back edge is aligned with the wall fitting on the wall.
- Lace one end of the **wall strap** through both fittings, and into the other end of the strap.
- Pull the strap tightly until secure.

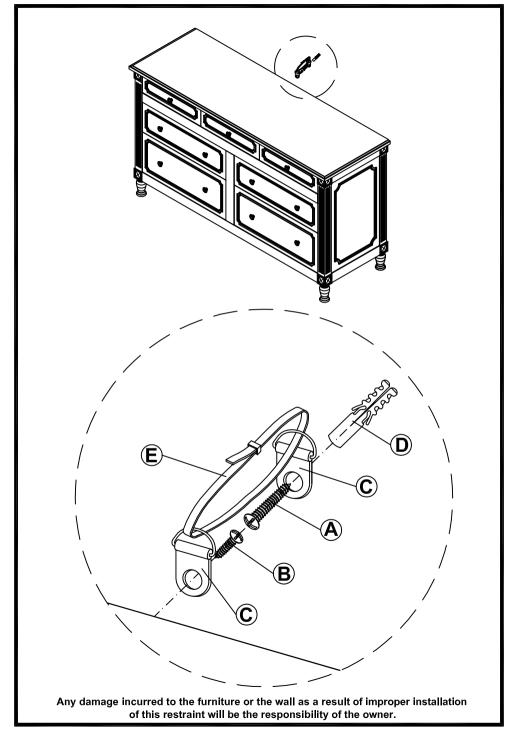

ASSEMBLY INSTRUCTIONS EVELYN CHEVAL MIRROR


Parts List						
A	A		D		2 pcs	
	1 pc	E		2 pcs		
В	B		F		2 pcs	
	2 pcs	G		2 pcs		
С	c		н		1 pc	
		1 pc	I		2 pcs	
			J		2 pcs	

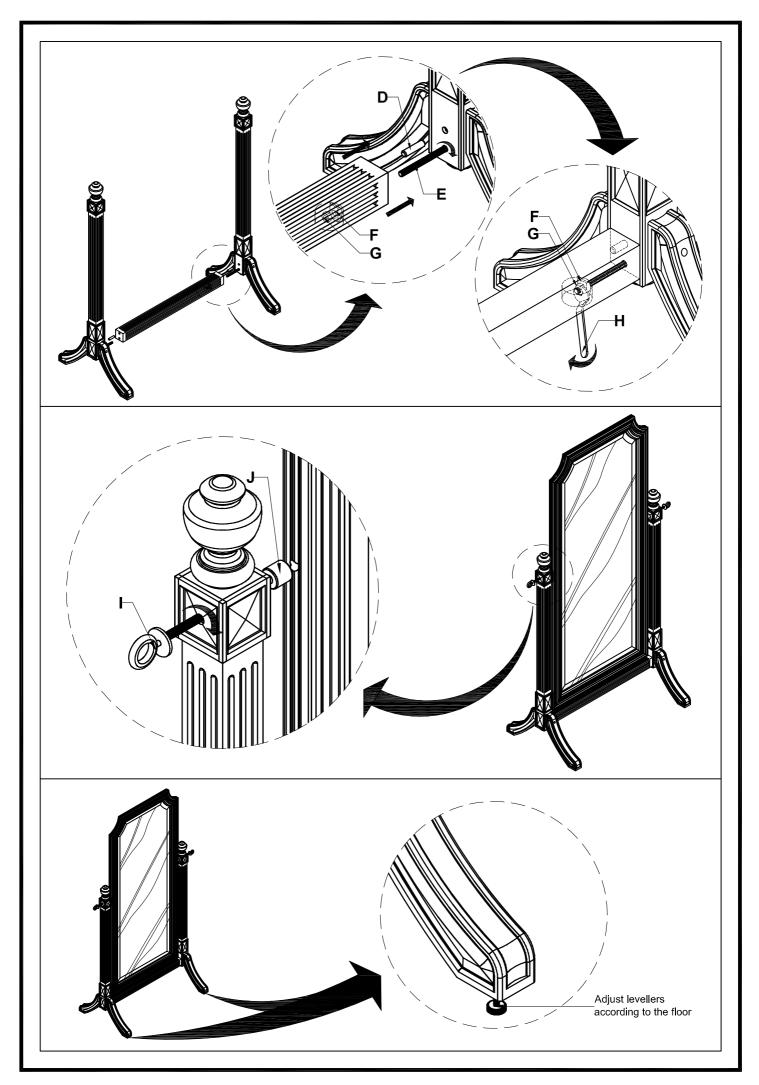



ASSEMBLY INSTRUCTIONS EVELYN KING BED

Parts List						
A		1 pc	G		8 pcs	
В		1 pc	Н		8 pcs	
С		2 pcs	I		8 pcs	
D		1 pc	J		1 pc	
Е		1 pc	К		12 pcs	
F	Mrs.		Tools (not included)			
·		1 set				


ASSEMBLY INSTRUCTIONS EVELYN KING BED

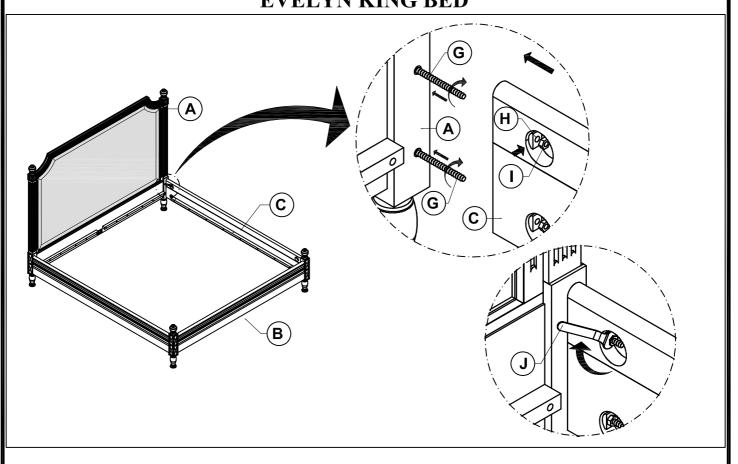


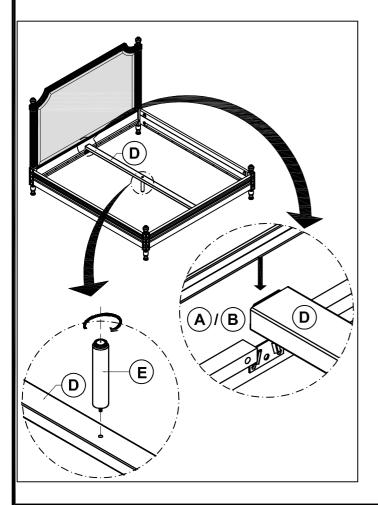


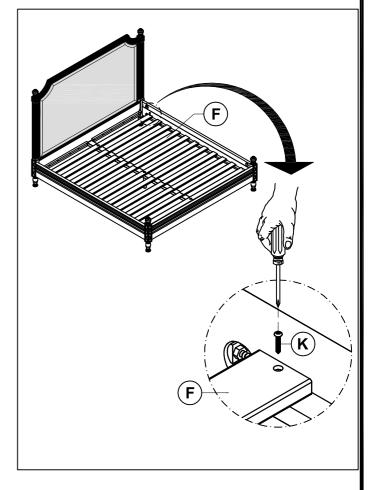



ASSEMBLY INSTRUCTIONS EVELYN MIRROR

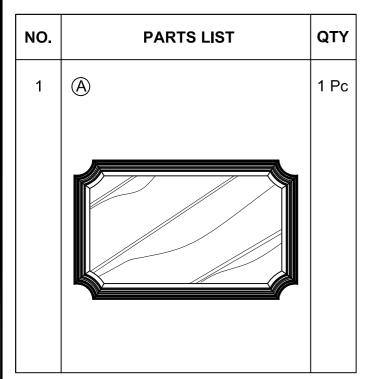


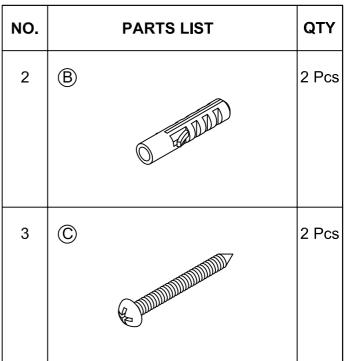

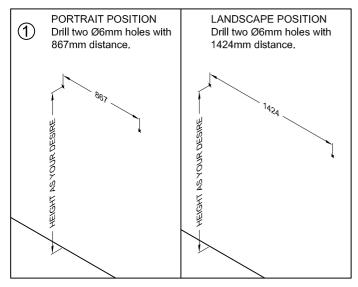

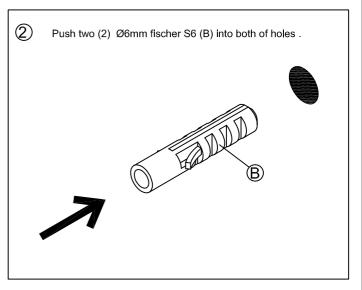


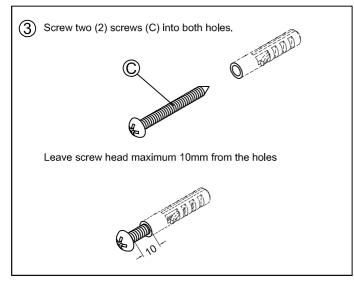

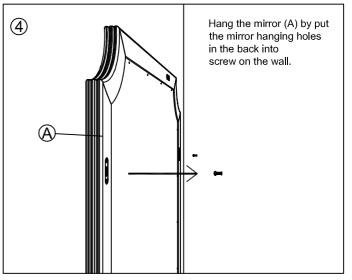

FURNITURE TIPPING RESTRAINT Safety Mounting Assembly


HARDWARE

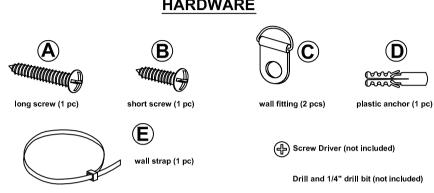

Installation Instructions:

For added safety and stability, it is recommended that the wall mounting hardware be installed. For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. Plaster, drywall, concrete, etc.). Mount to wood studs whenever possible.


- Attach 1 pc of wall fitting to furniture as shown, using small screw.
- Determine the final position for the furniture. Mark position on the wall approximately 2" below the bracket mounted to the back of the unit.
- Drill a hole in the wall stud. If the wall stud is not available, drill a hole in the wall that is slightly smaller in diameter than the anchor. Gently tap the plastic anchor until the flange of the anchor is flush with the wall.
- Attach the wall fitting to the wall by inserting large screw through the wall fitting and into the plastic anchor in the wall.
- Place the unit so the wall fitting on the back edge is aligned with the wall fitting on the wall.
- Lace one end of the wall strap through both fittings, and into the other end of the strap.
- Pull the strap tightly until secure.

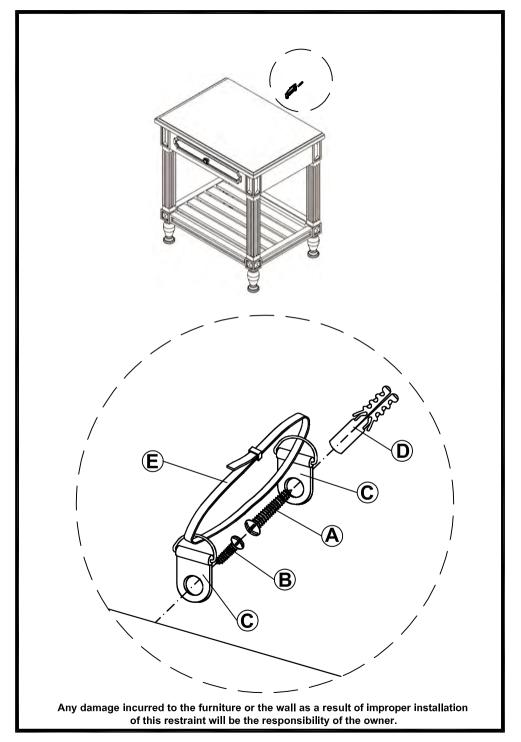



ASSEMBLY INSTRUCTIONS EVELYN QUEEN BED

Parts List						
A		1 pc	G		8 pcs	
В		1 pc	Н		8 pcs	
С		2 pcs	I		8 pcs	
D		1 pc	J		1 pc	
E		1 pc	К		12 pcs	
F		1 set	Tools (not included)			

ASSEMBLY INSTRUCTIONS EVELYN QUEEN BED

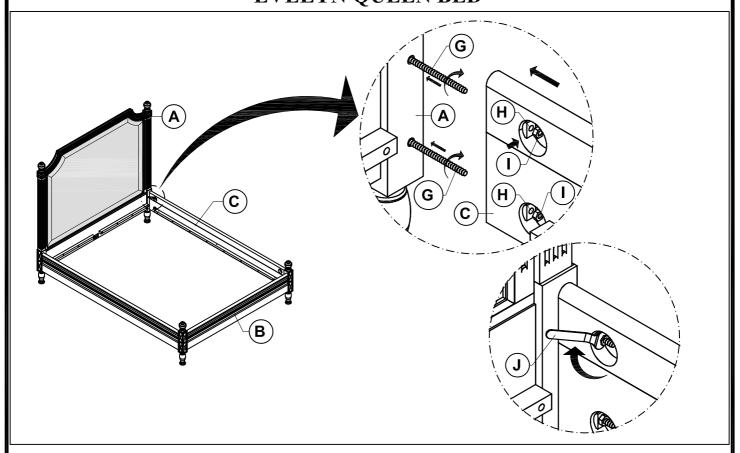

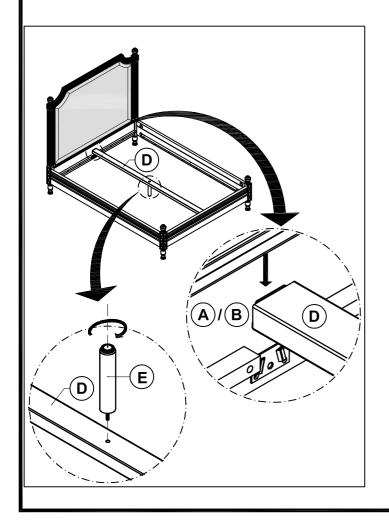


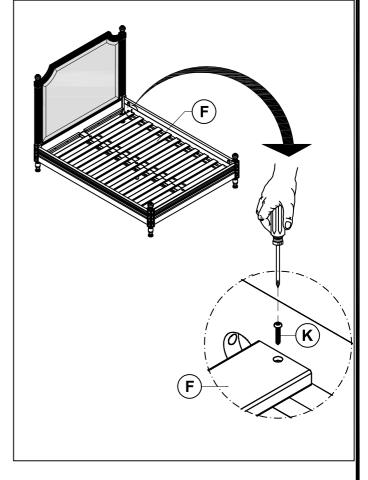



ASSEMBLY INSTRUCTIONS EVELYN TWIN BED

Parts List						
Α		1 pc	G		8 pcs	
В		1 pc	Н		8 pcs	
С		2 pcs	I		8 pcs	
D		1 pc	J		1 pc	
Е		1 pc	К		12 pcs	
F		1 set	Tools (not included) ⊕			

ASSEMBLY INSTRUCTIONS EVELYN TWIN BED

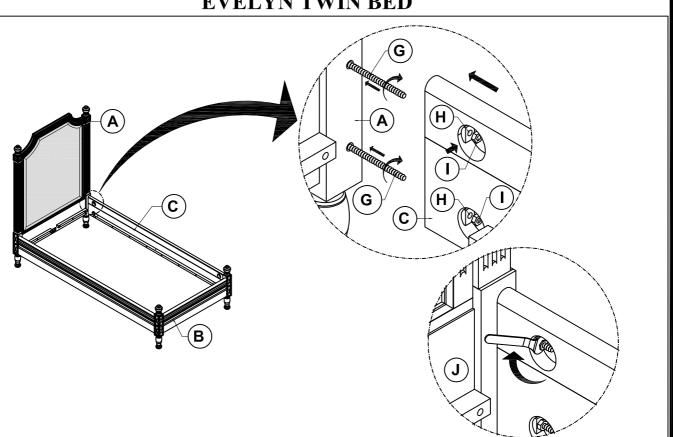

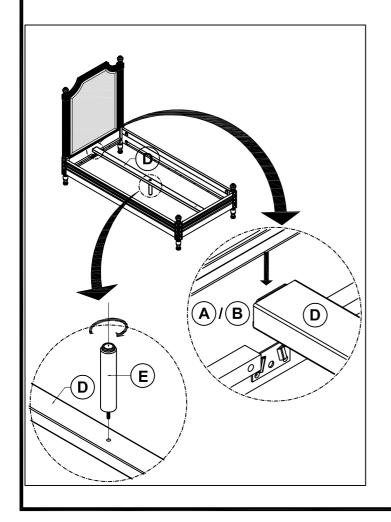

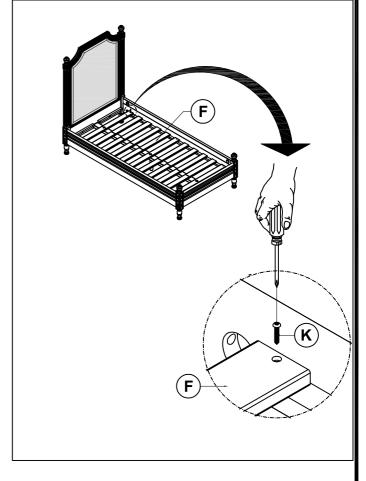

BEDROOM PARTS SKUS

Super Category	Product ID	Description	Collection	Route
BEDROOM	91511EVEHW	EVELYN BED ASSEMBLY HDW	PT-EVELYN	PART
BEDROOM	91EVENAIL	EVELYN BED NAIL DECORATIVE NAIL ON HB/FB	PT-EVELYN	PART
BEDROOM	91EVEMIRN	EVELYN CHEVAL MIR RING/LOCK NB	PT-EVELYN	PART
BEDROOM	91EVEMIR	EVELYN CHEVAL MIRROR RING/LOCK	PT-EVELYN	PART
BEDROOM	91EVEGLD	EVELYN DRAWER GLIDES SET OF 2	PT-EVELYN	PART
BEDROOM	91EVEKNOB	EVELYN KNOB - ALL FINISHES ANTIQUE FINISH KNOB	PT-EVELYN	