





FLIP TOP WORKBENCH & FOLDABLE VISE WITH STAND


ASSEMBLY INSTRUCTION SHEET

A. PARTS LIST

NO	FIGURE	DESCRIPTION (MM)	QTY
#1	0000000	WORK- TOPS	2PCS
#2		SLIDE BASES	2PCS
#3		BOLTS M8	4PCS
#4	0 00000000	CROSSBARS	2PCS
#5		LEG FRAMES	2PCS
#6		PLASTIC FEET	4PCS
#7	0	WASHERS Ø8	8PCS
#8		WOOD SCREWS	16PCS
#9	(a) ====================================	BOLTS M6	8PCS
#10	((a)	NUTS M6	8PCS
#11	®	NUTS M8	4PCS
#12		CHOCKS	4PCS
#13	0	WASHERS ø6	8PCS
#14	0_0	SPANNER	1PC

B. ASSEMBLY STEPS: (PICTURE 2)

- STEP 1: USE BOLTS (#9) WASHERS (#13) AND NUTS (#10) TO CONNECT CROSSBARS (#4) AND LEG FRAMES (#5)
- STEP 2: USE WOODSCREWS (#8) TO CONNECT SLIDE BASES (#2)
 AND WORK -TOPS (#1) (PICTURE 1)
- STEP 3: FIT LEG FRAMES (#5) INTO SLIDE BASES (#2), LINE UP HOLES IN SLIDE BASE WITH HOLES IN LEG FRAME. INSERT BOLTS (#3) AND WASHERS (#7) FROM OUTSIDE OF THE BASE AND ATTACH WASHERS (#7) AND NUTS (#11) FROM INSIDE. USE SCREWDRIVER AND SPANNER TO TIGHTEN SCREWS.
- STEP 4: ATTACH PLASTIC FEET (#6) TO THE LEGS (#5). EACH FOOT MUST BE ATTACHED WITH LONGEST SIDE AT OUTER CORNER WHICH IS INDICATED BY ARROW INSIDE.
- STEP 5: SELECT SUITABLE HOLES ON THE WORK TOPS TO FIX CHOCKS (#12)

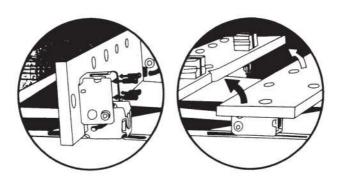


PICTURE 1

SAFETY INSTRUCTION

PLEASE CAREFULLY NOTE THE FOLLOWING:

- WHEN ASSEMBLING ENSURE PLASTIC FEET ARE ATTACHED SECURELY TO LEGS, HAND TIGHTEN ALL SCREWS AND BOLTS UNTIL SECURE.
- 2. DO NOT USE AS LADDER. NEVER STEP OR STAND ON CROSSBARS OR WORK TOPS.
- 3. DO NOT EXCEED THE RECOMMENDED MAXIMUM WEIGHT CAPACITY OF WORK TOPS (100KGS). ALWAYS LOWER HEAVY LOADS ONTO WORK TOPS SLOWLY, TO AVOID DAMAGING THE WORK BENCH.

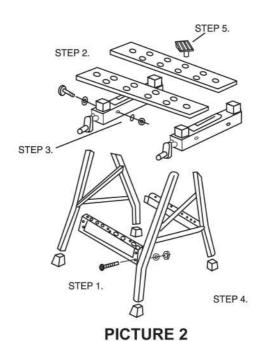



CONTACT US:

Tools4Trade Ltd.

6 Fitzhamon Court, Bradwell Wolverton, Milton Keynes, MK12 6LB PHONE:

01908 969966

Email:

sales@tools4trade.co.uk