


# Handcycle Hub Installation



Tool Needed: 10mm Hex Wrench (see image below, handles may vary)

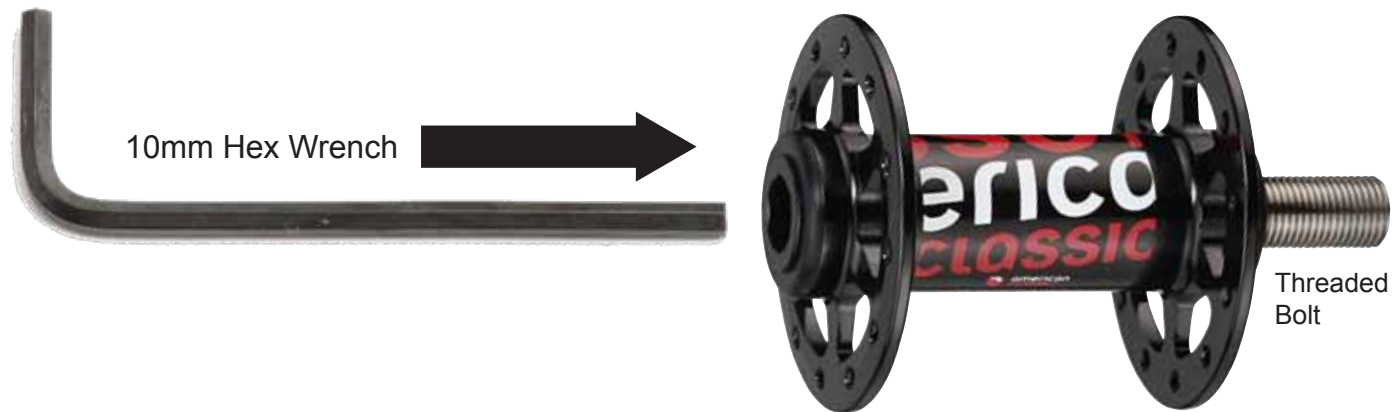

## Installation

When installing American Classic Handcycle rear wheels, use a long 10mm hex wrench to bolt the wheel on or to remove it from your bike. Insert the 10mm hex wrench 2.5 inches (60mm) into the hole in the end of the hub to reach the recessed 10mm socket head of the bolt. Make sure your wheels are securely fastened to your bike before riding.

**NOTE:** Do not wrench or turn the larger black 12mm hex fitting on the outermost part of the hub. The 12mm hex is holding the bearing and dust seal in place and is not part of installing or removing of the wheel. Always make sure the 12mm fitting is securely tightened.

## Transportation / Shipping

The threaded bolt retracts for shipping or transportation when the wheel is removed from the bike.

**TO RETRACT THE THREADED BOLT:**

Tap the threaded bolt end with 10mm hex wrench to have it retract into the hub. Do not hammer.

**TO EXTEND THREADED BOLT FOR USE:**

Insert the the 10mm hex wrench into the hub and push/tap until the bolt extends. Do not hammer.