



Description: **ROBINHOOD SUPERTUB CABINET SLIM**  
Model Number: **STSLIM1**

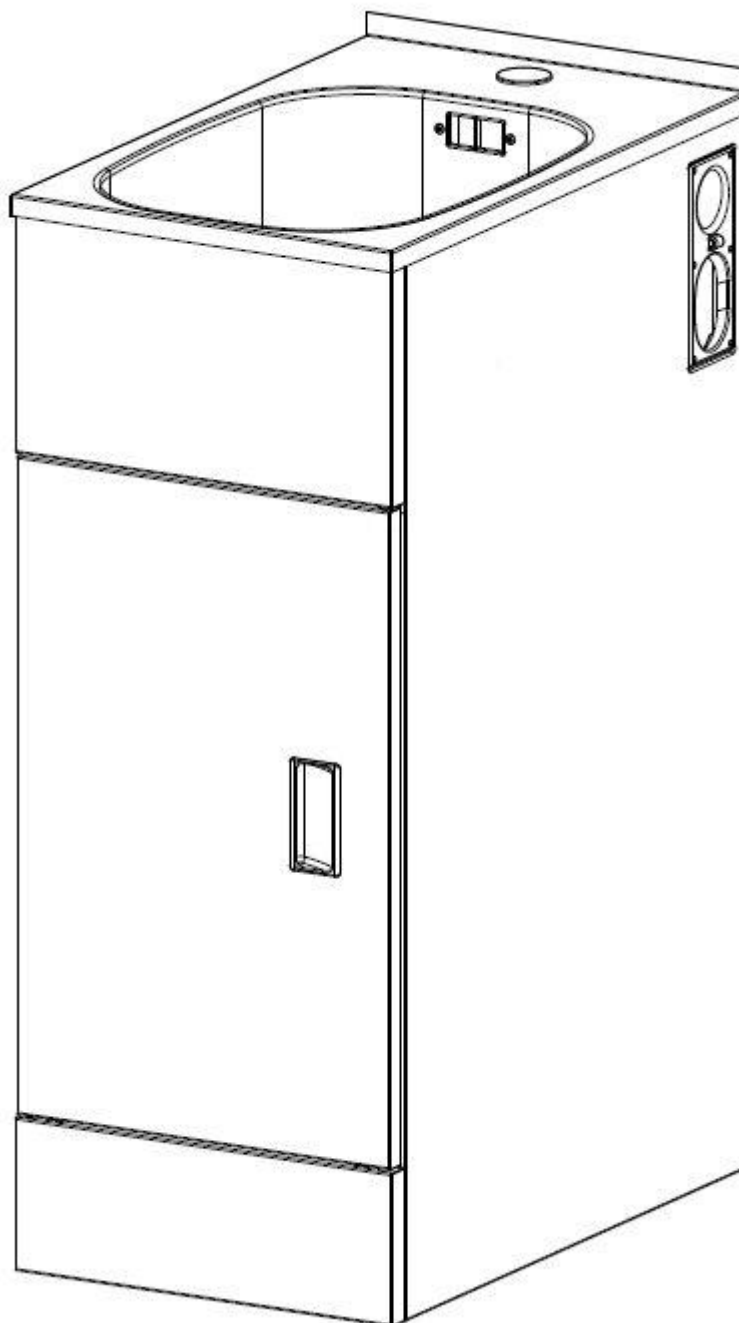

Model pictured: **STSLIM1**


# Exploded Tub Assembly

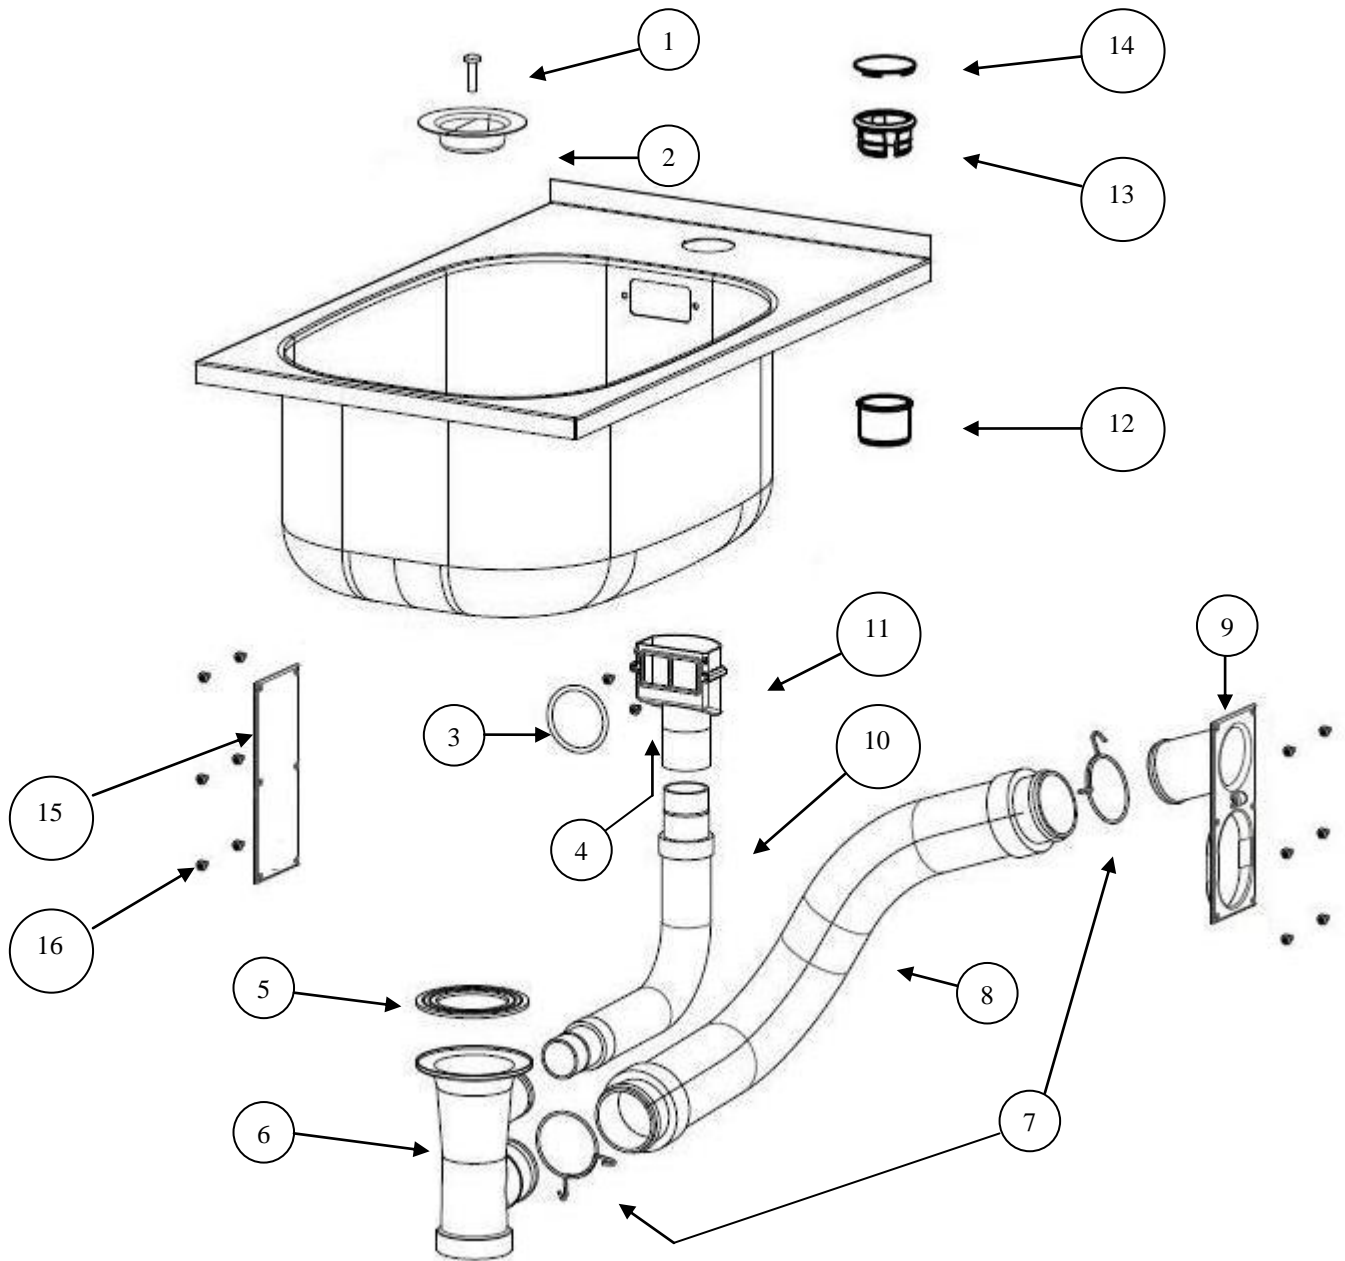

## Exploded Tub Assembly

		Part number
Item	Description	STSLIM1
1	Waste grill screw	999140
2	Waste grill	750633SS
3	Overflow O ring	752220
4	Overflow screw (1 off)	999074
5	Waste seal	752218
6	Waste body 50mm	752216
7	Hose clip (1 off)	752228
8	Washing machine waste hose	752226
9	Washing machine waste inlet	752201
10	Overflow hose	752215
11	Overflow body	752219
12	Lock tub	750781
13	Top mount stay	750780
14	Grommet cap	750782
15	Waste inlet blanking cover	752202
16	Screw (1 off)	999054


## Exploded Chassis Assembly

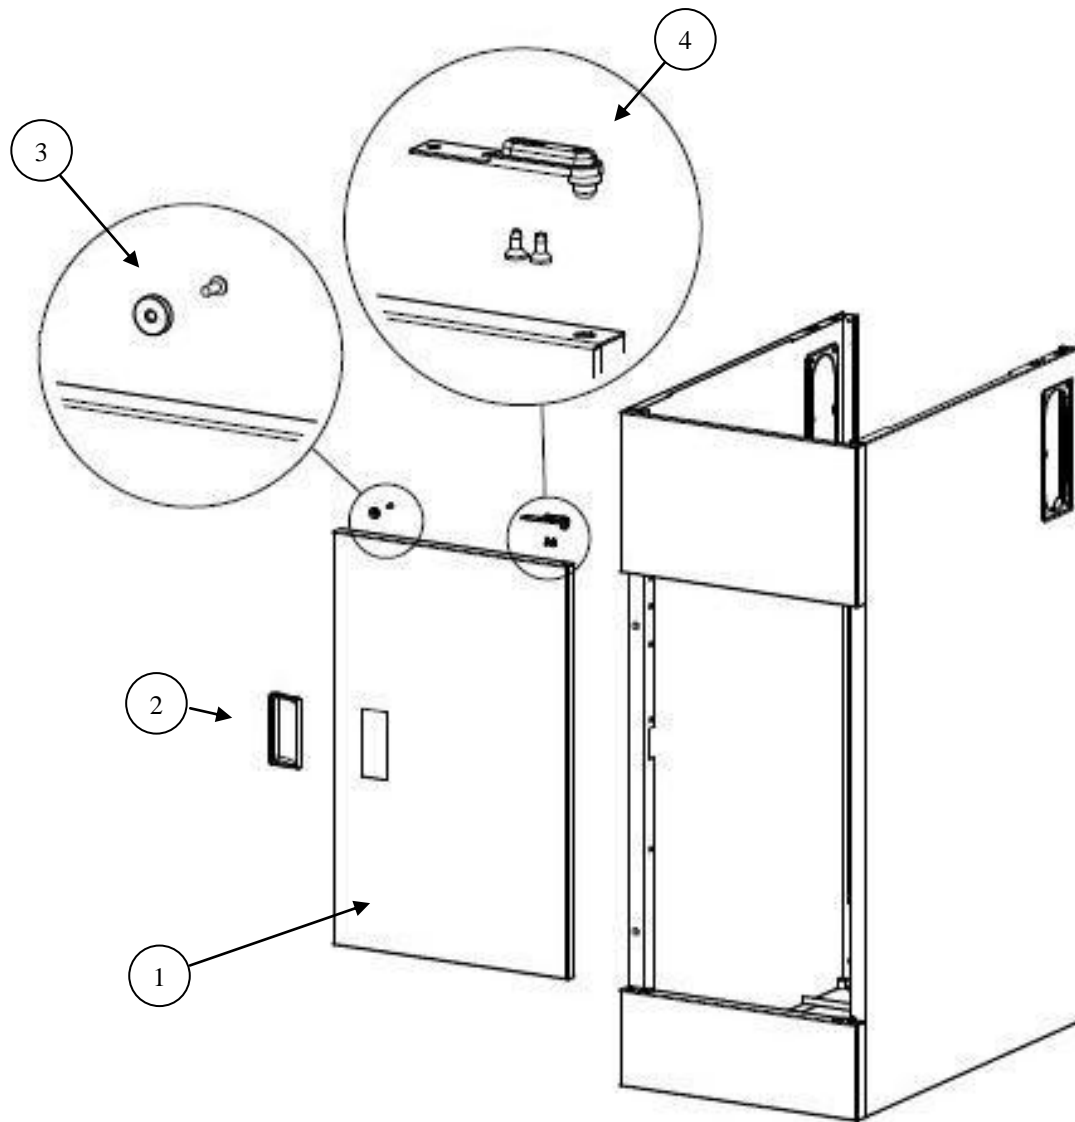

Item	Description	Part number
		STSLIM1
1	Door assembly kit includes handle and magnetic catch	752052
2	Door handle (included in kit 752052)	Part of kit
3	Magnetic catch and rivet (included in kit 752052)	Part of kit
4	Hinge kit (2 hinges & 4 screws)	752054

## Installation Kit

1

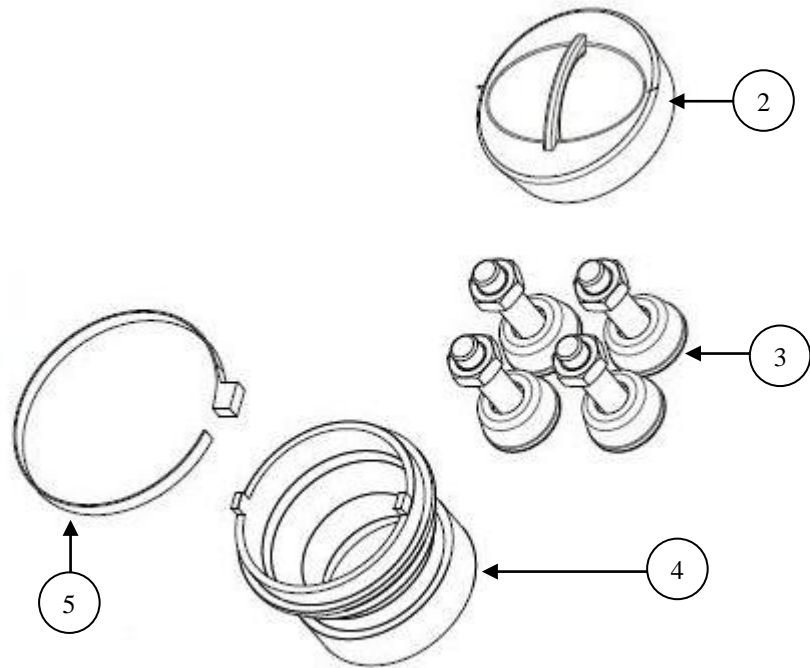

		Part number
Item	Description	STSLIM1
1	Installation kit complete (as shown above)	752042
2	Plug	750636
3	Adjustable foot assembly (1 off)	750920
4	Waste adaptor (50mm to 40mm dia.)	750638
5	Cable tie	Available in Hardware Stores