

# THUREN FABRICATION HEIGHT SHIM KIT (HSK)

These instructions are applicable to  
the following Trucks:

- 2014 - 2023 Ram 2500
- 2014 - 2023 Power Wagon

Applicable Part Numbers:  
(TF-2500RCSPCR-KIT)

## NOTE


This kit will require removal of the rear coils for install. View our instructions for Rear Coil removal in our Tech Data section at [www.thurenfabrication.com](http://www.thurenfabrication.com)

## 1. Installation

- Determine how many spacers you want to install. **1** = 5/8" lift, **2** = 1" lift, or **3** = 1-3/8" lift.
- Once the Rear Coils are removed, the Coil Spacer will bolt onto the Axle Seat where the Coil Previously sat.
- The supplied Black Top Plate will go on top of the Aluminum Spacer Plates and replicate the OEM mounting surface for your coil.
- Torque Hardware to 25 Ft/Lbs

## WARNING

The minimum height option is one Spacer Plate and the Black Top Plate. Use the shorter bolts if you choose this option. Maximum Height is 3 Spacer Plates and Black Top Plate.

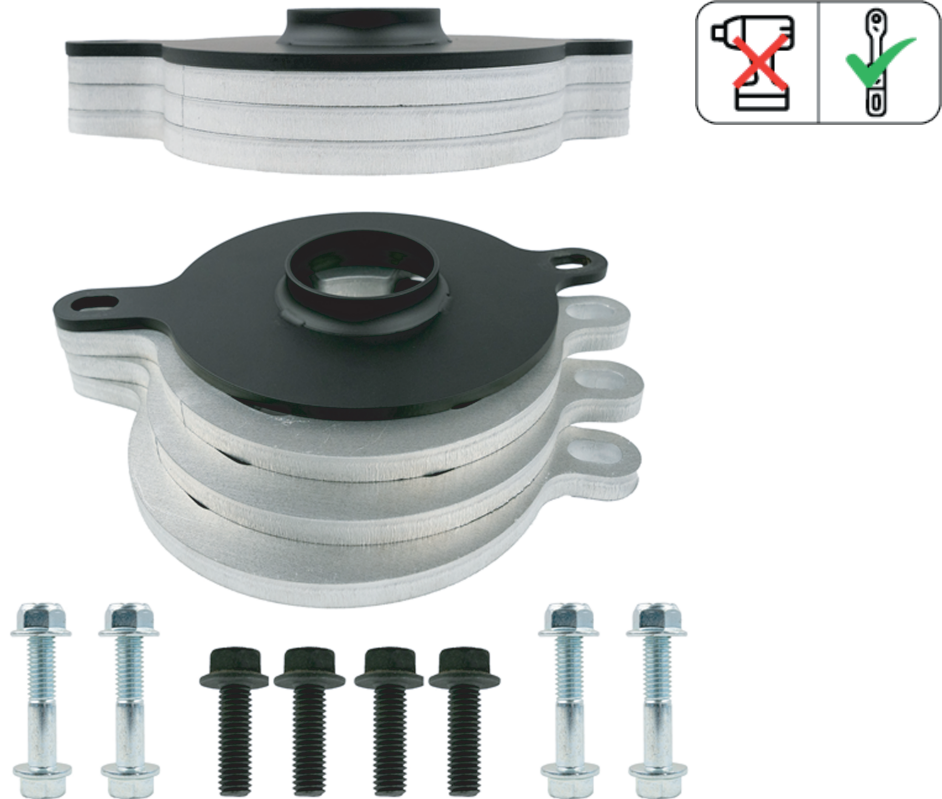

**THUREN**  
SUSPENSION TECHNOLOGY