
Undermount Water Tanks Grey Water Fittings Kit PARTS LIST

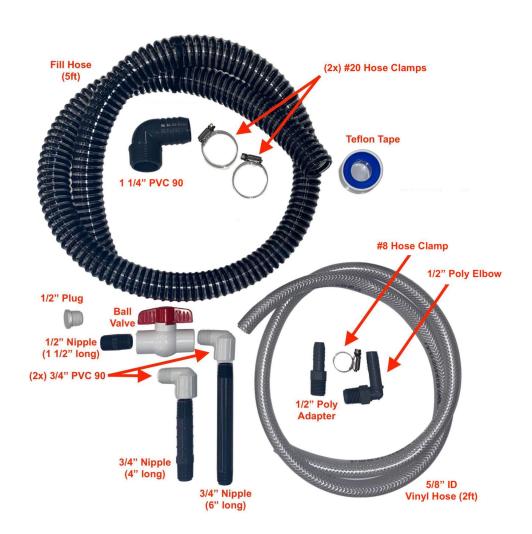


- (1x) 1 ¹/₄" 90
- $(2x) \frac{3}{4}$ 90's
- (1x) 3/4" Ball Valve
- (1x) 3/4" Nipple (6" long)
- (1x) 3/4" Nipple (4" long)
- (1x) 3/4" Nipple (11/2" long)
- (1x) ½" Poly Adaptor*
- (1x) ½" Poly Elbows
- (1x) ½" Plug
- (2x) #20 Hose Clamps
- (1x) #8 Hose Clamp*
- (1 roll) Teflon Tape
- (5ft) Fill Hose
- (2ft) 5/8" ID Vinyl Hose


* 15G Promaster undermount tank comes with 3x ½" Poly Adapters and 3x #8 Hose Clamps for the 3x vents - one at the top of each hump.

Undermount Water Tank Grey Water Fittings Kit INSTALL INSTRUCTIONS

- Use one of the upper 1 1/4" ports for your fill port
 - Use the bottom 3/4" port for your drain
 - Use the upper ½" port for your vent
- Use the ½" plug to seal the bottom ½" port
- Use Teflon tape on all threaded fittings to ensure a proper seal

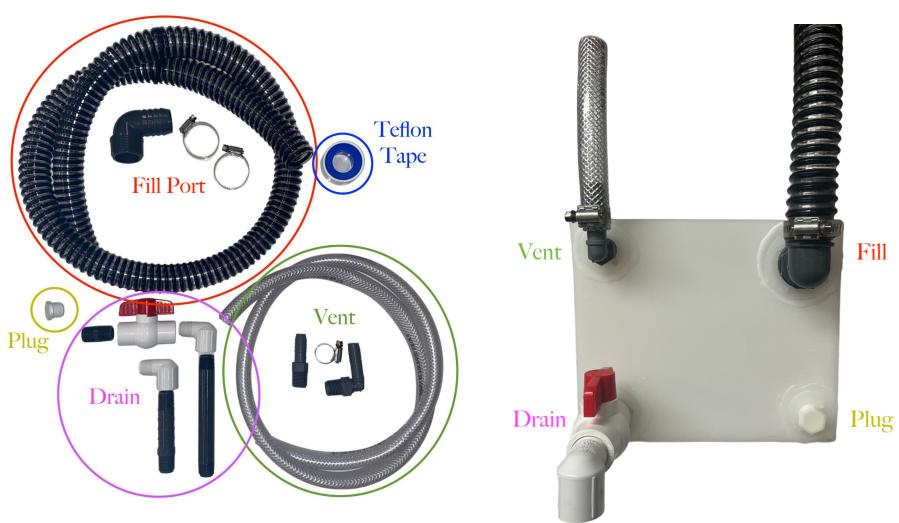

FILL PORT VENT

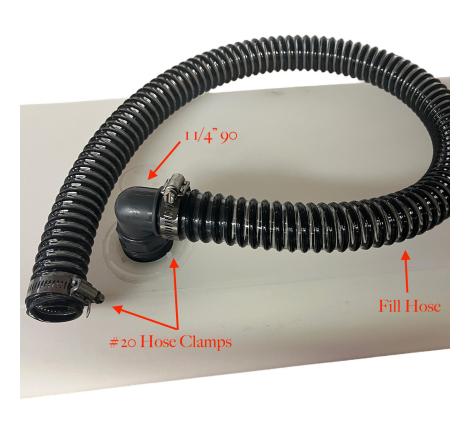



DRAIN TO GROUND (OPTIONS)

