

stayflush

motorsports

STAYFLUSH CENTER PEICE MOUNTSWITCHPR08/12INSTRUCTIONS


STEP 1

FOLLOW THE LINES OF THE CONSOLE FOR THE CUTS,
YOU WILL LEAVE TABS ON THE LOWER AREA TO MOUNT THE BRACKET



STEP 2

MOUNT THE BRACKET, MARK THE MOUNTING HOLES WITH A MARKER, OR
PREDRILL A SMALL HOLE WITH MOUNT ON

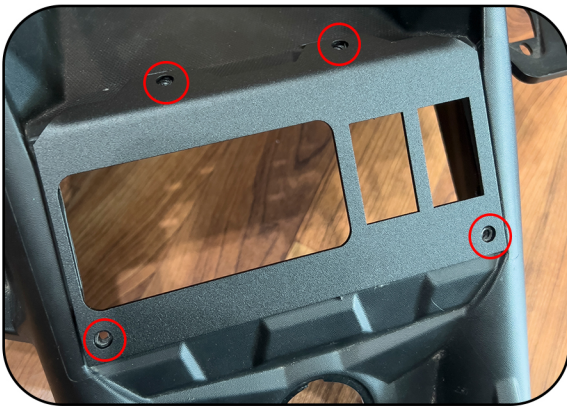

STEP 3

SECURE THE BRACKET WITH THE SCREWS PROVIDED AND BOOM! DONE!

