

stayflush


motorsports

SFM Lower Console Mount

1. Mount the bracket to the lower console and mark the 2 tabs positions. Drill 2 small holes.



2. Unbolt the lower factory bolts and mount the console sliding in the 2 tabs to the 2 holes drilled in the previous step. Bolt back the factory dash bolts and off you go!

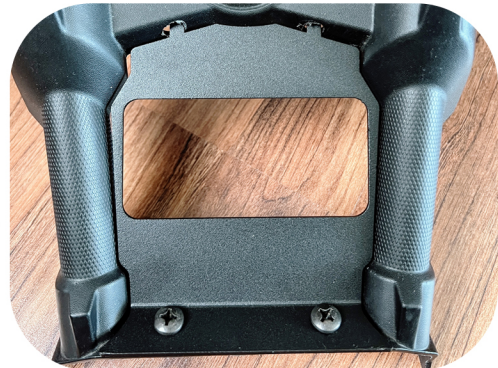

****Install tip****

Use a flat head screw driver. Heat up the tips and make your slots.

