

INSTALLING THE BRUA S2 PRESSURE GAUGE

Tools Required:



#4 Hex Key



10mm Wrench

5mm Wrench




REMOVE THE CYLINDER

Start by using a #4 Hex key to loosen the two screws holding the cylinder body to the stand.

REPLACE THE SCREW

Remove the lower M6 screw and replace it with the custom S2-P fitting with thread seal tape (shown), tightening hand-tight.

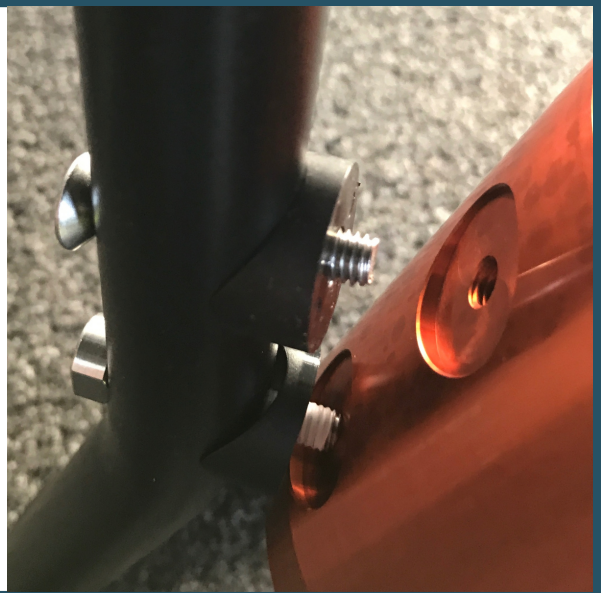


FIT THE BRACKET

Position the gauge bracket as shown and alternate between tightening the top & bottom screws until the cylinder and bracket are firmly secured.

ATTACH THE PRESSURE FITTING

WARNING:
Do not over-tighten!

Over-tightening the elbow fitting will cause breakage.

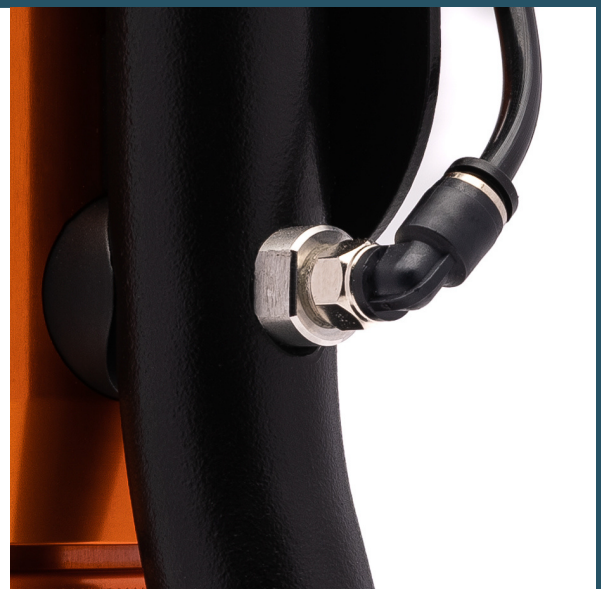

CONNECT THE TUBE

Connect the pressure tube by pressing it firmly into each connector.