

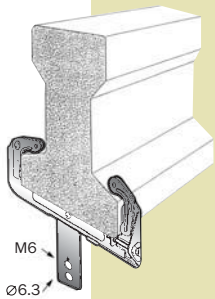


**SOPORTE PARA VIGAS DE HORMIGÓN - SUPPORT POUR POUTRE EN BETÓN  
CONCRETE BEAM SUPPORT - STÜTZE FÜR BETONBALKEN**


**MONTAJE - MONTAGE - INSTALLATION - MONTAGE:**

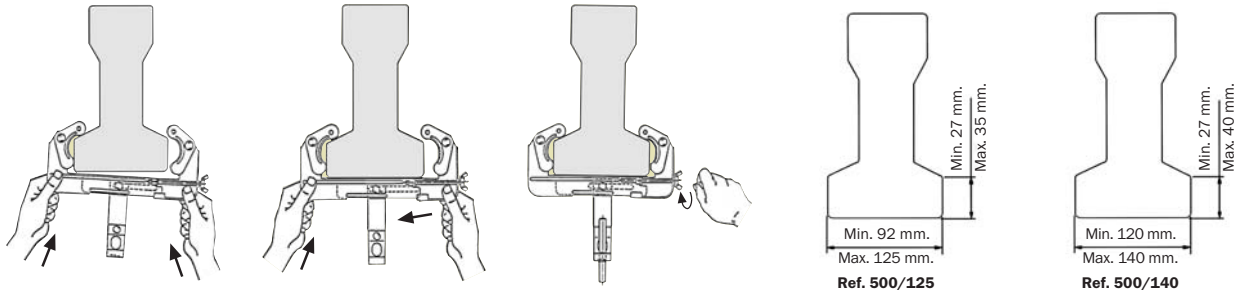


Kg.		Cód.	Ref.
90	50	10013267	500/125
90	50	10013282	500/140

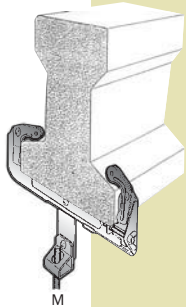

M	Kg.		Cód.	Ref.
M6	70	50	10013268	500-210/125
M6	70	50	10013283	500-210/140
M8	70	50	10013269	500-211/125
M8	70	50	10013284	500-211/140
M10	70	50	10013270	500-212/125
M10	70	50	10013285	500-212/140

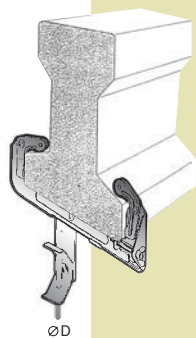

ØD mm.	Kg.		Cód.	Ref.
4	60	100	10013271	500-220/125
4	60	100	10013286	500-220/140
6	60	100	10013272	500-221/125
6	60	100	10013287	500-221/140

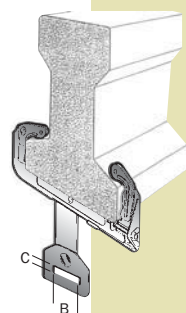

B x C	Kg.		Cód.	Ref.
28 x 6'5	45	50	10013273	500-230/125
28 x 6'5	45	50	10013288	500-230/140